PROCENTEC

# User Manual

# COMbricks

## Monitoring, Networking and Control

PROFIBUS data hub for repeaters and fiber optic modules
Transparent for all PROFIBUS DP protocols
ProfiTrace for monitoring 4 networks
Drives 32 modules (10 communication modules)
Hot swap
Powerful web server
100 Mbps Ethernet
12 Mbps PROFIBUS
DIN-rail
IP 20

Version 5.4.0 – June 2014

PROCENTEC

**Copyright © 2014 PROCENTEC**
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the publisher.

COMbricks is a registered trademark of PROCENTEC. Other products or company names are or may be registered trademarks and are the property of their respective companies.

**Safety Guidelines**
This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning sign and are marked as follows according to the level of danger:

Draws your attention to important information on handling the product, a particular part of the documentation or the correct functioning of the product.

**Warning**
This device and its components may only be used for the applications described in this manual and only in connection with devices or components that comply with PROFIBUS and RS 485 interface. This product can only function correctly and safely if it is transported, stored, set up, installed, operated and maintained as recommended. COMbricks is a CE class A product. In a domestic environment it may cause radio interference in which case the user may be required to take adequate measures.

**Warranty**
Warranty is void if you open COMbricks.

**Qualified Technicians**
Only qualified technicians should be allowed to install and work with this equipment. Qualified technicians are defined as persons who are authorized to commission, to ground, to tag circuits and systems in accordance with established safety practices and standards. It is recommended that the technicians carry a Certified PROFIBUS Installer or Certified PROFIBUS Engineer certificate.

**Disclaimer of Liability**
We have checked the contents of this manual as much as possible. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the content in this manual is reviewed regularly and necessary corrections will be included in subsequent editions. Suggestions for improvements are welcome.

**PROCENTEC**
**Klopperman 16**
**2292 JD WATERINGEN**
**The Netherlands**

**Tel.: +31-174-671800**
**Fax: +31-174-671801**
**Email: info@procentec.com**
**Web: www.procentec.com**

# User Manual

# COMbricks

## Monitoring, Networking and Control

PROFIBUS data hub for repeaters and fiber optic modules
Transparent for all PROFIBUS DP protocols
ProfiTrace for monitoring 4 networks
Drives 32 modules (10 communication modules)
Hot swap
Powerful web server
100 Mbps Ethernet
12 Mbps PROFIBUS
DIN-rail
IP 20



© PROCENTEC 2014 - Copyright - all rights reserved

**Copyright © 2014 PROCENTEC**
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the publisher.

COMbricks is a registered trademark of PROCENTEC. Other products or company names are or may be registered trademarks and are the property of their respective companies.

**Safety Guidelines**
This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning sign and are marked as follows according to the level of danger:

Draws your attention to important information on handling the product, a particular part of the documentation or the correct functioning of the product.

**Warning**
This device and its components may only be used for the applications described in this manual and only in connection with devices or components that comply with PROFIBUS and RS 485 interface.
This product can only function correctly and safely if it is transported, stored, set up, installed, operated and maintained as recommended. COMbricks is a CE class A product. In a domestic environment it may cause radio interference in which case the user may be required to take adequate measures.

**Warranty**
Warranty is void if you open COMbricks.

**Qualified Technicians**
Only qualified technicians should be allowed to install and work with this equipment. Qualified technicians are defined as persons who are authorized to commission, to ground, to tag circuits and systems in accordance with established safety practices and standards. It is recommended that the technicians carry a Certified PROFIBUS Installer or Certified PROFIBUS Engineer certificate.

**Disclaimer of Liability**
We have checked the contents of this manual as much as possible. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the content in this manual is reviewed regularly and necessary corrections will be included in subsequent editions. Suggestions for improvements are welcome.

**PROCENTEC**
**Klopperman 16**
**2292 JD WATERINGEN**
**The Netherlands**

**Tel.: +31-174-671800**
**Fax: +31-174-671801**
**Email: info@procentec.com**
**Web: www.procentec.com**


© PROCENTEC 2014 - Copyright - all rights reserved

# Important Information

**Purpose of the Manual**
This user manual provides information how to work with COMbricks.

**Recycling and Disposal**
The parts of the COMbricks can be recycled. For further information about environment-friendly recycling and the procedure for disposing of your old equipment, please contact:

PROCENTEC
Klopperman 16
2292 JD WATERINGEN
The Netherlands

Tel.: +31-174-671800
Fax: +31-174-671801
Email: info@procentec.com

**Document Updates**
You can obtain constantly updated information on PROCENTEC products on the Internet at www.procentec.com
You can also contact PROCENTEC Customer Support:
• By phone at +31-174-671800
• By fax at +31-174-671801
• By email at support@procentec.com


© PROCENTEC 2014 - Copyright - all rights reserved

# Contents

**Contents** ..... **4**

**1 Product description** ..... **10**
1.1 Introduction ..... 10
1.2 Application areas ..... 10
1.3 Product features ..... 11
1.4 Modular PROFIBUS repeaters ..... 12
1.4.1 Cable Redundancy ..... 13
1.4.2 Comparison between ProfiHub and COMbricks ..... 14
1.4.3 Typical applications ..... 14
1.5 ProfiTrace OE - Remote monitoring in a web browser ..... 15
1.5.1 Web server ..... 15
1.5.2 Email ..... 16
1.5.3 Channel List ..... 16
1.5.4 Comparison between COMbricks and ProfiTrace 2 ..... 16
1.5.5 Offshore applications ..... 17
1.5.6 Mining applications ..... 17
1.5.7 Robot cells ..... 18
1.5.8 Logistics ..... 18
1.5.9 Traffic control ..... 19
1.5.10 Cranes ..... 19
1.5.11 Other applications ..... 20
1.6 Output control ..... 20
1.7 CommDTM ..... 21

**2 Quick start** ..... **22**
2.1 Quick start checklist ..... 22
2.2 Prepare the backplane ..... 23
2.3 Insert modules ..... 23
2.4 Configure the repeater modules ..... 23
2.5 Wire the repeater modules ..... 23
2.6 Power the Head Station ..... 23
2.7 Customizing the IP number through the web server ..... 23
2.8 Customizing the IP number through the Discovery Tool ..... 25
2.9 Checking the modules and the administrative info in the web server ..... 26
2.10 Testing ProfiTrace OE on the PROFIBUS installation ..... 27
2.11 Resetting the Head Station ..... 28

**3 Installation instructions** ..... **29**
3.1 Location ..... 29
3.2 Position ..... 29
3.3 Mounting and un-mounting backplane units ..... 29
3.4 Adding backplane units ..... 30
3.5 Detaching backplane units ..... 31
3.6 Inserting modules ..... 32
3.7 Removing modules ..... 33
3.8 Wiring Ethernet ..... 34
3.9 Power Supply ..... 35
3.9.1 Procedure ..... 35


© PROCENTEC 2014 - Copyright - all rights reserved

3.9.2 Testing and commissioning ..... 35
3.10 Configuring repeater modules ..... 37
3.10.1 Customizing the PROFIBUS network (NW0/NW1) ..... 37
3.10.2 Redundancy (RED) ..... 37
3.10.3 Hardware or software settings (H/S) ..... 38
3.11 Wiring repeater modules ..... 39
3.11.1 Screw terminals ..... 39
3.11.2 DB9 connector ..... 40
3.11.3 Testing and commissioning ..... 40

**4 Web server ..... 41**
4.1 Status ..... 42
4.2 Channel list ..... 44
4.3 System log ..... 45
4.4 General configuration ..... 46
4.5 Network configuration ..... 47
4.6 Output Control ..... 48
4.7 Password setup and login ..... 49
4.7.1 Access rights ..... 49
4.7.2 Password best practice ..... 50
4.7.3 External protocols ..... 51
4.7.4 Clearing password(s) ..... 51
4.8 License update ..... 52
4.9 Document download page ..... 53
4.10 Email account config ..... 54
4.10.1 Alive email ..... 55
4.10.2 Troubleshooting ..... 56
4.11 Device Management ..... 57
4.11.1 Backup settings to SD-Card ..... 57
4.11.2 Restore settings from SD-Card ..... 58
4.11.3 Restore settings to factory defaults ..... 58
4.11.4 Clear all data ..... 58
4.11.5 Restart the device ..... 58

**5 ProfiTrace OE ..... 59**
5.1 Live List ..... 59
5.1.1 Updating the GSD file library ..... 60
5.2 Statistics ..... 61
5.3 Message recording ..... 62
5.4 Event configuration ..... 63
5.5 Tag name configuration ..... 64
5.6 Oscilloscope images ..... 65
5.7 Bar graph ..... 66
5.8 Streaming with ProfiTrace 2 ..... 67
5.9 Summary of Statistics and Events ..... 69

**6 Head Station 1A/1B/1C ..... 71**
6.1 Overview ..... 71
6.2 Relay contact ..... 72
6.3 SD card ..... 72
6.3.1 Inserting/replacing the SD card ..... 72
6.3.2 Life cycle of the SD card ..... 73
6.3.3 Directories and files ..... 73


© PROCENTEC 2014 - Copyright - all rights reserved

6.4 Audio jack ..... 74
6.5 Switch navigation of the Head Station 1A/1B/1C ..... 75
6.6 LEDs on the Head Station ..... 76

**7 Repeater modules (RS 485) ..... 78**
7.1 Multiple channels per module ..... 79
7.2 Channel structure ..... 79
7.3 EMC barrier ..... 80
7.4 Grounding system ..... 81
7.5 Baudrate detection ..... 81
7.6 PROFIBUS DP cable lengths ..... 81
7.7 PROFIBUS DP cable specifications ..... 82
7.8 PROFIBUS DP cable types ..... 82
7.9 Redundancy ..... 83
7.10 Mixing with other repeaters ..... 84
7.11 LEDs of the repeater module ..... 85

**8 RS 485-IS Barrier module ..... 86**
8.1 Compliancy and certificates ..... 87
8.2 Channel structure ..... 88
8.3 Connecting the cable ..... 88
8.4 Grounding system ..... 88
8.5 Baudrate detection ..... 89
8.6 PROFIBUS DP cable lengths ..... 89
8.7 PROFIBUS DP cable specifications ..... 89
8.8 LEDs and DIP switches of the repeater module ..... 90
8.9 Redundancy ..... 90

**9 Fiber optic module (FO) ..... 91**
9.1 Topologies ..... 91
9.1.1 Bus topology with COMbricks ..... 92
9.1.2 Star/Hub topology with COMbricks ..... 92
9.2 Delay time ..... 92
9.3 Baudrate detection ..... 93
9.4 Fiber optic modules in redundancy mode ..... 93

**10 PROFIBUS Slave Module PBS-001 ..... 94**
10.1 Status LEDs ..... 94
10.1.1 RDY LED ..... 95
10.1.2 PROFIBUS LEDs ..... 95
10.1.3 Dipswitches ..... 95
10.2 Quick Start checklist ..... 96
10.3 Setting up the slave module ..... 96
10.3.1 Hardware addressing ..... 97
10.3.2 Software addressing ..... 98
10.4 Remote I/O mode ..... 99
10.4.1 Strict Check Configuration ..... 100
10.4.2 Failsafe behaviour of outputs ..... 101
10.4.3 Input test patterns ..... 102
10.5 DP/DP coupling or Gateway mode ..... 103
10.6 PROFIBUS / PROFINET gateway ..... 104
10.7 Data consistency ..... 105
10.7.1 Consistency over 2 bytes ..... 106


© PROCENTEC 2014 - Copyright - all rights reserved

10.7.2 Consistency over 4 bytes ....106
10.7.3 Consistency over 8 bytes ....107

**11 PA Link/Coupler module ....108**
11.1 Quick Start checklist ....109
11.2 Monitoring mode ....110
11.2.1 Module status ....110
11.2.2 PA oscilloscope images ....111
11.2.3 PA Bar Graph ....111
11.2.4 PA measurements ....112
11.2.5 Oscilloscope configuration ....113
11.3 Link mode (module firmware v2.10.1 and higher only) ....114
11.3.1 Converting PA GSD files ....114
11.3.2 Link configuration – bus parameters ....114
11.4 Coupler mode ....115
11.4.1 Bus Parameters ....115
11.5 Physical layer ....116
11.5.1 Connecting a PA segment ....116
11.5.2 Cable specifications ....117
11.5.3 Spur lines ....117
11.5.4 Current consumption calculations ....117
11.5.5 Voltage at the end of the segment ....118

**12 PROFINET Device PND-001 ....119**
12.1 Topologies ....119
12.2 Status LEDs ....120
12.2.1 RDY LED ....120
12.2.2 PROFINET LEDs ....120
12.3 Quick Start checklist ....121
12.4 Identification and name assignment ....121
12.4.1 MAC address ....121
12.4.2 Assigning a custom name ....121
12.4.3 Assigning a pre-defined name ....122
12.5 Remote I/O mode ....122
12.6 PN/PN coupling or Proxy mode ....123
12.7 PROFINET / PROFIBUS proxy ....125

**13 CommDTM ....126**
13.1 Installing drivers, CommDTM and server ....126
13.2 Setting up the PCD server ....126
13.3 Using the CommDTM ....127

**14 Firmware updates ....129**
14.1 Updating the Head Station ....129
14.2 Updating modules ....131

**15 Tips and Tricks ....132**
15.1 Ident Number lookup ....132
15.2 Solution for secured email connections ....132
15.3 IP address adjustment tool ....132
15.4 Free Wi-Fi channel detector ....132
15.5 Some SNMP tools ....132


© PROCENTEC 2014 - Copyright - all rights reserved

16 Technical Data - COMbricks in general ..... 133
17 Technical Data - Head Station 1A/1B/1C ..... 134
18 Technical Data - SCOPE Repeater (101-201210) ..... 136
19 Technical Data - 2 Channel Repeater (101-201102) ..... 138
20 Technical Data - 1 Channel Repeater (101-201101) ..... 140
21 Technical Data - Fiber Optic Module (101-201510) ..... 142
22 Technical Data - SALT Repeater (101-201710) ..... 144
23 Technical Data - PA Module (101-201610) ..... 146
24 Technical Data - 4 CH Relay Module (101-210210) ..... 148
25 Technical Data - 8 CH D-out Module (101-210110) ..... 149
26 Technical Data - 8 CH D-in Module (101-210010) ..... 150
27 Technical Data – RS 485-IS Barrier (101-201410) ..... 151
28 Technical Data - PROFIBUS Slave Module PBS-001 ..... 153
29 Technical Data – PROFINET Device PND001 ..... 155
30 Technical Data - 6A Power Module T1 (101-230010) ..... 157
31 Frequently asked questions / FAQ ..... 158
32 Sales offices and distributors ..... 162
33 Products and spare parts ..... 165
34 Glossary ..... 169
35 About PROCENTEC ..... 174
36 Certificates ..... 175
37 Revision history ..... 182


© PROCENTEC 2014 - Copyright - all rights reserved

38 Next versions ..... 183

39 Notes ..... 184


© PROCENTEC 2014 - Copyright - all rights reserved

# 1 Product description

## 1.1 Introduction

**COMbricks™ - The first PROFIBUS and PROFINET-based automation system that unites network components, permanent monitoring with ProfiTrace and remote I/O.**

COMbricks is a modular system that allows a mix of automation components on a backplane. Repeater modules can be inserted next to a PROFIBUS slave and at the same time, in a web browser over Ethernet, the condition of the installation can be remotely inspected with ProfiTrace OE.

## 1.2 Application areas

- ✓ Remote maintenance station with ProfiTrace OE
- ✓ Modular repeater backbone with hot swap
- ✓ Transparent data hub (repeaters, fiber optic, RS 485-IS, DP slave, PROFINET, etc.)

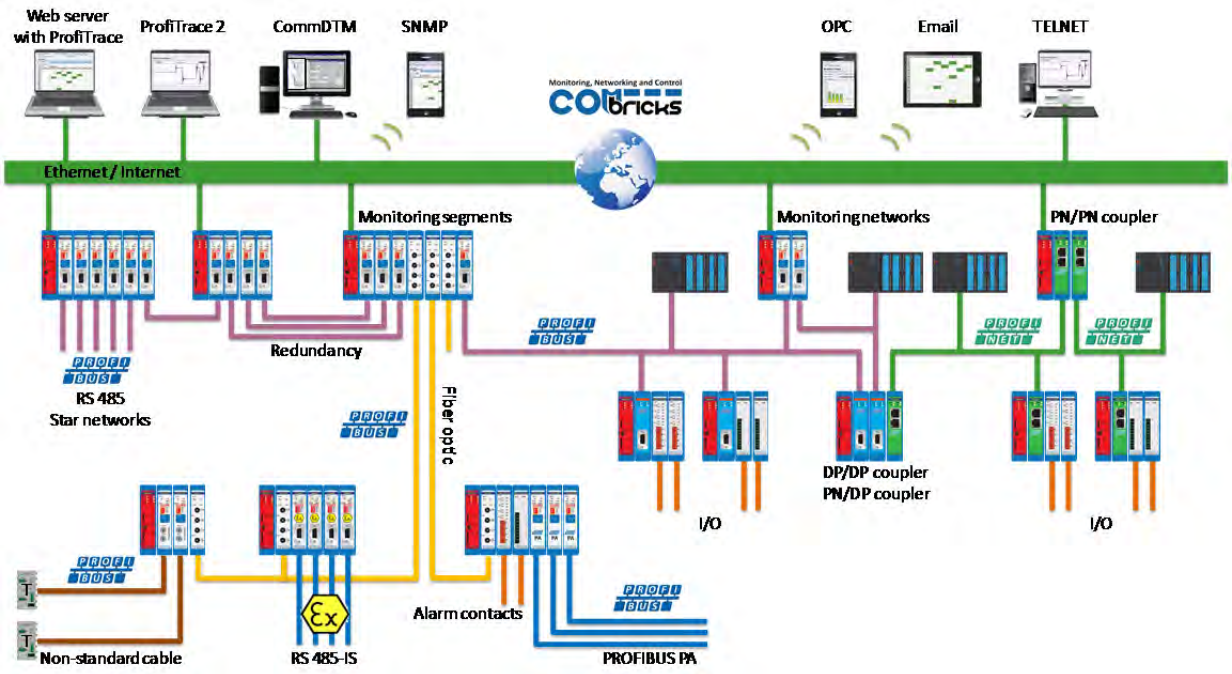




© PROCENTEC 2014 - Copyright - all rights reserved

## 1.3 Product features

- ✓ Drives 32 modules (10 high-speed modules)
- ✓ Wide range of modules available
- ✓ Hot swap and extendible
- ✓ Powerful web server
- ✓ ProfiTrace OE for monitoring 4 networks
- ✓ Multi-language
- ✓ DIN-rail mounting
- ✓ IP 20


© PROCENTEC 2014 - Copyright - all rights reserved

## 1.4 Modular PROFIBUS repeaters

The current trend in PROFIBUS projects is to use segmentation with repeaters, fiber optic and ProfiHubs to bridge the common faults of the end-user concerning his cabling difficulties. COMbricks adds another important element; the creation of modular and random repeater hubs which can be maintained remotely with a permanent internal ProfiTrace (see **Fig. 1**).

COMbricks is based on a backplane which can hold up to 10 hot swap repeater modules. Each module has one or two channels (so a total of max 20 galvanic isolated transparent segments). Every channel can handle 31 PROFIBUS stations and maximum 1200 m cable length (depends on the baudrate). **Fig. 2** illustrates some configurations.

Each channel has a fail-safe circuit which ensures that the remainder of the PROFIBUS network continues to operate correctly and that the availability of the installation remains optimal.

The connection of the bus cable allows for a high degree of flexibility as the repeater modules contain both a 9-pin and screw connector.

It is possible to dynamically exchange equipment during operation. COMbricks is ideal for flow meters, pH analysers, actuators, drives and especially motor control centres that make use of drawer systems.

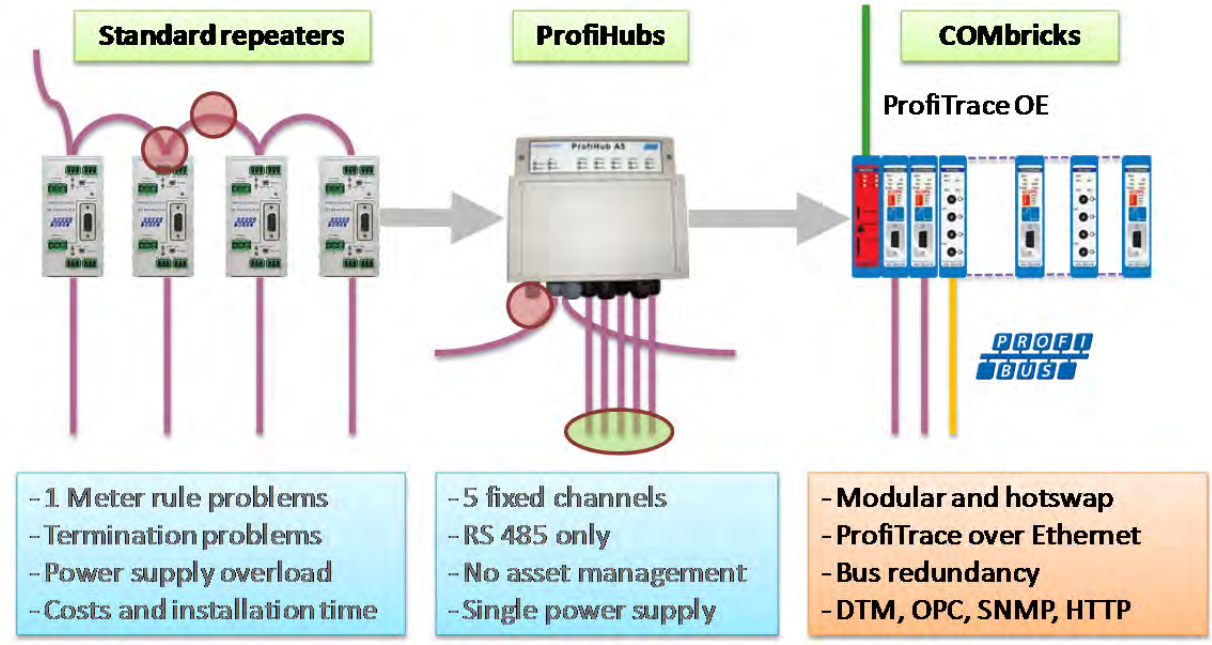


Fig. 1 - Latest trend in segmentation


© PROCENTEC 2014 - Copyright - all rights reserved

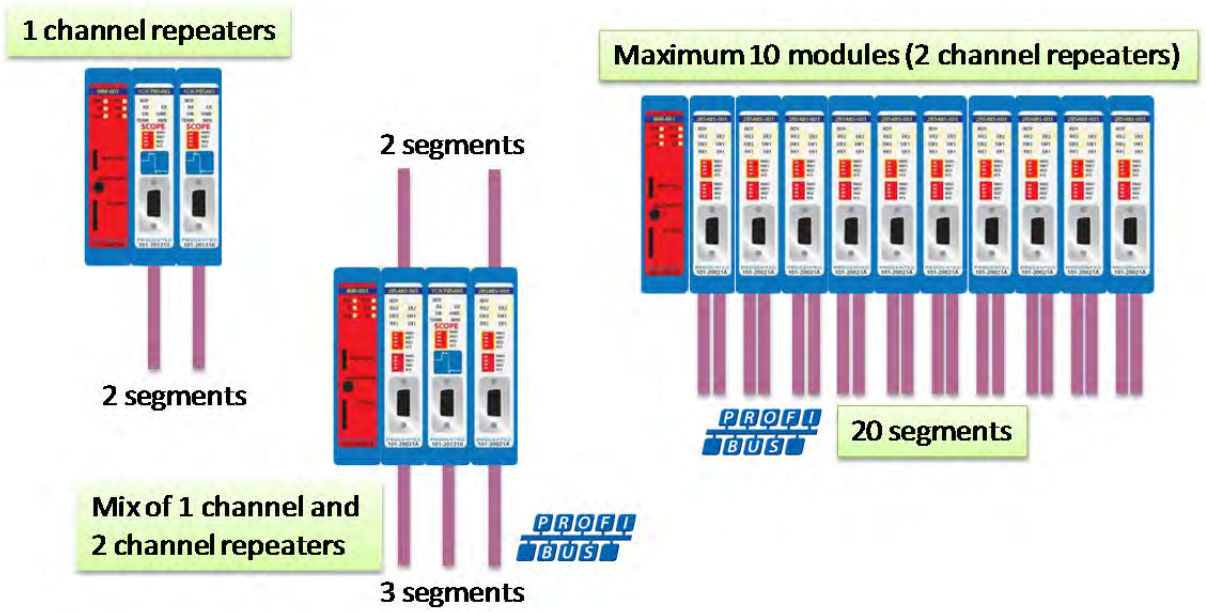


Fig. 2 - Repeater configuration examples

### 1.4.1 Cable Redundancy

The bus redundancy technology of the repeater modules is very advanced. A redundant system can be built using 10 parallel cables. This architecture provides extremely high availability. Most suppliers only allow 2 cables (see **Fig. 3**).

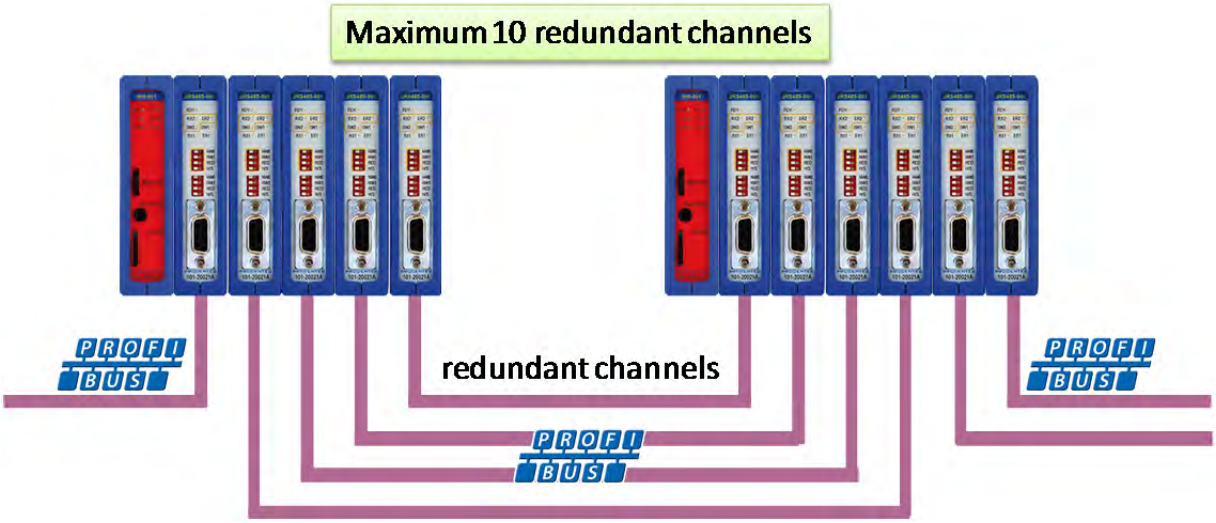


Fig. 3 - Redundancy configuration example


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.4.2 Comparison between ProfiHub and COMbricks

| ProfiHub A5 and B5 (simple) | COMbricks (flexible and high-tech) |
|---|---|
| **- One component**<br>**- PROFIBUS**<br>**- RS 485 only**<br>**- Easy installation**<br>**- IP 65 version**<br>**- Low cost** | - Modular<br>- Multi interface<br>- Multi network<br>- ProfiTrace OE<br>- Asset management<br>- Light weight |

### 1.4.3 Typical applications

- Repeaters with permanent ProfiTrace
- Removable drives and motors
- Star, tree and bus structured networks
- Motor control centers (drawers)
- Redundancy for high availability
- EMC vulnerable applications
- Spur lines
- Isolator for sensitive devices


© PROCENTEC 2014 - Copyright - all rights reserved

## 1.5 ProfiTrace OE - Remote monitoring in a web browser

Permanent and simultaneous monitoring of 4 PROFIBUS networks is a powerful feature of COMbricks. Global projects and a shortage of (qualified) technical staff members are causing significant capacity problems. COMbricks offers a solution by remotely monitoring PROFIBUS installations over the Internet and alerting the user by email.

The user can simply connect surrounding PROFIBUS networks and every network can be set to a unique baudrate. The modular technology of COMbricks enables the network to be monitored when multiple repeater modules are installed. All transparent messages from the backplane are constantly analysed.

Up to 10 Repeater modules with 2 channels each (20 galvanic isolated segments in total) can be inserted into the backplane. Using DIP switches or the web server, repeater modules can be assigned to a network group. This ensures isolated communication from the repeaters which are assigned to other network groups; the networks are not combined or connected in any way. Only the Head Station can see all networks groups.

### 1.5.1 Web server

A web server with a ProfiTrace shell visualizes the information in an understandable format (ProfiTrace OE). Because of the web browser, additional software is NOT required and a constant connection with a PC to the COMbricks is NOT necessary.

The monitoring and logging is performed by the repeater modules which are inserted in the backplane. COMbricks is the first system that has integrated a busmonitor in network components. Deploying COMbricks repeaters for regular automation means automatic availability of ProfiTrace OE.


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.5.2 Email

Email messages provide real-time alerts in the event of detected faults in the PROFIBUS communication. These email alerts are easy to set up in the web server.

### 1.5.3 Channel List

A brand new functionality within ProfiTrace OE is the Channel List. It gives a detailed overview of all repeater channels (segments) and all connected stations.

### 1.5.4 Comparison between COMbricks and ProfiTrace 2

The application area for COMbricks (ProfiTrace OE) compared to ProfiTrace 2 is completely different. ProfiTrace OE should be seen as a watchdog and ProfiTrace 2 as the mobile analyzer to do on-site work.

| **ProfiTrace 2 (*troubleshooting on-site*)** | **COMbricks (*watchdog*)** |
|---|---|
| **- USB (power supply)**<br>**- Mobile**<br>**- Software**<br><br>**- C1 Master**<br>**- Triggers and filters**<br>**- Large file recording**<br>**- Reporting**<br>**- Fast** | - Ethernet / Internet<br>- Permanent installation<br>- Web server<br><br>- Multi network monitor<br>- Multi access<br>- Email and Log |


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.5.5 Offshore applications

With satellite internet offshore PROFIBUS networks can be remotely monitored. Emails can inform the mainland about the status of the installation.

These applications simplify maintenance and eliminate the hassle to fly an expert over to fix a possible problem.

On the LAN local technicians can also monitor the networks.

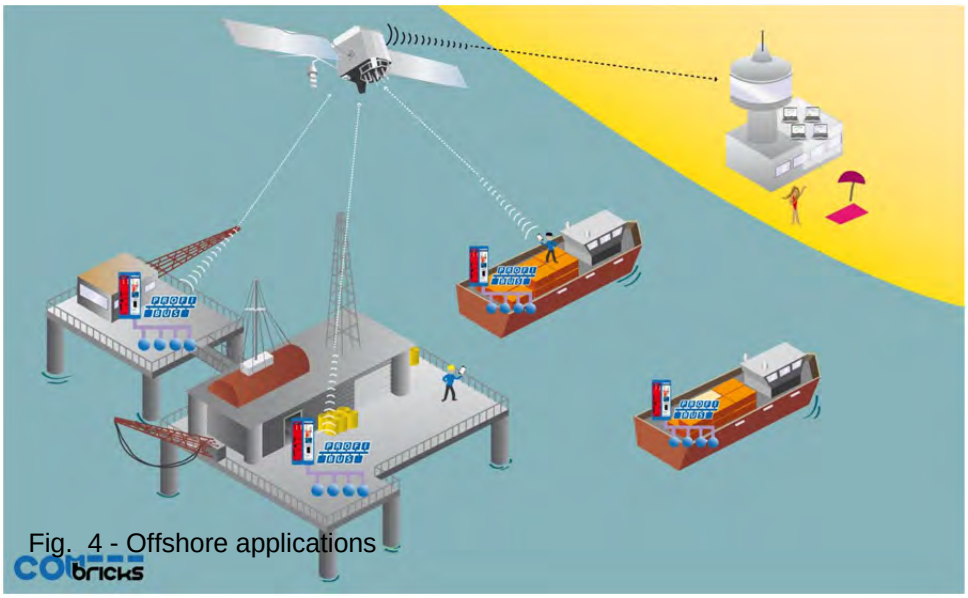

Fig. 4 - Offshore applications

### 1.5.6 Mining applications

Because of the depth, gasses and inaccessible areas, COMbricks is required to keep the control room and the experts on a distance to monitor the PROFIBUS installations.

Multiple WLAN routers can bring Ethernet up to the surface.

With DTM technology the devices can also be diagnosed and parameterized.

Fig. 5 - Mining applications


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.5.7 Robot cells

Robot cells are hazardous environments with many safety zones. Crossing a safety border can cause a machine shutdown and restarting can take a long time. Measuring PROFIBUS remotely decreases costs and improves human safety.

Fig. 6 - Robot cells

### 1.5.8 Logistics

In demanding high-speed applications, COMbricks is ideal. The technician does not have to touch the installation and can measure the network from a distance. This is also convenient if the installation is behind a high-security zone such as baggage handling systems at airports, or parcel handling systems.

Fig. 7 - Baggage handling or parcel systems


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.5.9 Traffic control

When distance and downtime are critical factors, COMbricks can be very helpful. Difficult to reach speed indicators above the highway can be monitored from the road-side control cabinet, or even from the control room.

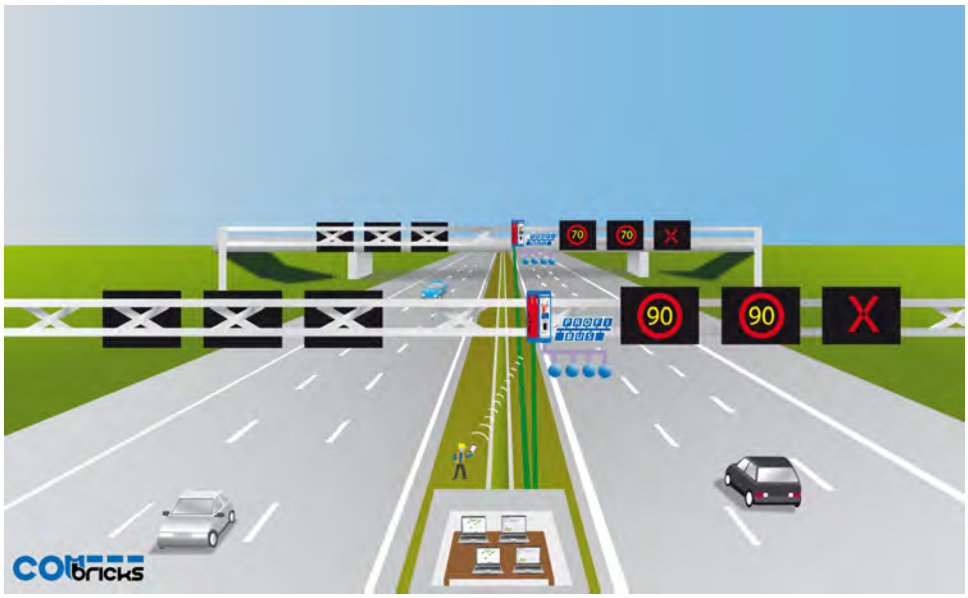


Fig. 8 - Traffic control applications

### 1.5.10 Cranes

Many harbour cranes use PROFIBUS. There cranes are huge and sometimes hard to reach. The whole crane can be monitored remotely, which is especially useful if the crane is equipped with a WIFI connection.

Fig. 9 - Crane applications


© PROCENTEC 2014 - Copyright - all rights reserved

### 1.5.11 Other applications

- Cross border installations
- Water treatment
- Long commissioning and test cycles
- 24-7 service contracts

## 1.6 Output control

Relay- and digital output modules can be configured to respond directly to bus problems, such as bus voltage too low, retries, syncs, master lost, diagnostics, etc.

This offers a multitude of applications to directly and independently act on the machinery when the bus communication becomes unreliable. Especially when safety, human lives or the environment are at stake.

Power switches, hold switches, indicators, backup systems and LED towers are a few examples of machine parts that can be hooked up to the relays. COMbricks is the only monitoring product that has the capability to respond directly on the hardware with multiple relays.

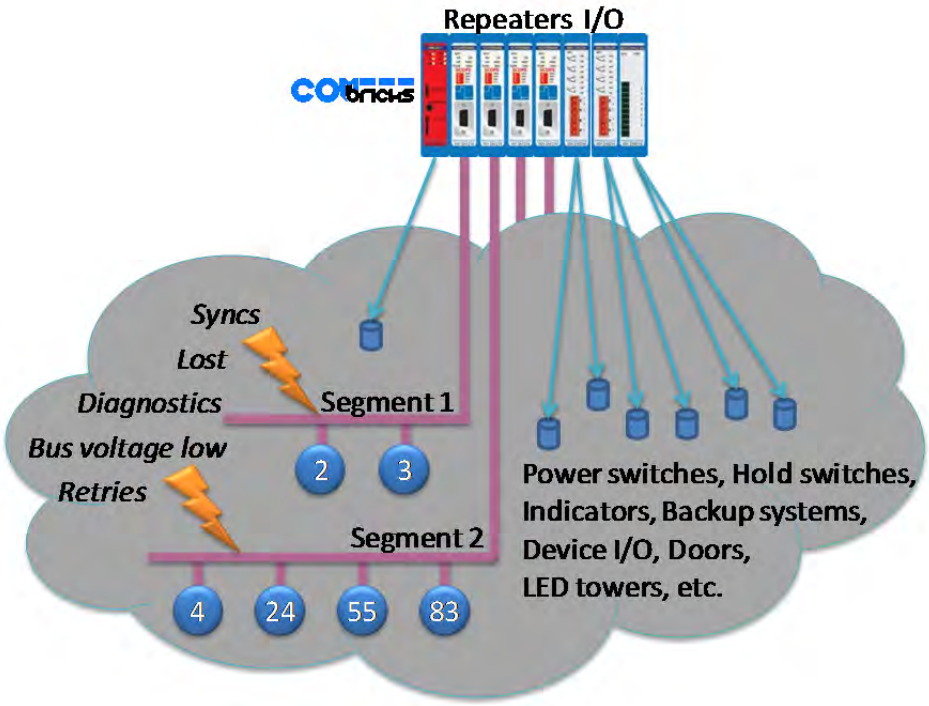


Fig. 10 - Output control

- The Head Station already contains 1 relay.
- The relays can also be configured to be switched manually or on time.


© PROCENTEC 2014 - Copyright - all rights reserved

## 1.7 CommDTM

The FREE COMbricks CommDTM offers FDT 1.2 based asset management tools a powerful Ethernet pass-through to access PROFIBUS devices which are connected on COMbricks repeater modules.

The internal DP-V1 class 2 masters are able to drive 2 out of 4 networks. When a CommDTM connection is closed, the user can enter another network. The 2 active networks are managed by 1 or 2 PC Ethernet connections.

The CommDTM provides the same auto baudrate detection facilities as the famous ProfiCaptain. It detects all busparameters before it goes online. An available master address is required.

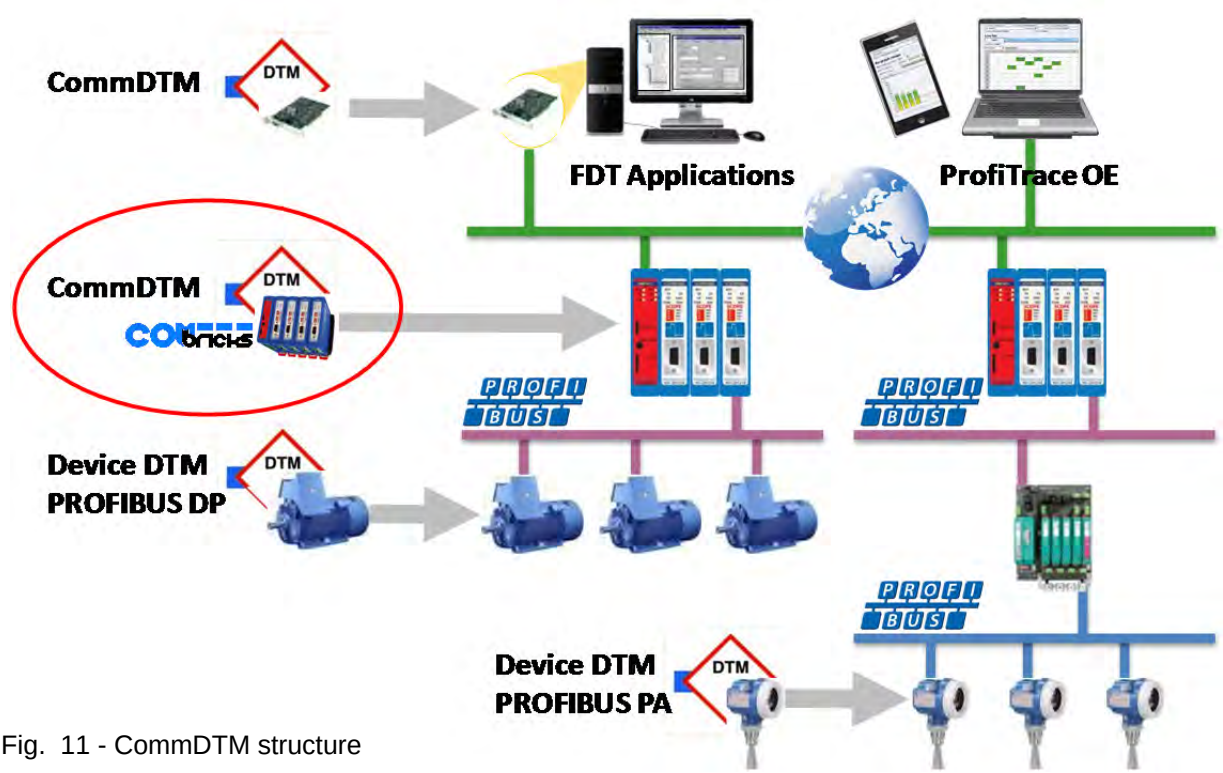


Fig. 11 - CommDTM structure


© PROCENTEC 2014 - Copyright - all rights reserved

# 2 Quick start

## 2.1 Quick start checklist

This checklist lists all the steps to a quick usage of COMbricks.

| | | |
|---|---|---|
| **STEP 1:** | Provide the Head Station with the latest firmware. . | (**7**) |
| **STEP 2:** | Prepare the backplane with the amount of required backplane units. | (**2.2**) |
| **STEP 3:** | Click the assembled backplane on the DIN-rail. | (**2.2**) |
| **STEP 4:** | Insert the Head Station in the most left slot. | (**2.3**) |
| **STEP 5:** | Insert the other modules in the remaining slots. | (**2.3**) |
| **STEP 6:** | Configure the repeater modules to their appropriate networks. | (**2.4**) |
| **STEP 7:** | Wire the repeater modules with PROFIBUS cables. | (**2.5**) |
| **STEP 8:** | Power the Head Station. | (**2.6**) |

COMbricks units with Head Stations type 1A are now operational and no further steps have to be taken. For type 1B and 1C Head Stations proceed with the next steps.

| | | |
|---|---|---|
| **STEP 9:** | Insert an Ethernet cable in the Head Station. | |
| **STEP 10:** | Set the IP address to the required value. | (**2.7** + **2.8**) |

COMbricks units with Head Stations type 1B and 1C are now operational, ProfiTrace OE is autonomously logging PROFIBUS events. After these basic steps COMbricks can be further configured through the web server.

| | | |
|---|---|---|
| **STEP 11:** | Checking the modules and administrative info in the web server. | (**2.9**) |
| **STEP 12:** | Testing ProfiTrace OE on the PROFIBUS installation. | (**2.10**) |


© PROCENTEC 2014 - Copyright - all rights reserved

## 2.2 Prepare the backplane

Click the fixed backplane on the DIN-rail and add additional backplane units to the right side if required (see **Paragraph 3.3** and **3.4**).

## 2.3 Insert modules

Insert the required modules in the slots of the fixed backplane (see **Paragraph 3.6**). The Head Station with the red front plate should be placed in the most left slot (with the large connector). Place the other modules in the remaining slots. The slots have a polarity and can only be inserted one way.

## 2.4 Configure the repeater modules

Configure the repeater modules to their appropriate networks. This can be done with the dipswitches located at the front of the module (see **Paragraph 3.10.1**) or with the software settings in the web server (see P**aragraph 4.5**).

## 2.5 Wire the repeater modules

Connect the PROFIBUS cables to the repeater modules (see **Paragraph 3.11**).

## 2.6 Power the Head Station

Provide a 24 VDC power supply to the Head Station through one of its 2 power connectors (see **Paragraph 3.8**).

## 2.7 Customizing the IP number through the web server

The default IP address of the Head Station is **192.168.1.254**. Follow the steps below to customize the IP address of the Head Station:

| | |
|---|---|
| **STEP 1:** | Insert an Ethernet cable in the Head Station which is connected to the enterprise LAN or directly to the PC. |
| **STEP 2:** | Make sure the IP address of your PC is on the same subnet as the switch (192.168.1.xxx). |
| **STEP 3:** | Open your web browser and enter 192.168.1.254 in the address field. This is the default IP address of the COMbricks. |
| **STEP 4:** | The web server of the COMbricks will appear. |
| **STEP 5:** | Click in the menu on the left on "IP config". |
| **STEP 6:** | Update the IP settings and confirm it by clicking on "Save" (see **Fig. 12**). |
| **STEP 7:** | The web page will now reload with the new IP address. |


© PROCENTEC 2014 - Copyright - all rights reserved

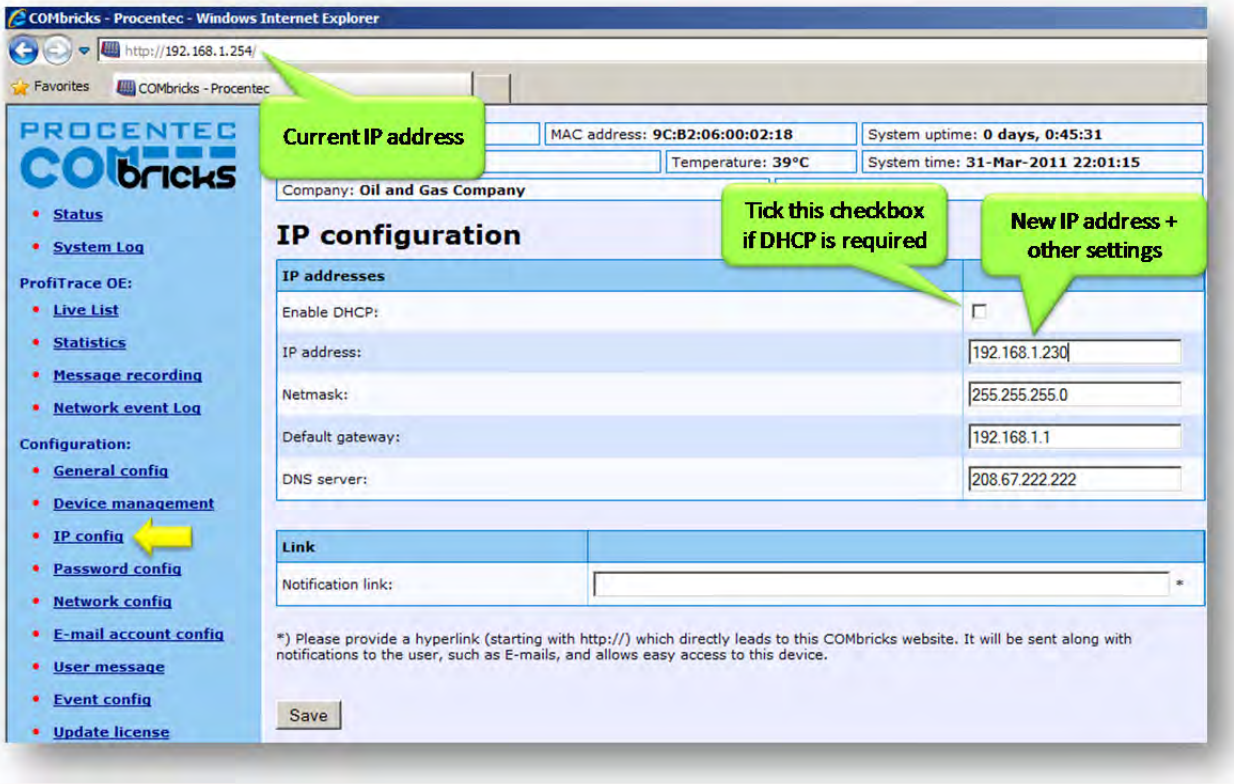


Fig. 12 - Customizing the IP address in the web server

The Notification link name is included in the event emails so that the user can directly jump to the specific COMbricks unit without knowing its local IP number. An example is: www.boiler5.oag.com. The router of the network or the internet server has to reroute this name to an IP number.


© PROCENTEC 2014 - Copyright - all rights reserved

## 2.8 Customizing the IP number through the Discovery Tool

The COMbricks Discovery Tool can be downloaded from **www.combricks.com**.

After start-up all the available COMbricks units can be discovered and directly customized with the required IP address (see **Fig. 13**).

The Discovery Tool works on an enterprise LAN, WLAN and with a direct cable between COMbricks and PC.

If you are not sure which COMbricks you are customizing, the LEDs can be flashed with a button in the Discovery tool (flashing). The LEDs will blink for 5 seconds to give the user a visual confirmation.

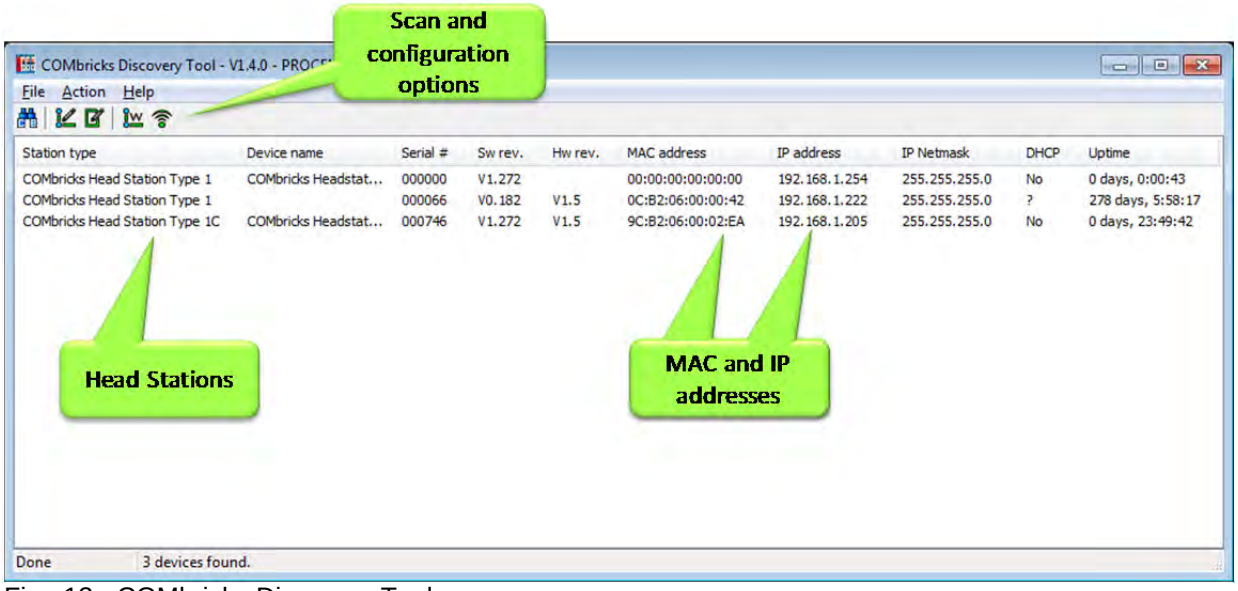

Fig. 13 - COMbricks Discovery Tool

It is recommended to have only one network interface connection active (only wireless or only wired). In some cases the Discovery tool does not list all the COMbricks units when multiple network interfaces are active.


© PROCENTEC 2014 - Copyright - all rights reserved

## 2.9 Checking the modules and the administrative info in the web server

After customizing the IP address, the modules can be checked in the web server. Click on "Status" to see an overview of the available modules and their respective description + version numbers (see **Fig. 14**).

Modules can be inserted and removed during operation. A change in hardware should be directly visible in the Status screen.

On the top of the screen the administrative info is also visible (see **Fig. 14**). If the administrative information has to be altered, it can be done by clicking on "General config".

On the bottom of the screen the connected clients with this COMbricks are displayed.
All connections are listed here:

- Web connections
- FTP connections
- CommDTM connections
- Telnet connections
- ProfiTrace Streaming connections

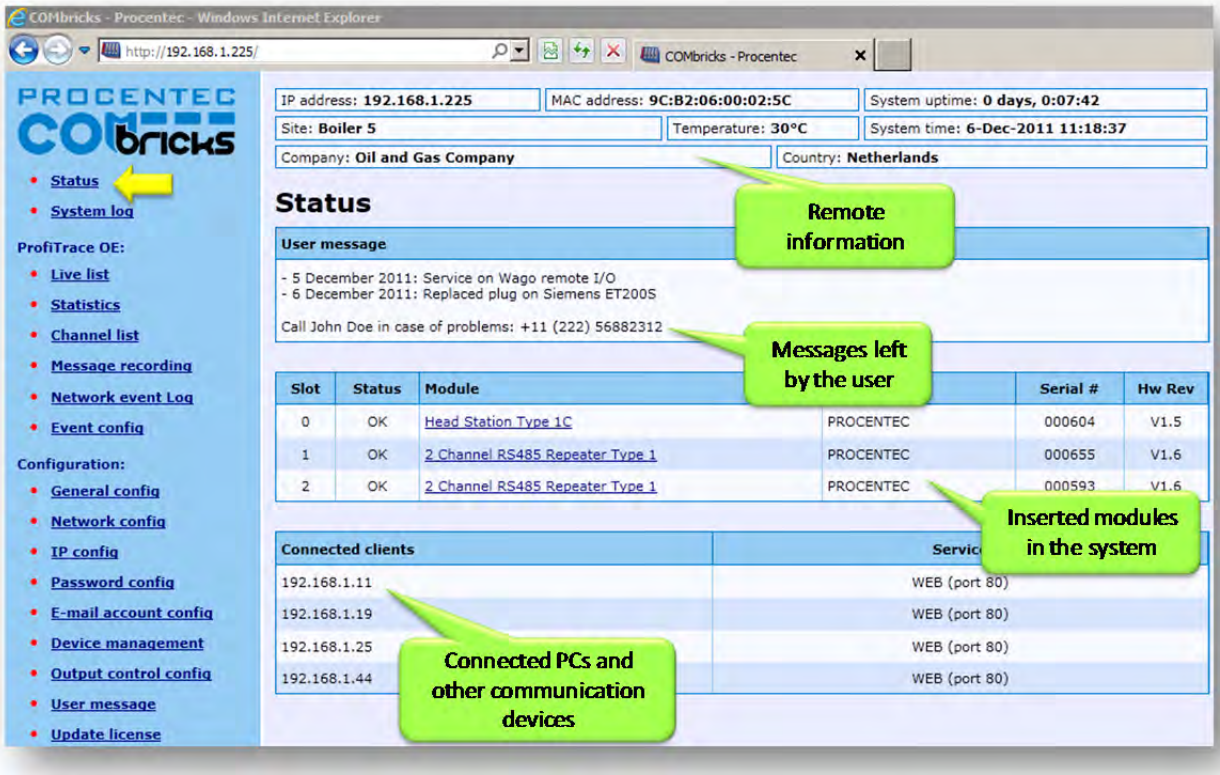


Fig. 14 - Overview of the available modules


© PROCENTEC 2014 - Copyright - all rights reserved

## 2.10 Testing ProfiTrace OE on the PROFIBUS installation

When the repeaters are wired to the PROFIBUS installation, ProfiTrace OE can be tested in the web server.

Click on "Live List" and the respective networks. A Live List with devices should appear (see **Fig. 15**).

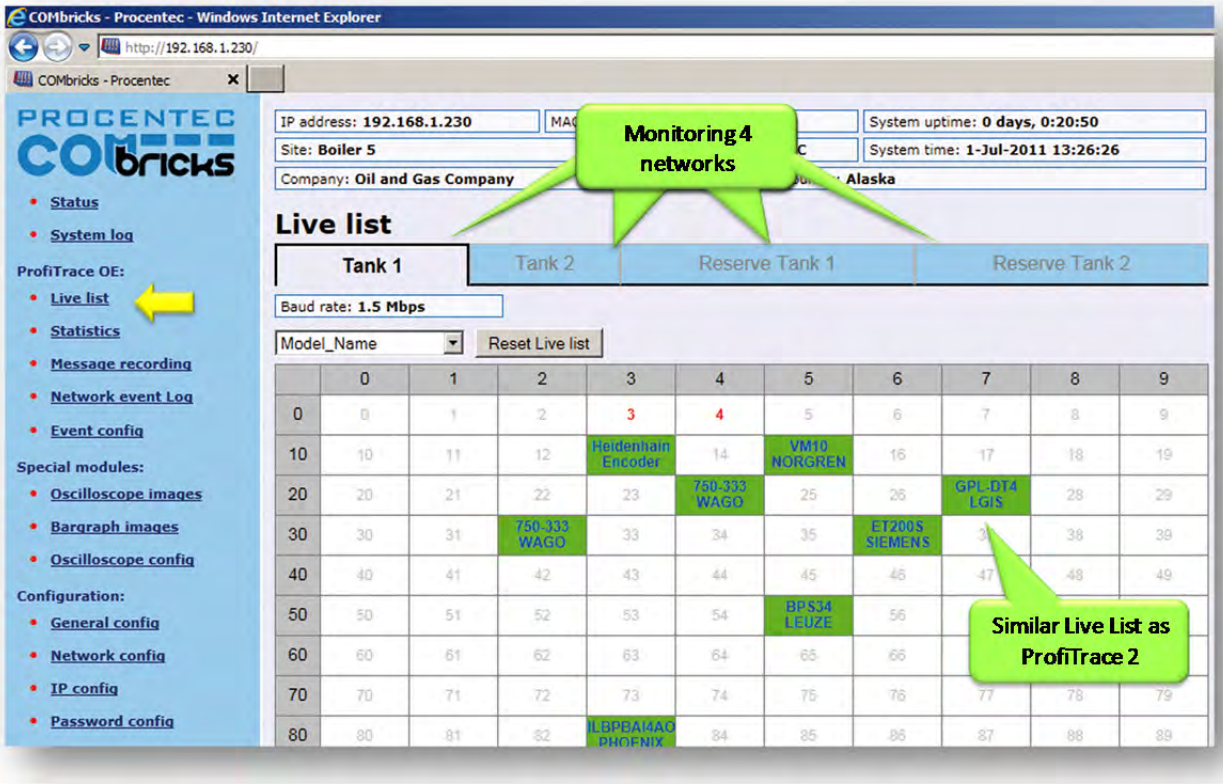


Fig. 15 - ProfiTrace OE Live List

See **Chapter 5** for more information on how to use ProfiTrace OE.


© PROCENTEC 2014 - Copyright - all rights reserved

## 2.11 Resetting the Head Station

By means of the "Menu Nav" switch on the front of the Head Station (see **Fig. 16**), COMbricks can be reset, warm started or loaded with configuration data. Please follow the procedure described in **Paragraph 6.5**.

The following selections are possible:

- Read settings from SD card
- Save settings on SD card
- Clear password
- **Reset to factory defaults**
- Warm start

Fig. 16 - Menu-switch


© PROCENTEC 2014 - Copyright - all rights reserved

# 3 Installation instructions

## 3.1 Location

COMbricks can be installed everywhere in a non-hazardous area that complies with IP 20 (DIN 40 050) and the specified temperature range of 0..60 $^{o}$ Celsius.

## 3.2 Position

COMbricks can be installed in every position, but it is recommended to install it with the cables pointing down. In this position it is also easier to read the status LEDs.

## 3.3 Mounting and un-mounting backplane units

The backplane of the COMbricks has to be mounted on 35 mm DIN-rail with a minimum width of 50 mm to fit a fixed backplane for 2 modules.

**Fig. 17** illustrates how to mount and dismount the backplane on and from the DIN-rail. For the un-mounting an appropriate screwdriver is required.

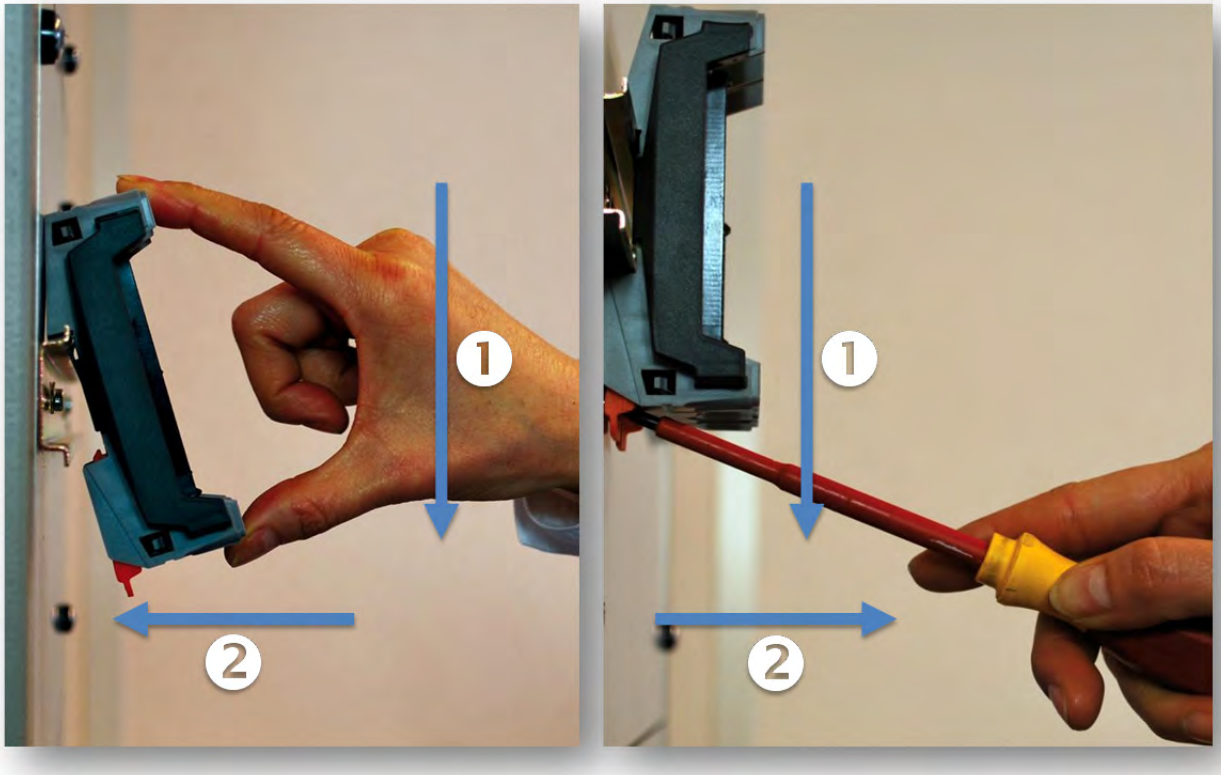


Fig. 17 - Mounting (pull-down + push) Un-mounting (click tap + pull)


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.4 Adding backplane units

The additional backplane units as described in **Paragraph 3.3**. To merge them remove the plastic covers on the side of the backplane units that have to be merged. Push both backplane units together until no more movement is possible (see **Fig. 18**).

Do not add or remove backplane units while the backplane is powered!
This can cause serious damage to the COMbricks set.

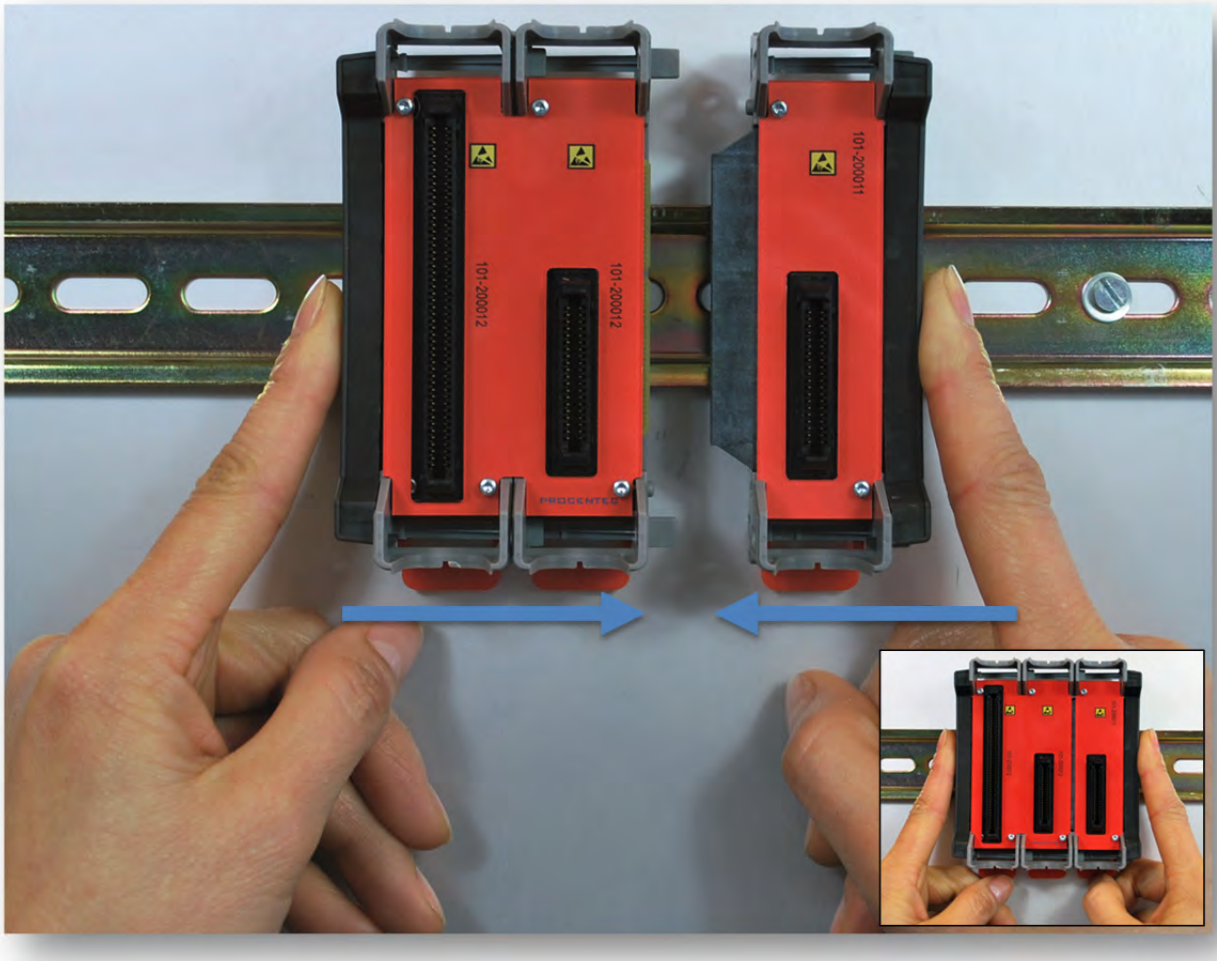


Fig. 18 - Adding backplane units


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.5 Detaching backplane units

Detaching backplane units is a delicate procedure that should be done according the description below and **Fig. 19** in order to prevent damages.

Do not add or remove backplane units while the backplane is powered!
This can cause serious damage to the COMbricks set.

**STEP 1:** Push the top arm down with a screwdriver and delicately pull the top of the backplane unit that has to be removed. The arm should now be unlocked.

**STEP 2:** Push the bottom arm down with a screwdriver and delicately slide the bottom of the backplane that has to be removed. The arm should now be unlocked.

**STEP 3:** Slide the backplane unit away from the section that remains.

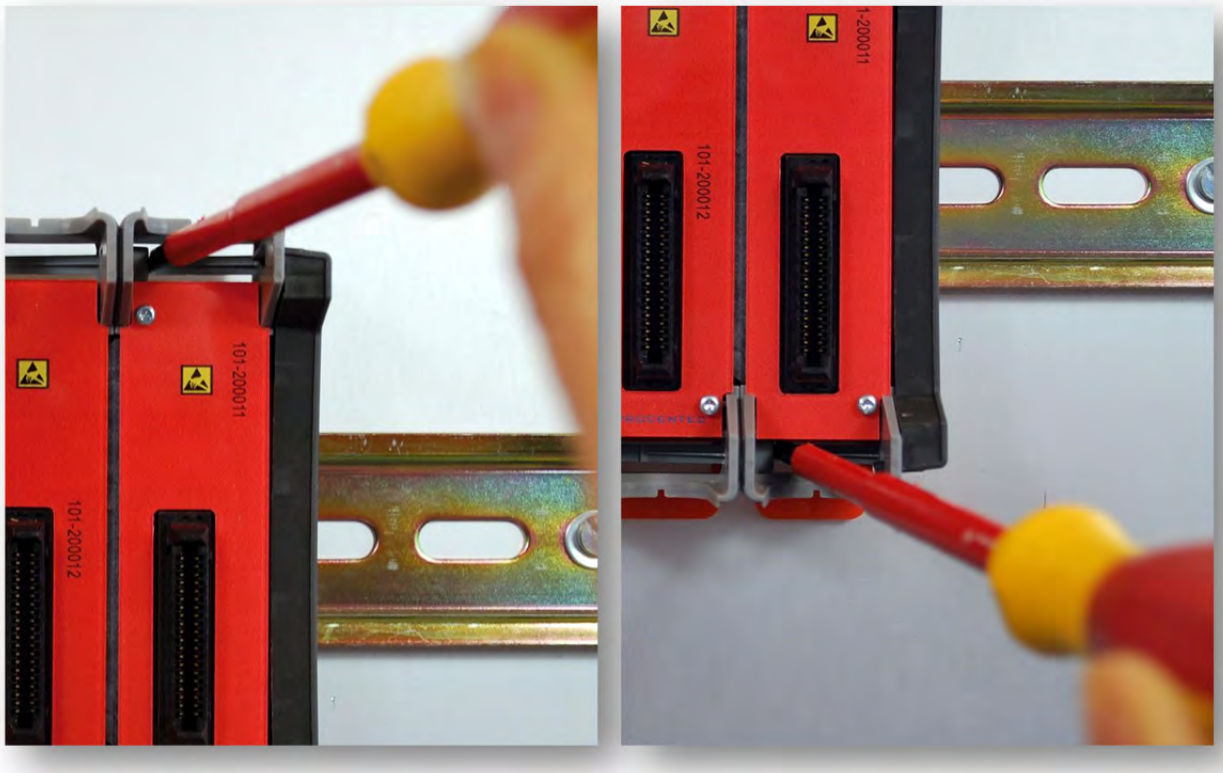


Fig. 19 - Detaching backplane units


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.6 Inserting modules

Push and click the modules in the slots of the backplane (see **Fig. 20**).

The Head Station (with the red front plate) should be placed in the most left slot (with the largest connector) and the other modules in the remaining slots.

When the modules are inserted the correct way, a sharp clicking sound should be heard during the push.

Modules can be inserted during operation.

The slots have a polarity and fit only one way.

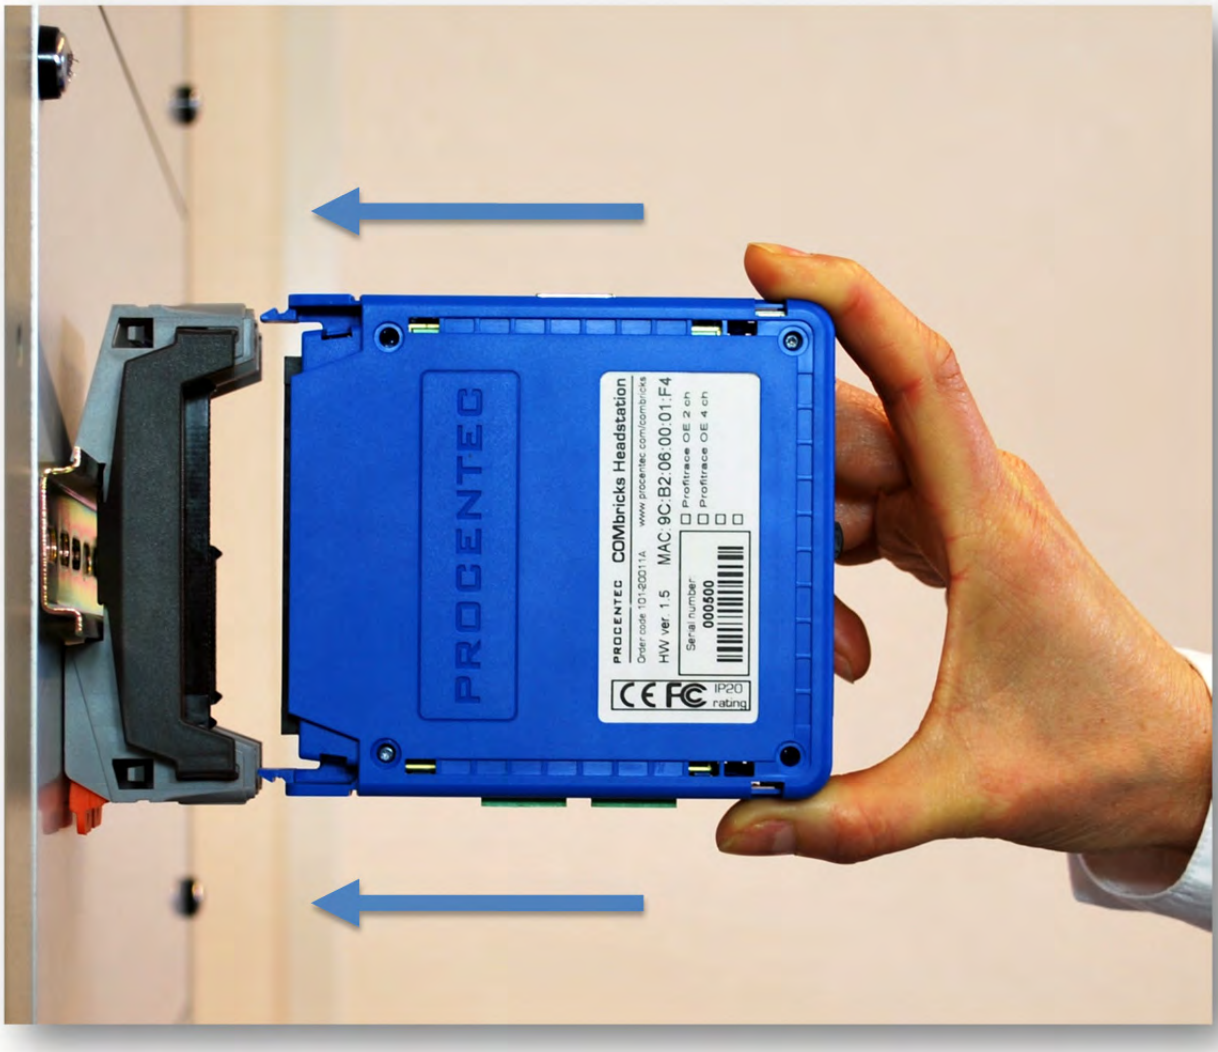


Fig. 20 - Inserting modules


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.7 Removing modules

To remove a module press the keys on both sides of the module (this has to be done with 2 hands). When both keys are pressed, pull the module out of the slot (see **Fig. 21**).

Modules can be removed during operation.

1 Slot between 2 modules can remain empty when modules are removed during operation. Modules at the end of the backplane can always be removed (1-by-1).

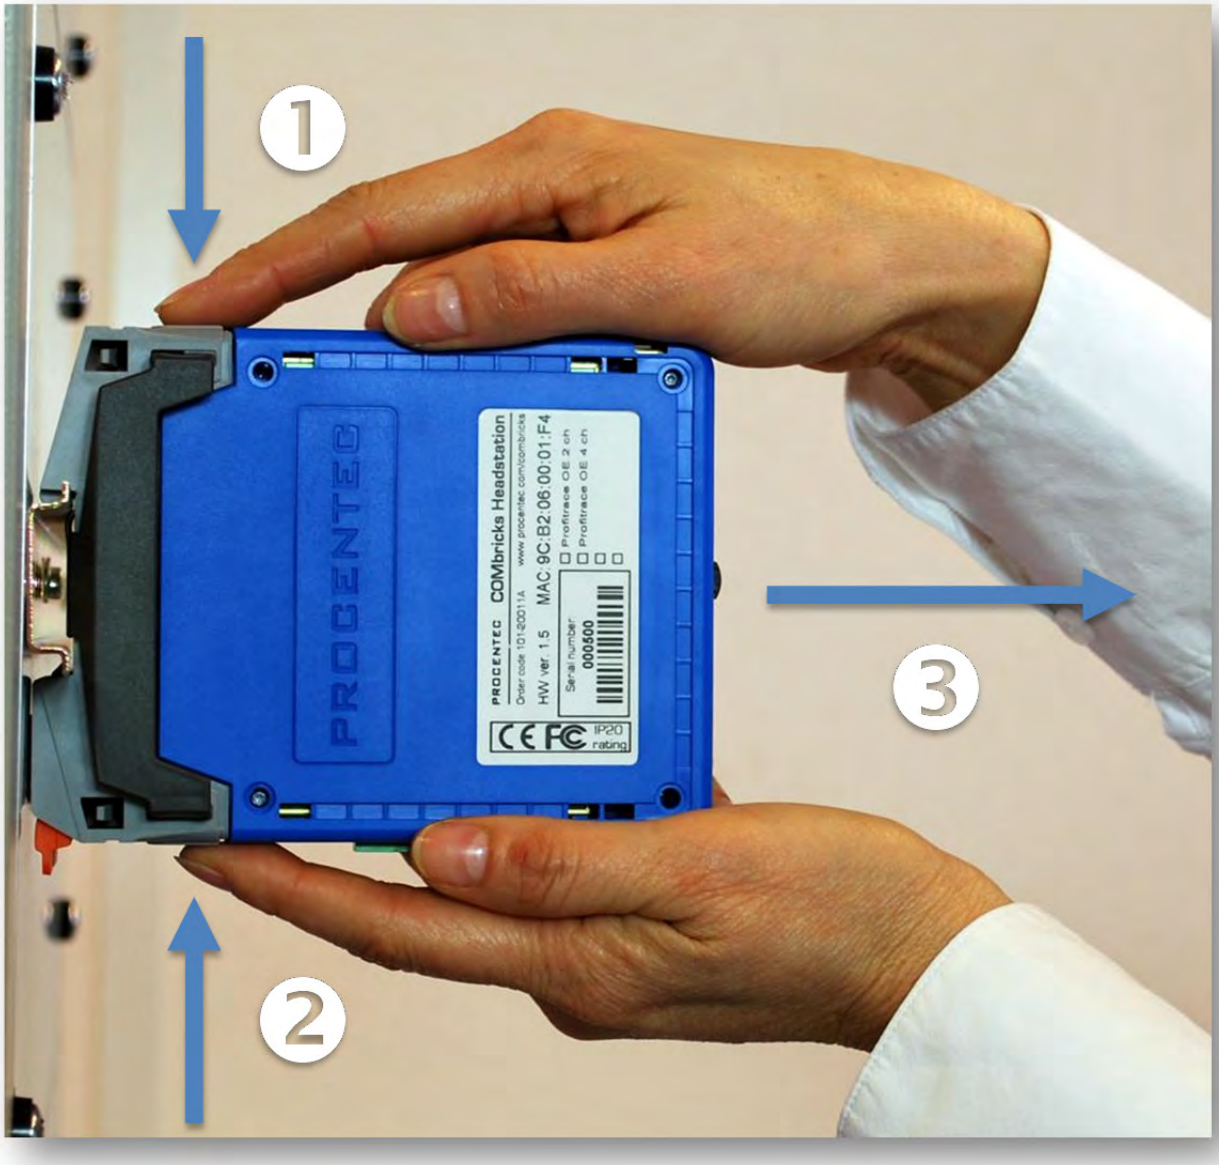


Fig. 21 - Removing modules


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.8 Wiring Ethernet

The Ethernet connector is located on the top-side of the Head Station. The connector contains LEDs that indicate linkup (green) and reception of data (orange).

It is recommended to use a cable/RJ45 plug with grounding/foil due to the nature of industrial applications.

The Ethernet interface complies with standard Ethernet guidelines. The maximum cable length from COMbricks to switch/device is 100 meter.

The MAC address is printed on the side of the Head Station.

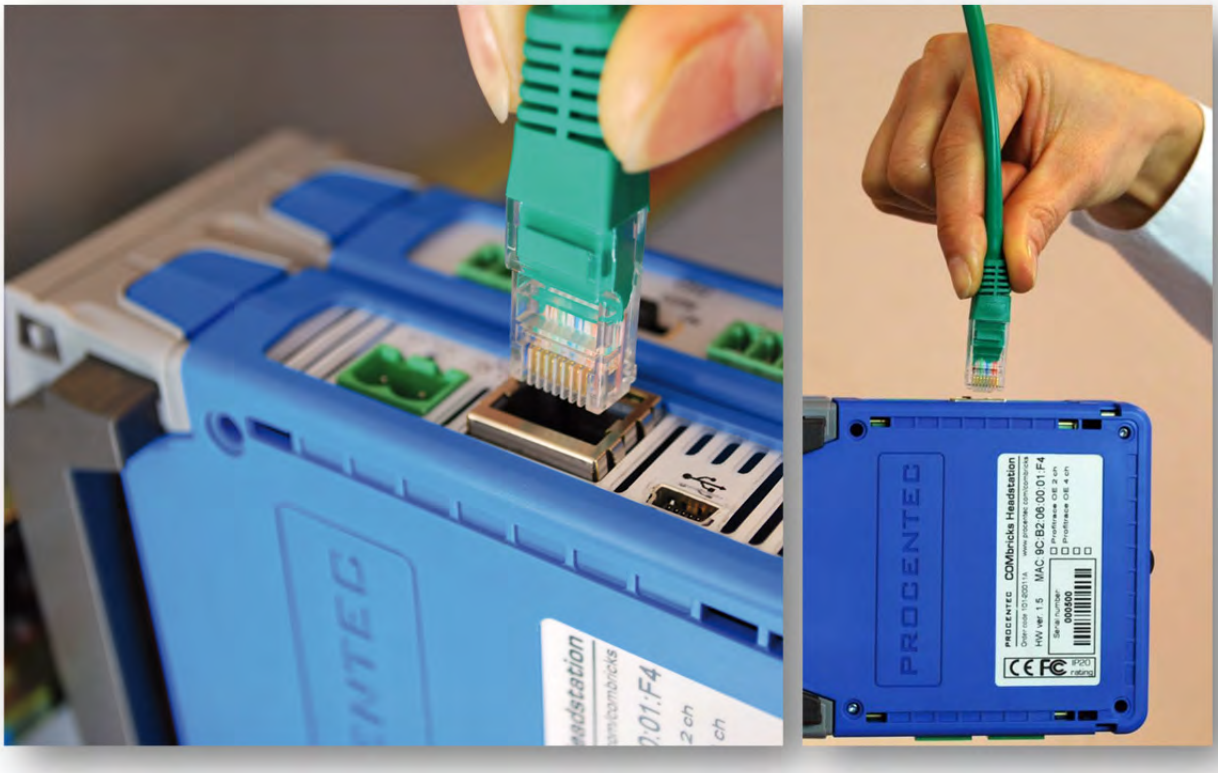


Fig. 22 - Wiring Ethernet


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.9 Power Supply

The Head Station contains two 3-pin screw type power connectors on the bottom. If power redundancy is NOT required, either one can be used.

The layout is as follows (when the wires are pointing down):

1 = **-** (left)

2 = **+** (middle)

3 = **SH** (right)

The power supply must comply with the following specifications:

- Voltage: **10.8 .. 26.4 VDC**
- Current: **Min. 800 mA**
- Wire diameter: **< 2.5 mm$^2$**

### 3.9.1 Procedure

To connect the 24 VDC supply to the 3-pin screw-type terminal, proceed as follows:

| | |
|---|---|
| **STEP 1:** | Strip the insulation of the conductors of the 24 VDC power supply. |
| **STEP 2:** | Secure the conductors in the screw-type terminal. |
| **STEP 3:** | Insert the entire connector block in the power socket (see **Fig. 23**). |

To connect the power supply a 3 mm screwdriver is required.

### 3.9.2 Testing and commissioning

If the power is switched ON it can be diagnosed by the following indicator procedure:

- ❑ All LEDs on the Head Station should be shortly ON.
- ❑ The RDY LED should be shortly Blinking.
- ❑ The SD LED should be ON (if an SD card is inserted).
- ❑ The RDY LED should be ON (also on other inserted Modules).


© PROCENTEC 2014 - Copyright - all rights reserved

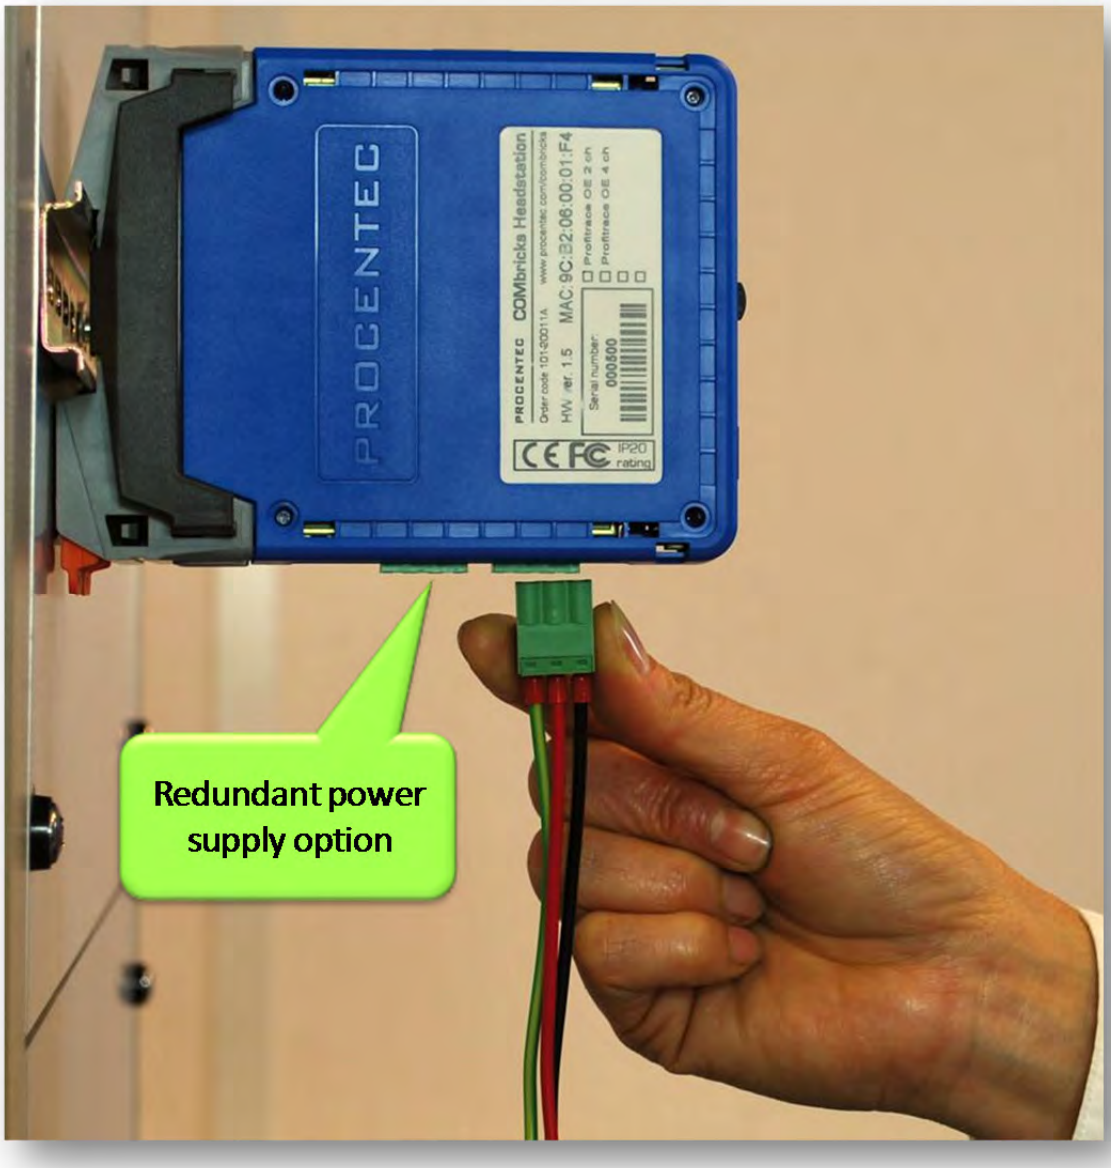


Fig. 23 - Head Station power supply


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.10 Configuring repeater modules

The repeaters can be configured using the dipswitches located at the front of the module or the web server.

### 3.10.1 Customizing the PROFIBUS network (NW0/NW1)

Set these dipswitches to the following positions to customize a network number for a specific PROFIBUS network.

| NW0 | NW1 | Network |
|---|---|---|
| **LEFT** | LEFT | 1 |
| **RIGHT** | LEFT | 2 |
| **LEFT** | RIGHT | 3 |
| **RIGHT** | RIGHT | 4 |

When software settings are preferred these dipswitches do not have to be set.

### 3.10.2 Redundancy (RED)

Set this dipswitch to enable the redundancy group for the channel.

| RED | Redundancy |
|---|---|
| **LEFT** | OFF |
| **RIGHT** | ON |

When software settings are preferred this dipswitch does not have to be set.


© PROCENTEC 2014 - Copyright - all rights reserved

### 3.10.3 Hardware or software settings (H/S)

Set this switch to enable hardware (dipswitches) or software settings.

| H/S | Settings |
|---|---|
| **LEFT** | Hardware |
| **RIGHT** | Software |

When software is enabled, all switch settings are overruled. The settings are saved in the internal memory of the Head Station.

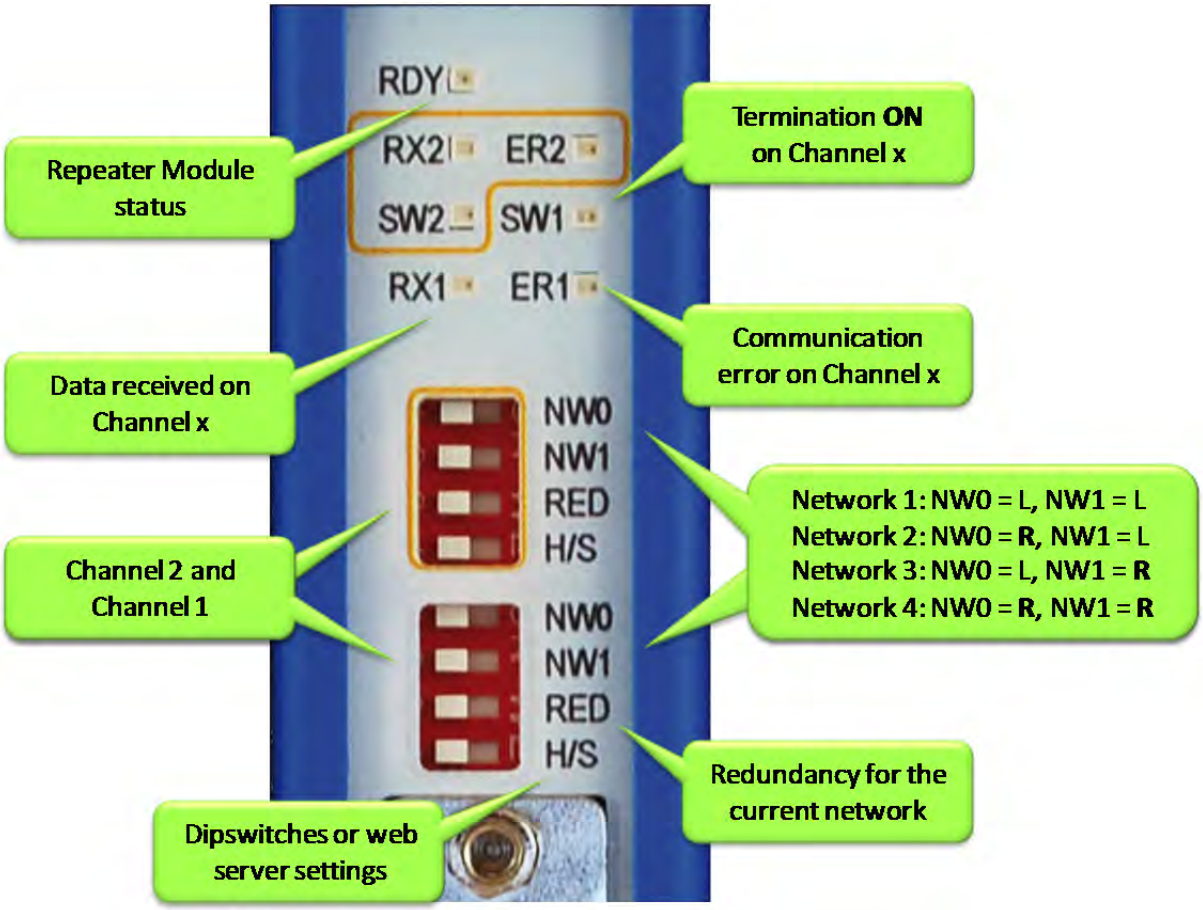


Fig. 24 - Dipswitches and LEDs of the repeaters


© PROCENTEC 2014 - Copyright - all rights reserved

## 3.11 Wiring repeater modules

The PROFIBUS cable should be wired to the repeaters according to the PROFIBUS guidelines with suitable cable for the application you are using.

Regular and SCOPE repeater modules are equipped with screw terminals and a DB9 connector for the bus connection. Both are linked with each other, but it is not recommended to use them both[1].

**Fig. 25** illustrates 4 recommended connection topologies for the repeater modules.

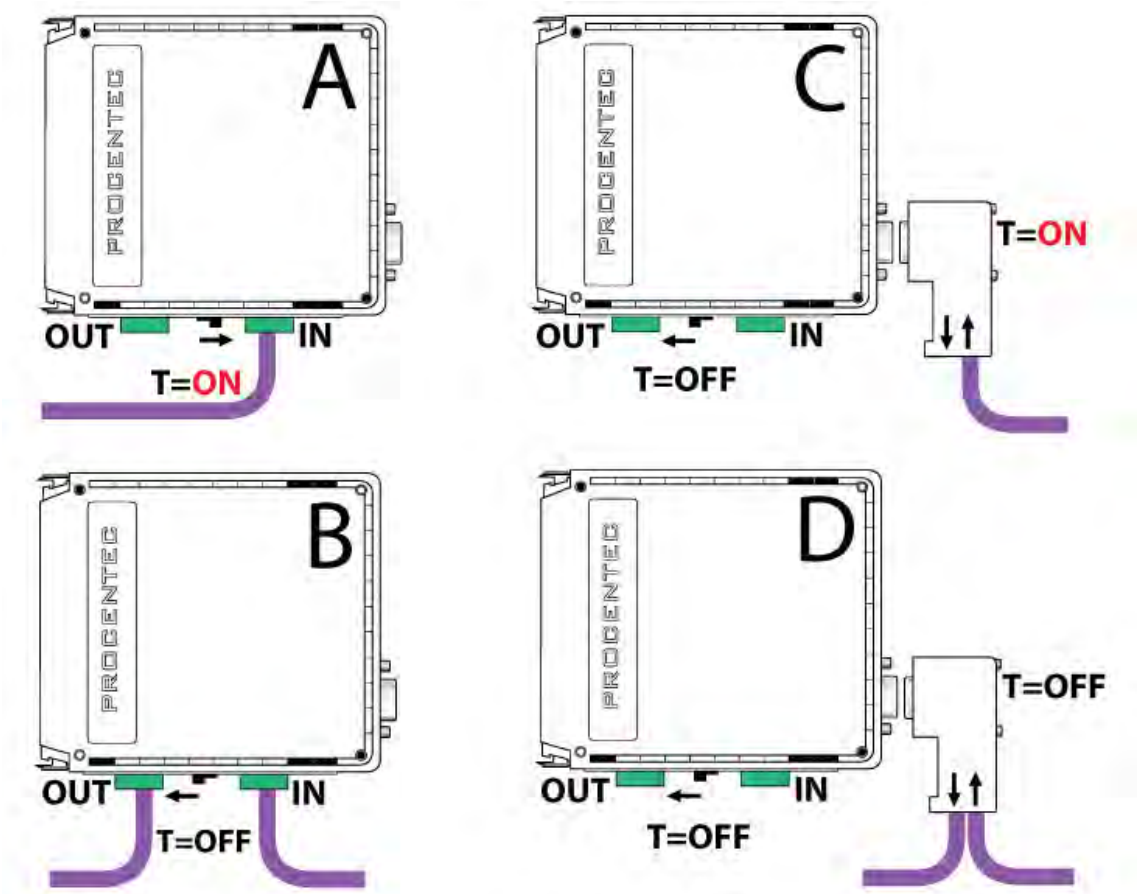


Fig. 25 - Repeater connection topologies

### 3.11.1 Screw terminals

- With a 1 channel repeater module, the channel is marked CH1.
- With a 2 channel repeater module, the channels are marked CH1 and CH2.

The channels (CHx) have 2 screw terminals (IN and OUT, for the bus connection) and a termination switch.

[1] Because of the PROFIBUS spur lines limitations it is not recommended to use the screw terminal simultaneously with the DB9 connector.


© PROCENTEC 2014 - Copyright - all rights reserved

Always use the 'IN' connector when the repeater module is the first or last on the segment. The termination should be set to ON (see **Fig. 25 - configuration A**).

Only in configuration A the on-board termination should be set to ON. In configurations B and D the repeater module is in the middle of the segment (OFF).

Pin layout of the screw terminals
Pin "A": Green wire
Pin "B": Red wire
Pin "SH": Cable shielding OR
Pin "I": Cable shielding

### 3.11.2 DB9 connector

The bottom channel (CH1) is additionally equipped with a DB9 connector to offer an alternative connector for standard 9-pin PROFIBUS plugs (1-on-1 with the screw terminals).

When the DB9 connector is utilized and located at the end of the segment, it is recommended to use the termination on the DB9 connector and NOT on the repeater module (see **Fig. 25 - configuration C**)[2]

To connect the PROFIBUS cable to the repeater modules (screw terminals) a 2.5 mm screwdriver (max. 0.4 mm) is required.

### 3.11.3 Testing and commissioning

If the channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX LED of this channel should be blinking and ER should be OFF.

When the termination of a specific channels is set to ON, the SWx LED should be ON.

[2] The plug is the best place to activate the termination! When you remove the connector from the module you still have the termination in the plug which is attached to the bus cable. It is true that the termination is not powered by 5V (which is always required), but better an unpowered termination than nothing at all.


© PROCENTEC 2014 - Copyright - all rights reserved

# 4 Web server

**To access the web server of COMbricks, open your web browser and enter the IP address that has been setup** (after purchase or reset the default IP address is 192.168.1.254)**. In the Discovery Tool you can find a button to access the web server with the default Windows browser.**

If a User password has been setup a screen will appear to login first in order to access the web server. If only the Administrator password has been setup it is not necessary to login to directly, but when settings are altered you must be logged in (See **Paragraph 4.7**).

Some web pages described in this manual are only accessible with certain Head Station types, licenses or firmware versions.

After the web page has been loaded, the pages of the web server can be browsed by clicking on the items in the menu on the left side of the screen. The next paragraphs will explain the primary web server pages.

The web server can handle 20 simultaneous client connections. When all 20 are utilized, the connection with the COMbricks could become relatively slow.

The minimum version requirements for Web browsers are:
- Firefox 2.0 (24 October 2006)
- Internet Explorer 6.0 (27 Augustus 2001)
- Google Chrome 1.0 (24 April 2009)


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.1 Status

Head Stations: **1A, 1B, 1C**
Firmware: **V1.140 and higher**
Login: **User or Administrator**

The 'Status' screen is the first web page that appears when the web server is accessed. This page gives an overview of the available modules and their respective description + version numbers (see **Fig. 26**).

Modules can be inserted and removed during operation. Changes in hardware should be directly visible in the Status screen.

The 'User message' with custom messages/info is also displayed here (see **Fig. 26**).

On the top of the screen the network and site info can be inspected (see **Fig. 26**).

On the bottom of the screen the connected clients with this COMbricks are visible (see **Fig. 26**).

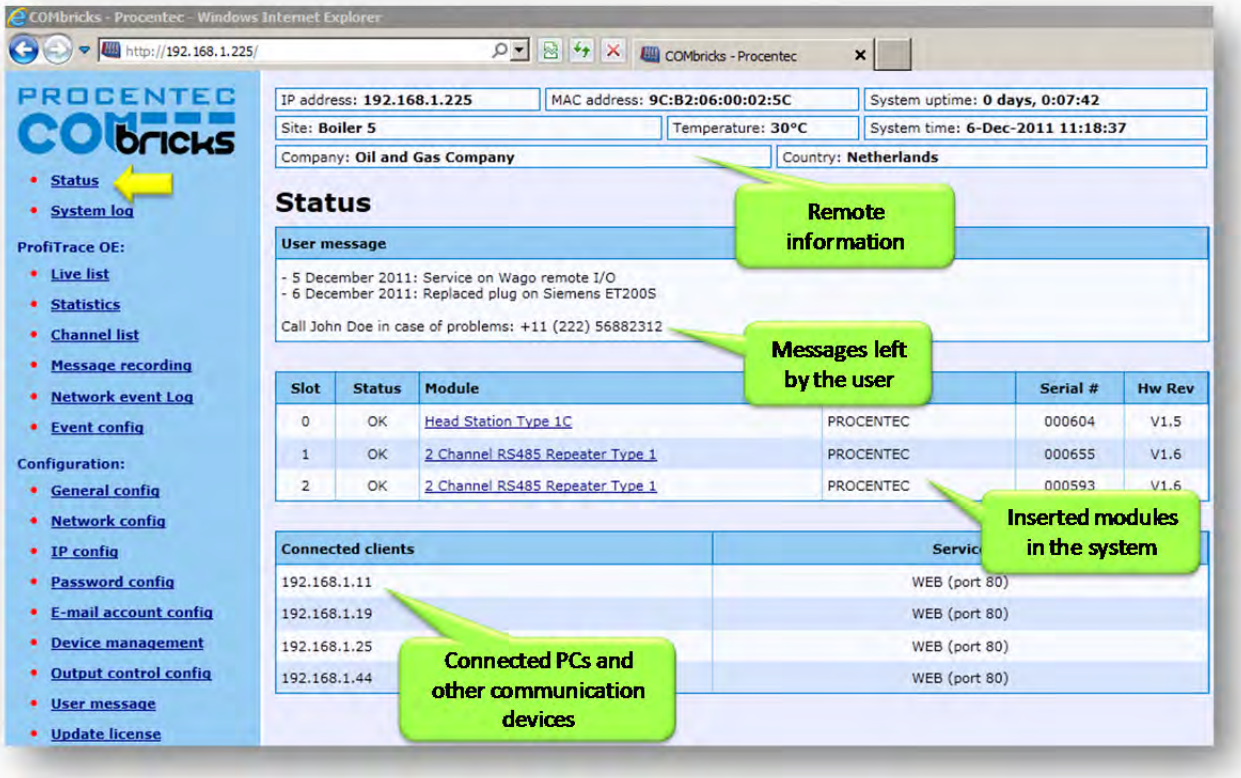


Fig. 26 - Status screen

Most of the module types offer their specific status screen. Click on the link (name in the module column) and the respective web page will be displayed (see **Fig. 27**).


© PROCENTEC 2014 - Copyright - all rights reserved

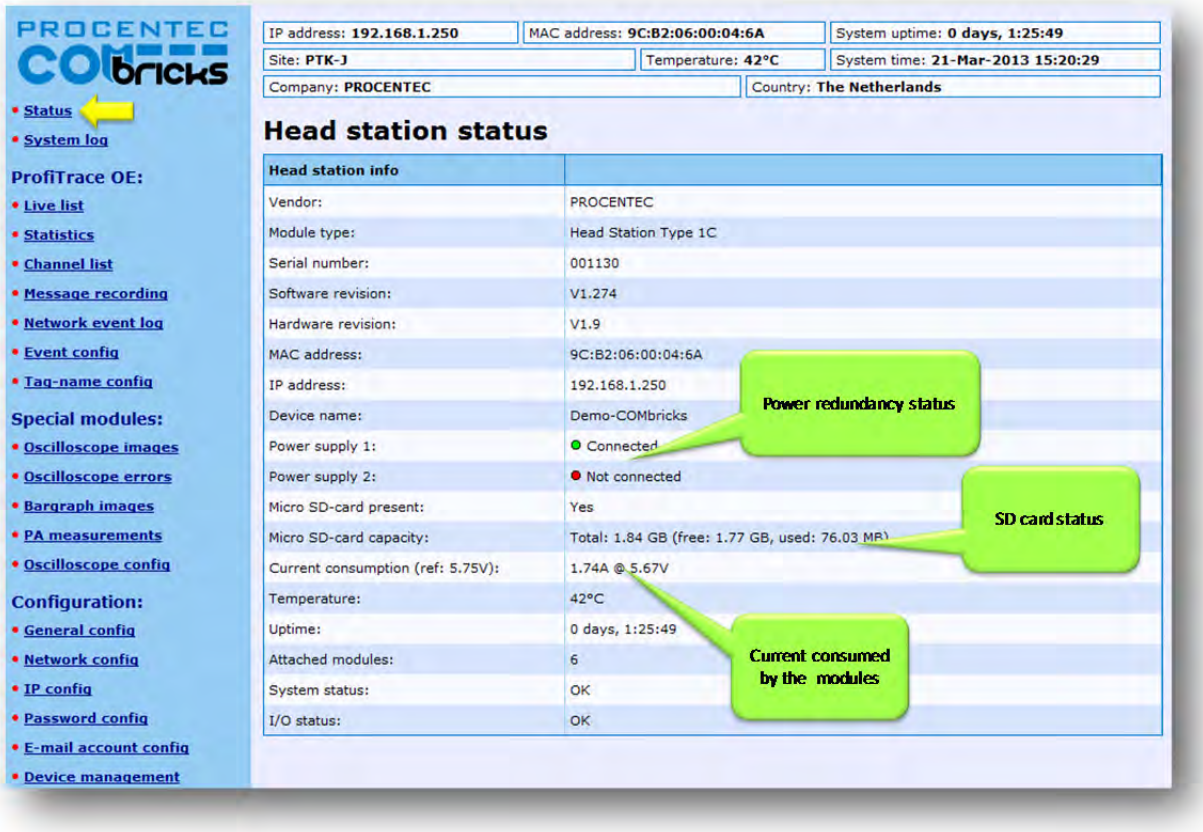


Fig. 27 - Example of a module status


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.2 Channel list

Head Stations: **1A, 1B, 1C**
Firmware: **V1.152 and higher**
Login: **User or Administrator**

A helpful utility is the Channel list. This page visualizes a graphical overview of all stations in the network and to which network module they are connected. It is almost comparable with a logical topology scan (see **Fig. 28**).

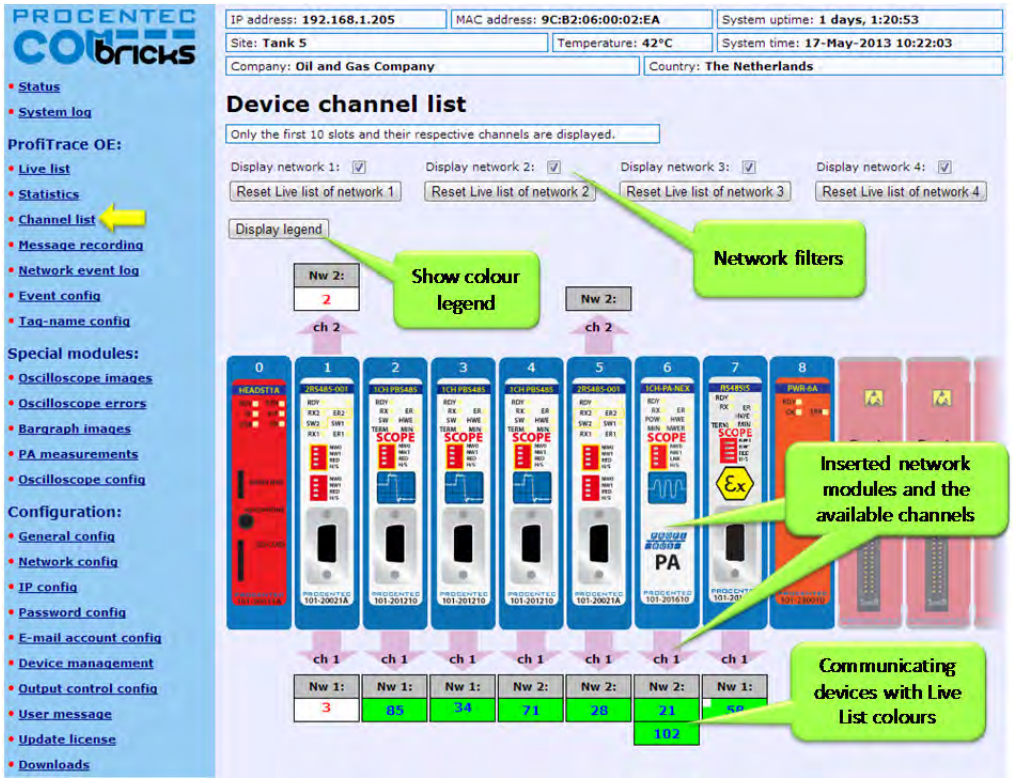


Fig. 28 - Channel list


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.3 System log

Head Stations: **1A, 1B, 1C**
Firmware: **V1.140 and higher**
Login: **User or Administrator**

The system log saves COMbricks events. When this page is accessed all the COMbricks events are displayed. It can be downloaded as text file and cleared/deleted (see **Fig. 29**). You cannot change the system log in the web server.

The 'System log' is;

- **kept intact** after a power down and continues its logs after a power-up.
- **auto/live updating** when this screen is accessed.
- **saved** on the SD card.

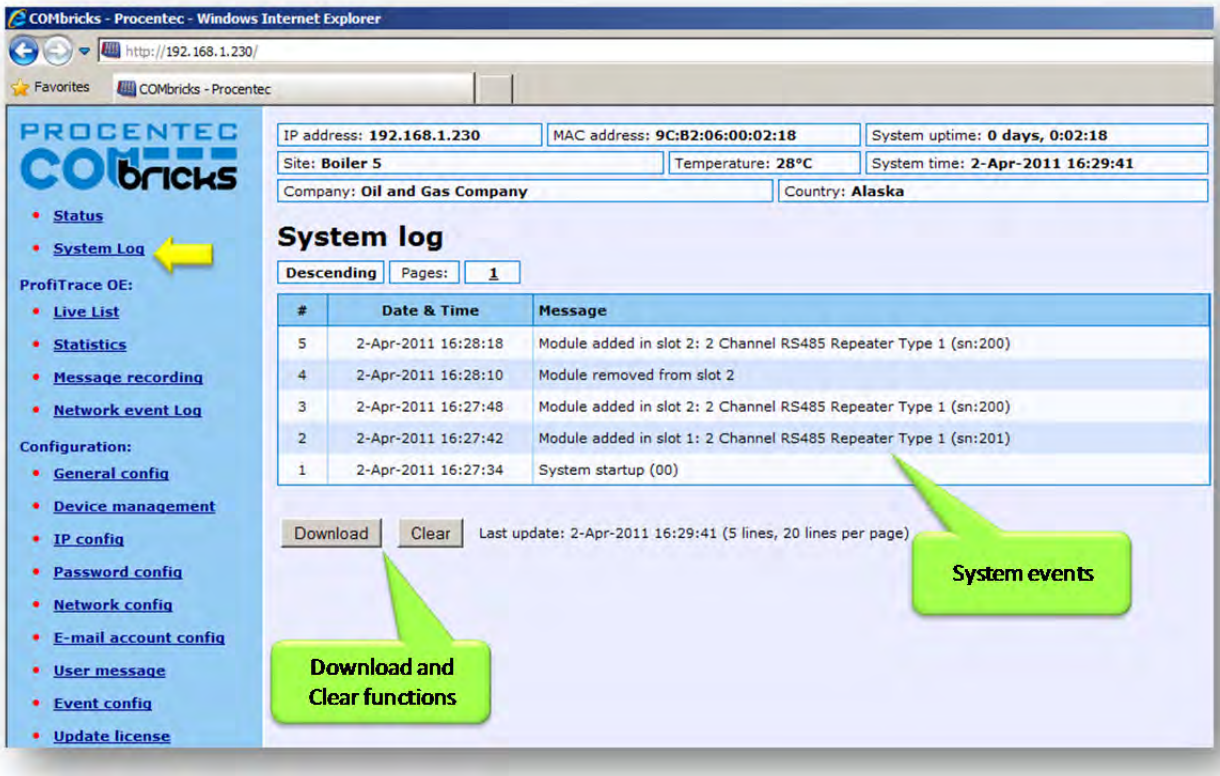


Fig. 29 - System log


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.4 General configuration

Head Stations: **1A, 1B, 1C**
Firmware: **V1.140 and higher**
Login: **Administrator**

The basic settings of the COMbricks are customized on the 'General configuration' page. For optimal use of ProfiTrace OE, it is important that the time is synchronized and the site info is sufficiently filled in (see **Fig. 30**). If your COMbricks is connected to Internet or a local NTP server, use the NTP server synchronization for automatic date & time update. This keeps your COMbricks always set to the right time (this option is available in Head Station firmware v1.278 and up). If the COMbricks clock differs more than 10 seconds from the NTP clock, a line in the system log is added.

The automatic time update occurs when the set interval has passed. The maximum interval that can be set is 1440 minutes, which corresponds to 24 hours. Please note that there is no option for auto-updating to Daylight Saving Time (DST). This is because this is not used in Factory Automation. When an NTP server is used, the time is always assumed to be winter time.

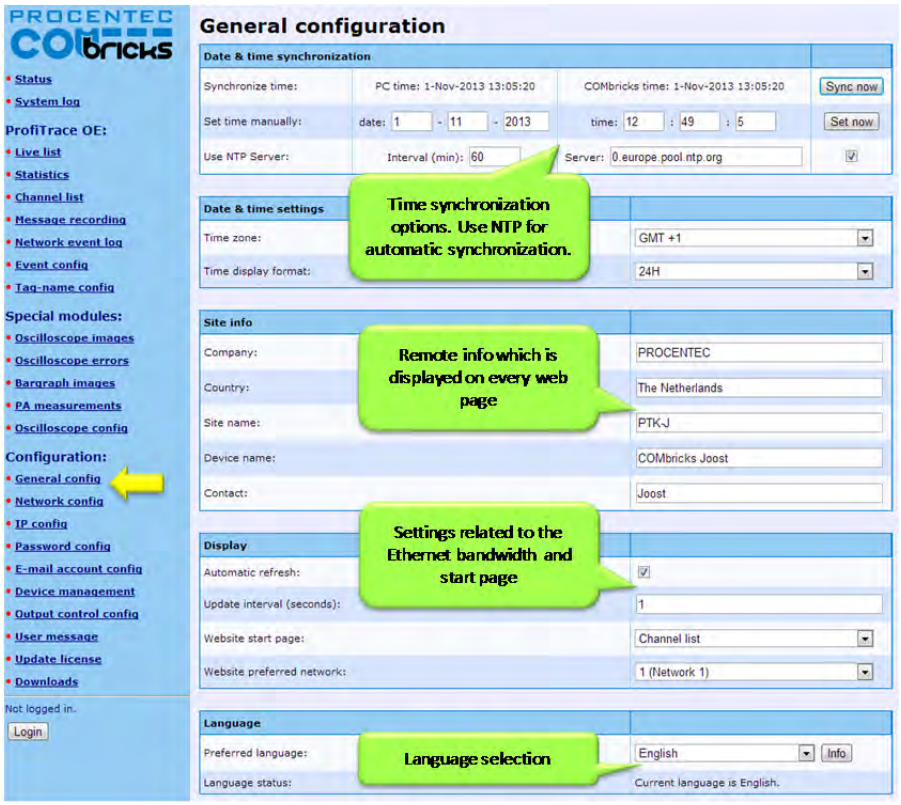


Fig. 30 - General configuration

The display refresh rate has to be tuned to the bandwidth of the Ethernet connection. By default it is set to a 1 second automatic refresh. If the bandwidth is limited, it is recommended to increase this time or to switch the automatic refresh OFF (see **Fig. 30**).

It is possible to select the start page which is first displayed when browsing to the Head Station IP address. You can select the Main Status page, System Log page, Live List, Statistics, Channel list Message Recording or Network Event log. You can also select for which network this should apply.

The interface language can be changed in the Preferred Language drop-down box.
More languages will be added in the future, which will become available in new firmware updates.


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.5 Network configuration

Head Stations: **1A, 1B, 1C**
Firmware: **V1.252 and higher**
Login: **Administrator**

The network names and the assignment of the repeater modules are customized here. For optimal use of ProfiTrace OE, it is important that correct and understandable network names are defined (see **Fig. 31**). The network names are used in multiple components: ProfiTrace Live List, event emails, message recording, etc.

Each of the 4 Live Lists can be individually setup to a different time-out. The default value is 5 seconds. The time indicates how long a slave will be displayed as green when it has lost communication to the master. After the set time it will turn yellow if it has no communication anymore.

The network assignment of the repeater modules is also displayed and can be adjusted if software settings are enabled (see **Fig. 31**). It is possible to assign a module to Network 1 to 4, or to disconnect it from the backplanes. This makes it possible to create a multiplexed system, or temporarily remove certain slaves from the PROFIBUS network.

Dipswitch settings are always primary to software settings.

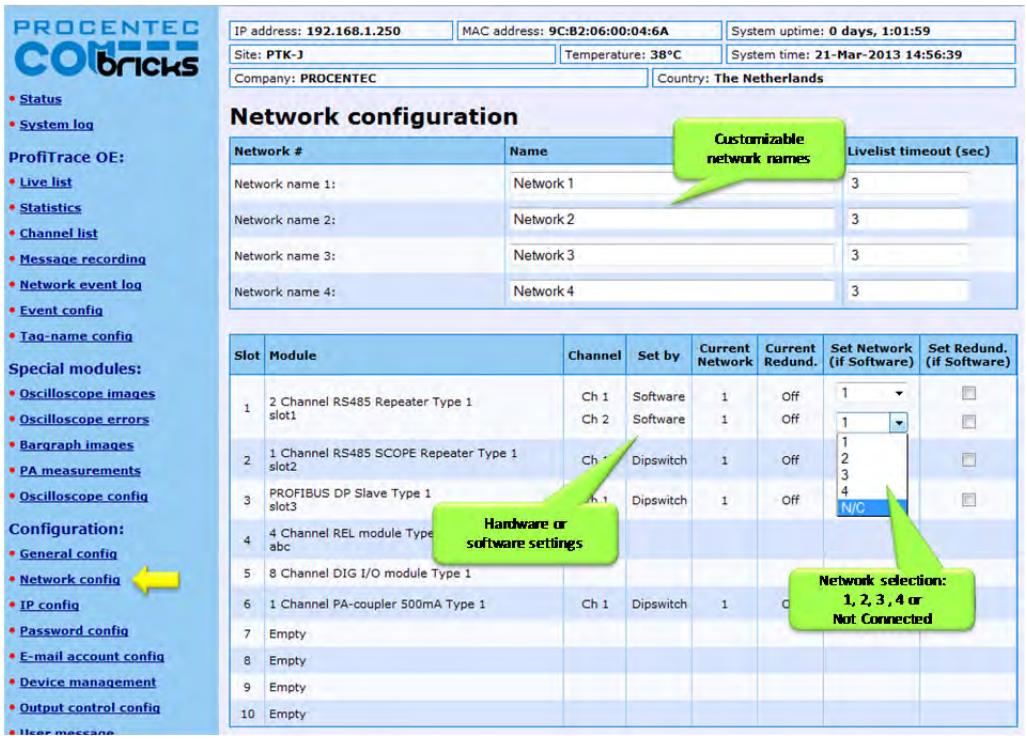

Fig. 31 - Network configuration


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.6 Output Control

Head Stations: **1A, 1B, 1C**
Firmware: **V1.254 and higher**
Login: **User**

With the Output Control feature the user can directly respond to an event with the onboard relay in the Head Station or the channels from output modules in the backplane. The web server offers 10 customizable controls that can be set to the following behavior:

- Not active
- Manual ON/OFF — Live toggle of the output channels
- Time — Time ON and Time OFF
- PROFIBUS event — Syncs, retries, bus voltage too low, redundancy failure, PA failure, fiber optic failure etc.
- System event — Redundant power change or COMbricks failures

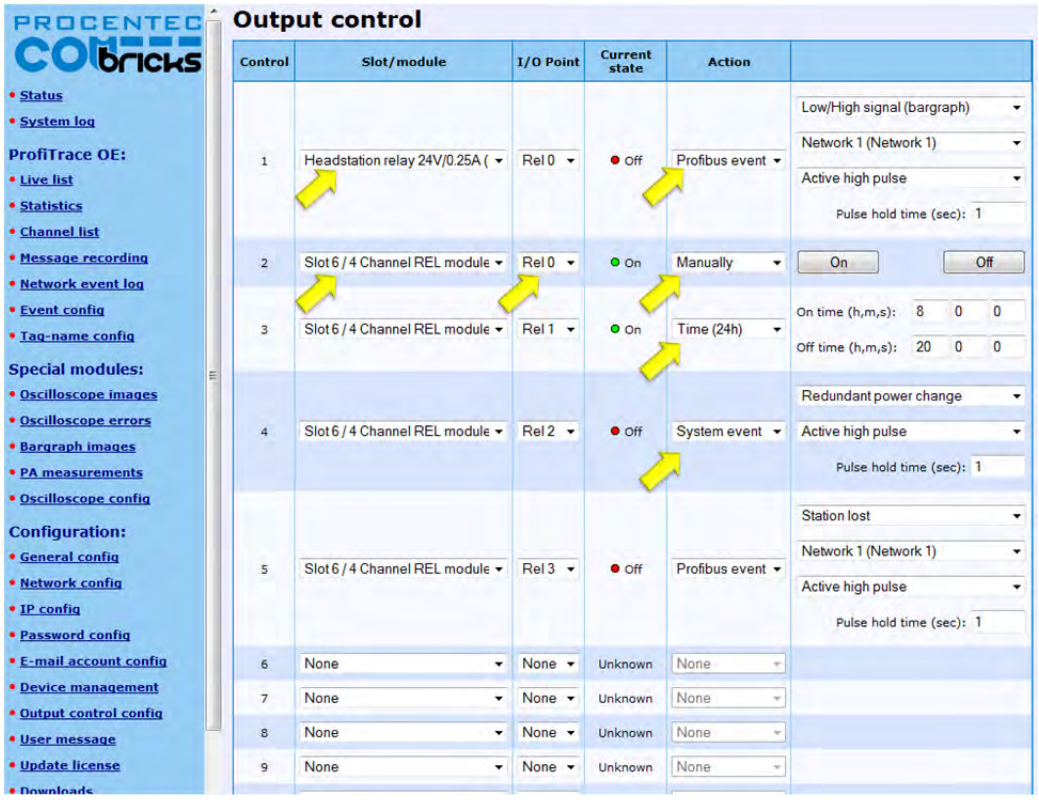


Fig. 32 - Output Control

After power down/up, the COMbricks loads and restores these settings.

It is recommended to have a security policy concerning passwords with this feature, because the user is able to control REAL output points.


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.7 Password setup and login

Head Stations: **1A, 1B, 1C**
Firmware: **V1.100 and higher**
Login: **Administrator**

Passwords are NOT activated when the product is purchased or reset and all menu items are accessible and adjustable.

COMbricks supports 2 types of passwords;

| | |
|---|---|
| **User** | Is limited to read information. |
| **Administrator** | Has access to the full web server and can adjust settings. |

- The Administrator password has to be set first.
- The passwords can have a length between 1 and 16 characters.

**Fig. 33** illustrates the password setup web page.

### 4.7.1 Access rights

After a password(s) has been setup, it complies with the access rights from **Table 1**.

Table 1 - Access rights after password setup

| | NO Passwords | Administrator | User (Admin. is set) |
|---|---|---|---|
| **Login required at web server access** | NO | NO[3] | YES |
| **Visiting web pages** | YES | YES | YES |
| **Clear "System log"** | YES | YES | YES |
| **Restart the device in the "Device management"** | YES | YES | YES |
| **Output Control** | YES | YES | YES |

[3] When only the Administrator login has been activated, the user can always enter the web server without a valid login. When settings need to be altered, the administrator is required to login.


© PROCENTEC 2014 - Copyright - all rights reserved

| | NO Passwords | Administrator | User (Admin. is set) |
|---|---|---|---|
| **Changing passwords** | YES | YES | NO |
| **Adjusting all other settings** | YES | YES | NO |

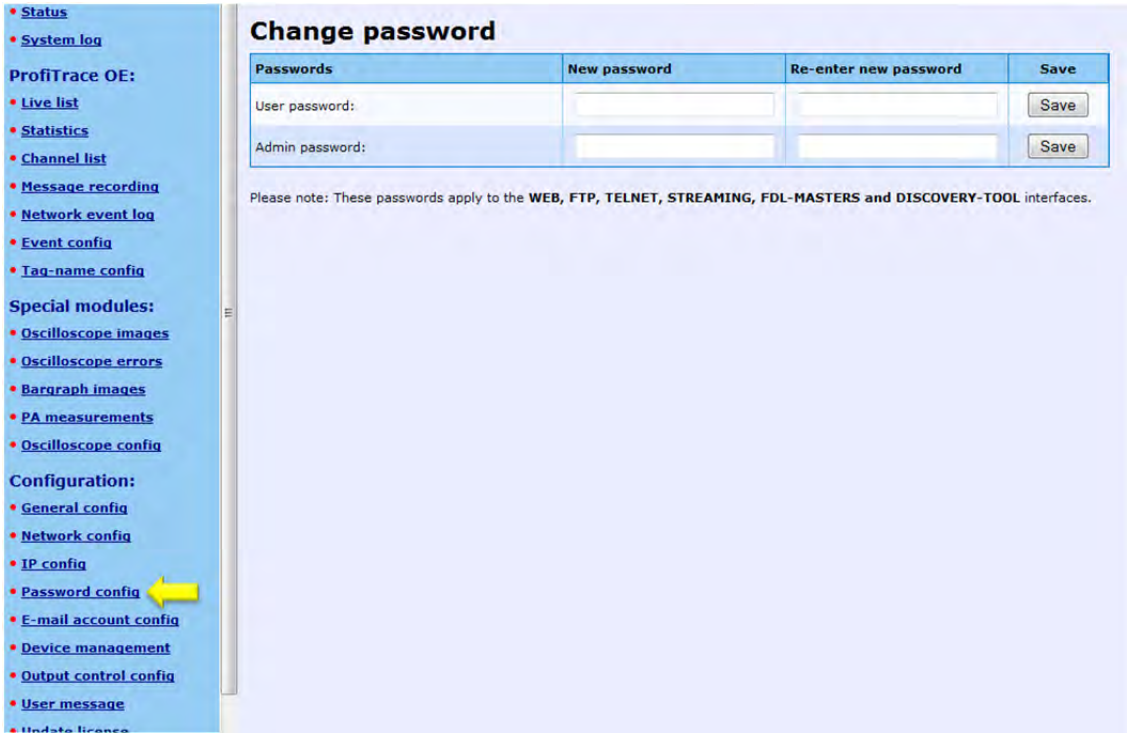


Fig. 33 - Password setup

### 4.7.2 Password best practice

We encourage you to at least setup the Administrator password if more than 1 person has access to the network.

- Activate the password(s) immediately after installation or at the office before it is transported to the final destination.
- Use different passwords for the Administrator and User.
- Never share passwords with anyone.
- Always use strong passwords. Avoid: *test, 123456, <your company name>, <your first name>, combricks, procentec, etc.*
- Change passwords immediately if they may have been compromised.
- If passwords must be written down, store it in a secure place and destroy it when it is no longer needed.


© PROCENTEC 2014 - Copyright - all rights reserved

- Be careful about where passwords are saved on computers. Some dialog boxes, such as those for remote access, present an option to save or remember passwords. Selecting this option poses a potential security threat.

### 4.7.3 External protocols

The following login information is required for external protocols, for example for FTP and TELNET.

Login name: **user** or **admin**
Password: <**your password>**

In case no password has been setup, COMbricks will accept any password during the connection phase.

### 4.7.4 Clearing password(s)

There are 3 ways to restore the password(s) to their default setting:

- Change the passwords with no text written in the text field (*Administrator login required*).
- Restore to factory default settings in the "Device management" page (*Administrator login required*).
- Restore to factory default settings with the switch on the front of the Head Station (see **Paragraph 6.5**).


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.8 License update

Head Stations: **1A, 1B, 1C**
Firmware: **V1.252 and higher**
Login: **Administrator**

In case the user wants to update the license of the Head Station, it can be done here via an internet connection or copy the content of a license file.

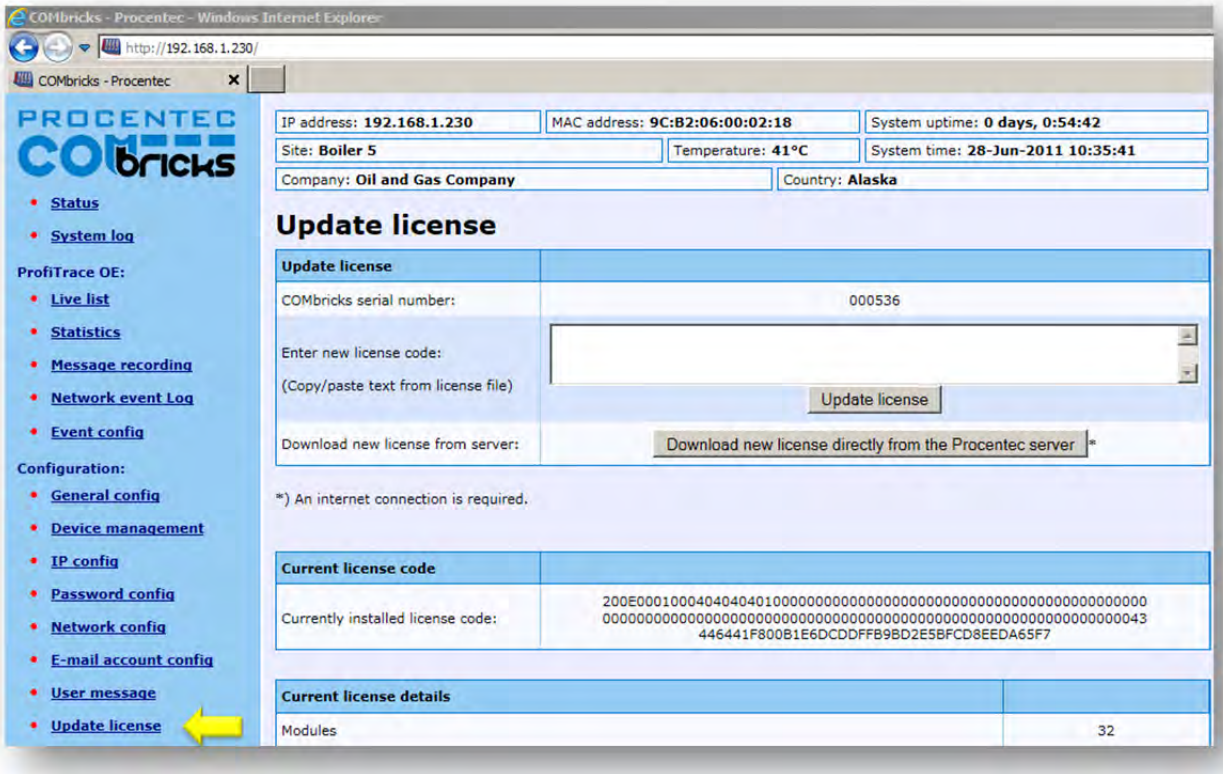


Fig. 34 - License update


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.9 Document download page

Head Stations: **1A, 1B, 1C**
Firmware: **V1.253 and higher**
Login: **User or Administrator**

To provide the user with documentation, firmware and software, the SD card has been provided with a document download page (see **Fig. 35**).

- Download the latest version of the document download page from www.procentec.com
- The content of the *.ZIP* file has to be copied to a directory *\DOC* on the SD card.
- If the directory does NOT exist, create it and copy the content of the *.ZIP* file to it.
- Reload the web server to update the information.
- There should be an item called "Downloads" on the bottom of the left menu

It is possible to replace the PROCENTEC download page with a customized version. Replace *index.html* with your own version and you can point to directories/files which are located on the SD card. If you are interested in such activities, we recommend you to inspect the structure of the PROCENTEC index.html first.

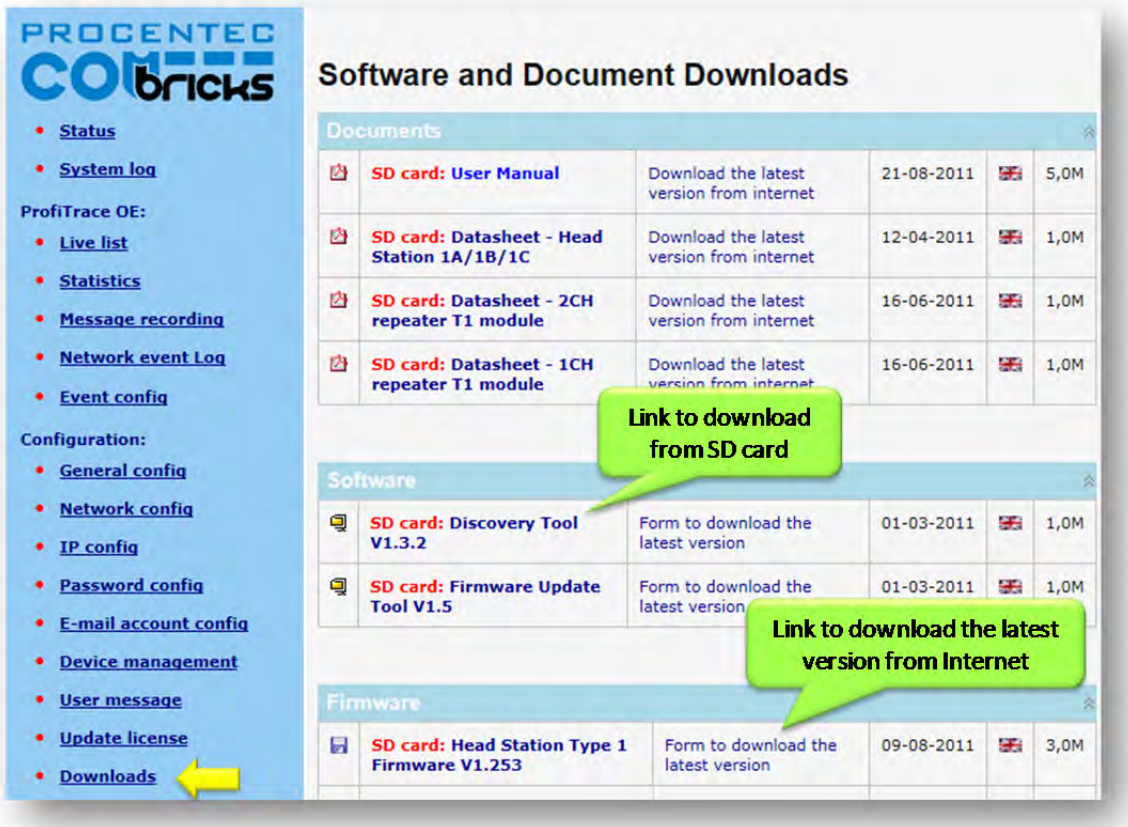


Fig. 35 - Software and document downloads


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.10 Email account config

Head Stations: **1A, 1B, 1C**
Firmware: **V1.253 and higher**
Login: **Administrator**

The email account information has to be entered if the user wants to have COMbricks signal events by email. The required information is generally the same as any other email related setup (see **Fig. 36**).

Setting up the email server parameters is not enough. The events that generate the emails have to be setup in the Event config menu (see **Paragraph 5.4**).

The SMTP server has to support **unencrypted** connections, because the current COMbricks firmware does NOT support encrypted connections such as SSL/TLS. The DNS address (IP config menu) has to be modified according to the DNS addresses of your internet provider.

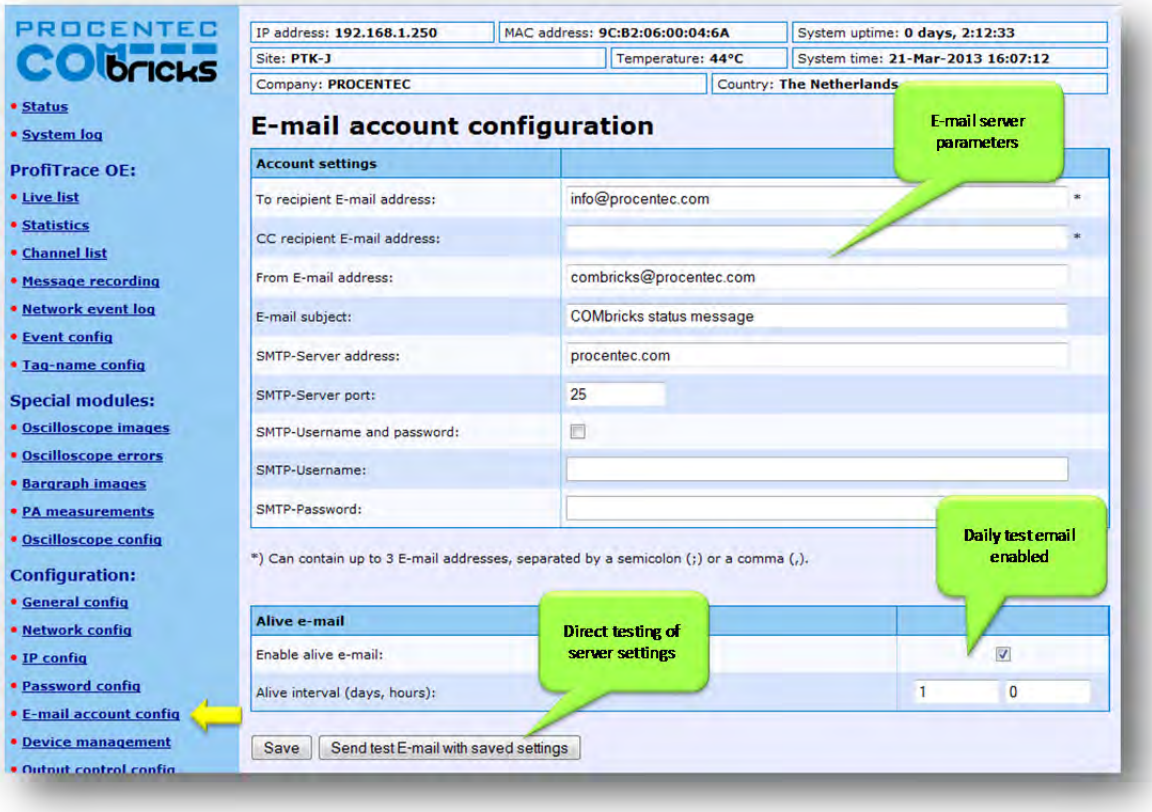


Fig. 36 - Email configuration

The server parameters have to comply with the email server parameters listed in **Table 2**.


© PROCENTEC 2014 - Copyright - all rights reserved

Table 2 - Email server parameters

| Server parameters | Mandatory | Additional information | Size |
|---|---|---|---|
| **To** | YES | If you enter multiple addresses (max. 3) separate them with the ; character. | 200 |
| **Cc** | Optional | If you enter multiple addresses (max. 3) separate them with the ; character. | 200 |
| **From** | Yes | Depending on the email server you are using, this has to be an existing email address. | 100 |
| **Subject** | Optional | Can be anything you want it to be. | 100 |
| **SMTP server** | Yes | Has to be setup according to the requirements of the email server. | 100 |
| **SMTP server port** | Yes | Standard value for most servers has already been entered, but has to be setup according to the requirements of the email server. | |
| **User name** | Optional | A User name can be entered if the SMTP server requires it. Click on "SMTP-Username and password" first. | 50 |
| **Password** | Optional | A password can be entered if the SMTP server requires it. Click on "SMTP-Username and password" first. | 50 |

When you have filled in all server parameters, click on "Save". The settings can be tested by clicking on "Send test email with saved settings".

Save the settings first before sending the test email!
It might take a couple of minutes before the test email has been received by the recipient.
If the test-email has not been received, please check if it has been blocked by a Spam filter.

### 4.10.1 Alive email

COMbricks can send a periodic alive-email to the recipient(s) entered in the To: field. If no events are triggered for a longer period, COMbricks will not send emails. This also happens when COMbricks has no connection to the mail server for some reason. The alive email is the only way of knowing that the connection is still active.

COMbricks can auto-send an email with adjustable intervals of one hour and one day.


© PROCENTEC 2014 - Copyright - all rights reserved

### 4.10.2 Troubleshooting

- ❑ Check if COMbricks has access to the internet. You can easily test this by going to the Download page in the COMbricks menu and download a datasheet from the web.
- ❑ Compare the DNS settings with the requirements of the email server you are using.
- ❑ Make sure your email server supports unsecured connections.
- ❑ Check the email settings and generate the test email. Start with only 1 email address (To).
- ❑ If the test email works, please check that your events have been correctly enabled and an event is really triggered.


© PROCENTEC 2014 - Copyright - all rights reserved

## 4.11 Device Management

Head Stations: **1A, 1B, 1C**
Firmware: **V1.253 and higher**
Login: **Administrator**

The Device Management page allows the user to perform backup, restore and restart actions for the COMbricks. For some actions Administrator login is required.

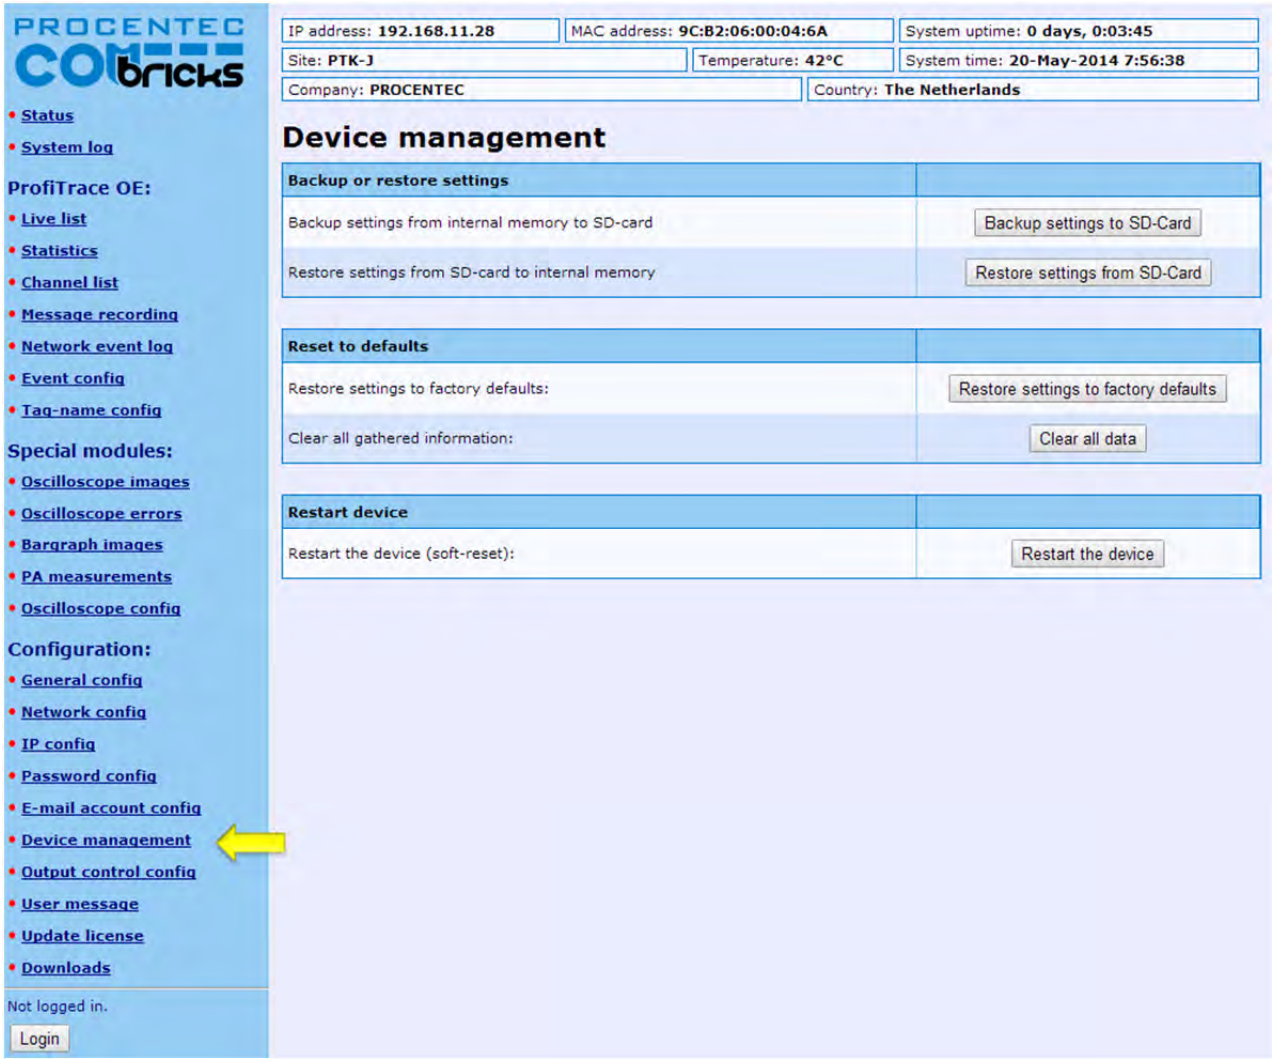


### 4.11.1 Backup settings to SD-Card

When this button is clicked, all customizable settings of each individual network and of the Head Station are saved to SD-Card. These settings include Message recording settings, name and identification tags, scope settings and IP and email settings.

This feature allows a quick and easy replacement of a defective Head Station. If a Head Station needs to be replaced, and settings have been backed up on SD card, remove the SD card from the slot and place it in the new Head Station. Then continue with **paragraph 4.11.2**.


© PROCENTEC 2014 - Copyright - all rights reserved

### 4.11.2 Restore settings from SD-Card

When you replaced the SD card with information from another Head Station, click ‘Restore settings from SD Card’ to load all information into the new Head Station. Then click ‘OK’ on the confirmation window. Settings are loaded and activated instantly; no restart is required.

### 4.11.3 Restore settings to factory defaults

This button clears all entered information and restores the COMbricks Head Station to the default factory values. The new IP address is 192.168.1.254

### 4.11.4 Clear all data

When a COMbricks set has been installed and is ready for normal operation, it may have recorded several events which are not ‘real’ faults. This can happen during wiring or commissioning phase. Press ‘Clear all data’ to start the COMbricks logging and recording functions with a clear memory. Then click ‘OK’ on the confirmation window.

**IMPORTANT NOTE:** This will also clear all Message Recording files!

### 4.11.5 Restart the device

To restart the device, for example to let it read new dipswitch settings, click the ‘Restart the device’ button. Then click ‘OK’ on the confirmation window.


© PROCENTEC 2014 - Copyright - all rights reserved

# 5 ProfiTrace OE

ProfiTrace OE (Over Ethernet) is a web based version of ProfiTrace. It offers the basic functionality of regular ProfiTrace, like; Live List, Statistics and Message recording. ProfiTrace OE is available on the Head Stations 1B and 1C.

## 5.1 Live List

***"Colors make it easy….."***

The Live List is a matrix that continuously lists all the available devices. It is directly visible which devices are 'troublemakers'. With different background colors, the status of the devices is displayed (see **Fig. 37**):

- Green: Device is in Data Exchange
- Yellow: Device is lost (the time-out is adjustable, see **paragraph 4.5**)
- Red: Parameter fault
- Purple: Configuration fault
- No color: On the bus but not in Data Exchange

The Live List can also generate the product name of the devices when a diagnostic message is captured (synchronized with the GSD library).

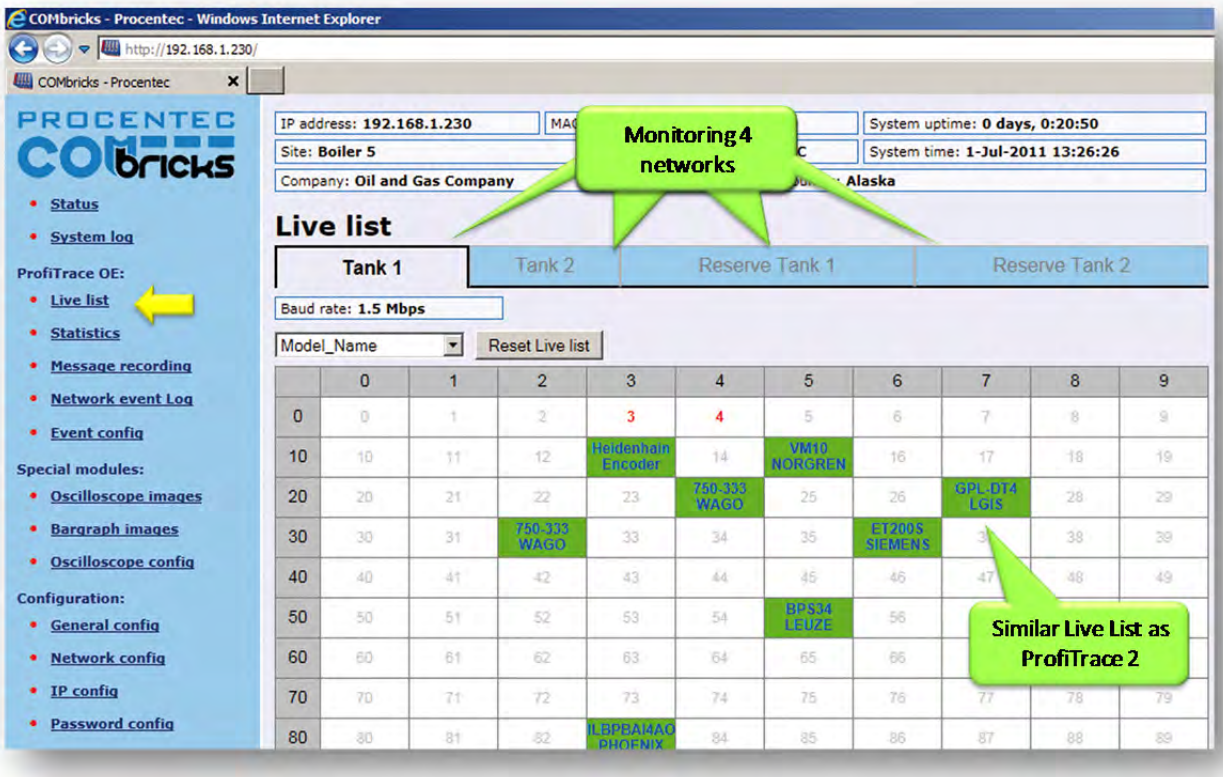


Fig. 37 - ProfiTrace Live List

The button 'Display Legend' pops up a window explaining all colours in more detail.


© PROCENTEC 2014 - Copyright - all rights reserved

### 5.1.1 Updating the GSD file library

The procedure below describes how to update the GSD file information in COMbricks so that all devices in the Live List have a full model name.

**STEP 1:** Start regular ProfiTrace (2.6 or higher, no license required).

**STEP 2:** Copy all GSD files you require into the ProfiTrace GSD directory.
This is usually ".....\ProfiTrace_Vx_x_x\GSD".

**STEP 3:** Create a COMbricks GSD library.
(Settings > Create COMbricks GSD library)
A question is asked if you want to re-scan the GSD files. Select YES followed by (re)Scan GSDs. Click 'Close' when the process has been finalized.

**STEP 4:** A pop-up box allows us to select the destination folder. Select a (temporary) destination folder for the file *GSD.BIN*, for example the Windows desktop.

**STEP 5:** GSD.BIN has to be copied to the SD card of the COMbricks. You can do this by inserting it in your PC or FTP (admin account).

**STEP 6:** After inserting the SD card back into the Head Station or closing the FTP session, the GSD information is directly available in the Live List. **Paragraph 15.1** describes a method of testing the updated GSD.BIN.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.2 Statistics

***"Click and go….."***

The statistics matrix is the most powerful feature of the analyzer. This field can really indicate what the condition of the installation is. It displays all the important information that a user, especially a maintenance technician, is really interested in (see **Fig. 38**):

- Retry messages
- Fall-outs
- Diagnostic messages
- Location of the connected devices, etc.

**Paragraph 5.9** describes the statistics and when they occur.

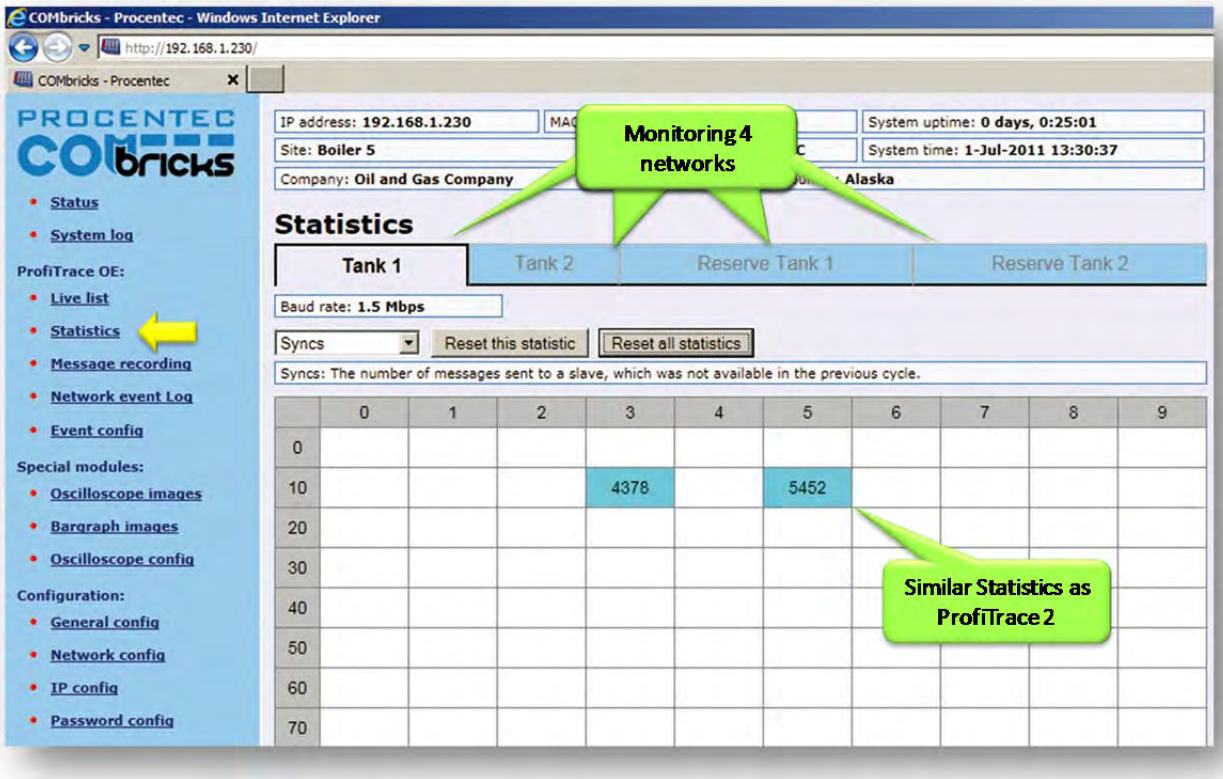


Fig. 38 - ProfiTrace OE Statistics

Because of this feature, the user does not have to inspect messages or do difficult operations to ensure the quality of the installation.

**If the statistics do NOT show deviations, the installation is on the 1st degree OK.**

Here it stops for the technician who is only interested in a quick feedback. The advanced technician can proceed with a message recording and an inspection of the signal quality.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.3 Message recording

***"Catch it all....."***

The message recording in ProfiTrace OE follows a different strategy than ProfiTrace 2. Within ProfiTrace 2, the user needs to setup the message recording first and is he responsible to start it himself.

Because COMbricks is a unit for permanent monitoring, it automatically starts a message recording when an event has been detected. The following event automatically starts a message recording again.

When the unit is purchased or reset, it is automatically triggered on the statistic "Lost". This works directly after startup. The user can change the settings during operation (see **Fig. 39**).

The recorded files can be opened with an offline ProfiTrace 2 (no license required).

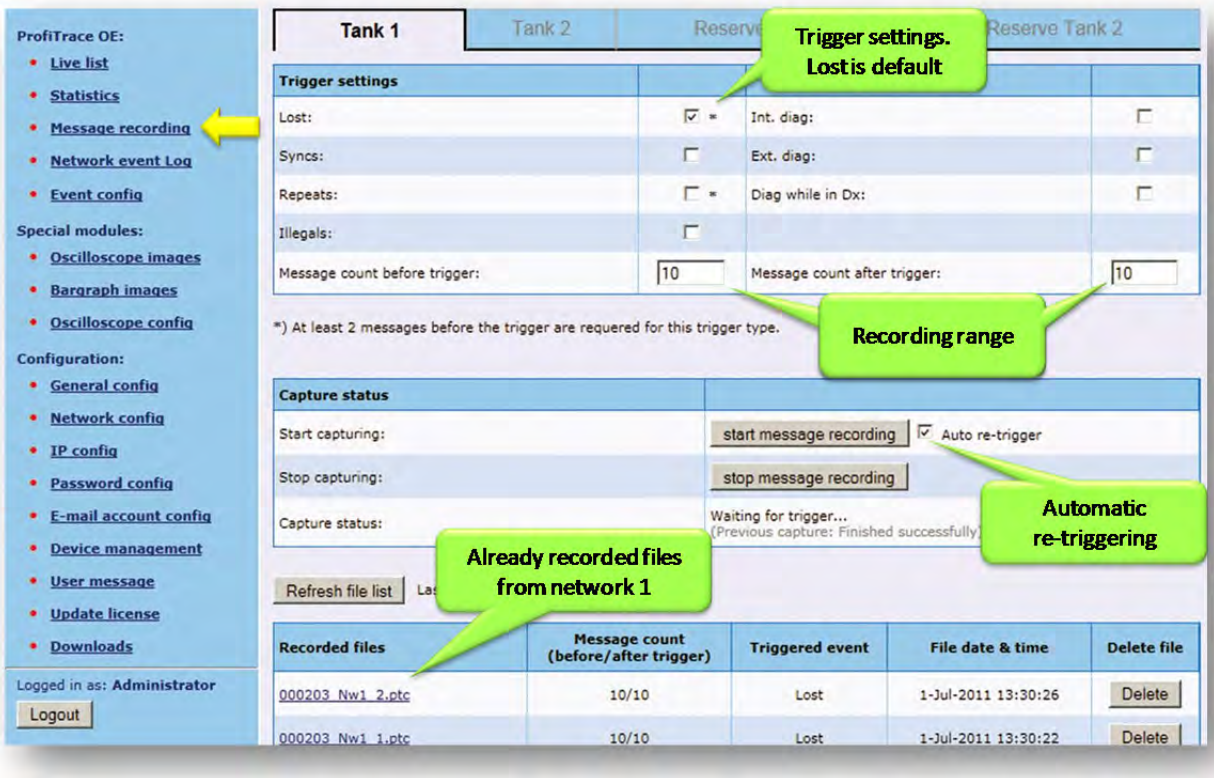


Fig. 39 - Setup recording trigger

The automatic triggering can generate 1000 *.PTC* files per network[4]. After 1000 files have been generated, the follow-up event will delete the oldest file and replace it with the latest event. This system secures the storage space of the SD card.

*.PTC* files can be opened with ProfiTrace 2.5.3 and higher (offline and no licenses required).

The file name contains the MAC address of the Head Station, the network number and the file number (0-999).

[4] This feature is available in firmware version 1.264 and higher.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.4 Event configuration

For generating emails and entries in the network log, the event configuration has to be set for each network. **Fig. 40** shows an example with multiple event options.
**Paragraph 5.9** describes the events and when they occur.

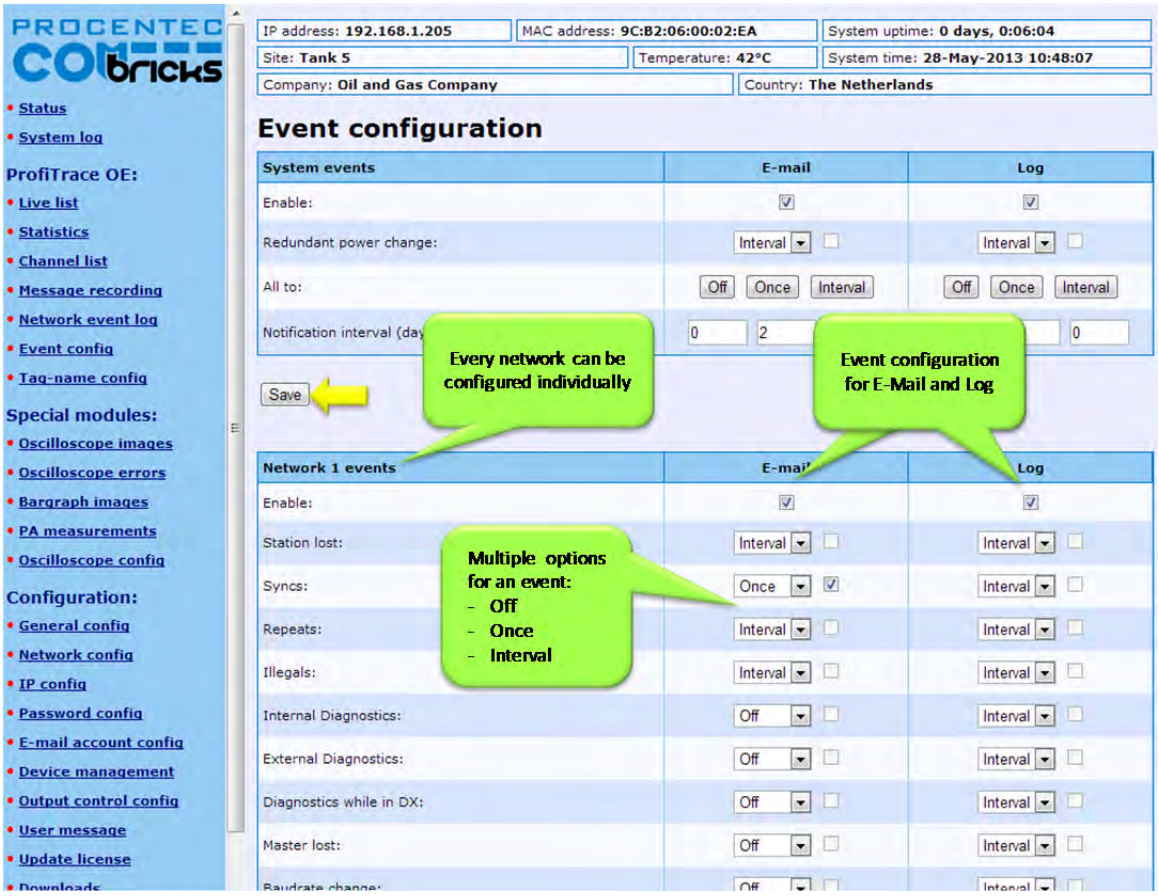


Fig. 40 - Event configuration

To reduce an unwanted overload of emails or log entries, the events can be set to Off, Once or Interval.

| Even parameter | Description | Retrigger required |
|---|---|---|
| **Off** | No event generation. | |
| **Once** | Event will be generated once (1-shot). | Yes |
| **Interval** | Event will be generated once within the customized interval time. After the interval time the event is automatically retriggered to be generated in the next interval. If no trigger was captured in the new interval period, no event will be generated. | No |

The interval time can be customized between 1 minute and 365 days.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.5 Tag name configuration

Every COMbricks module and every station in every network can be tagged with a name.

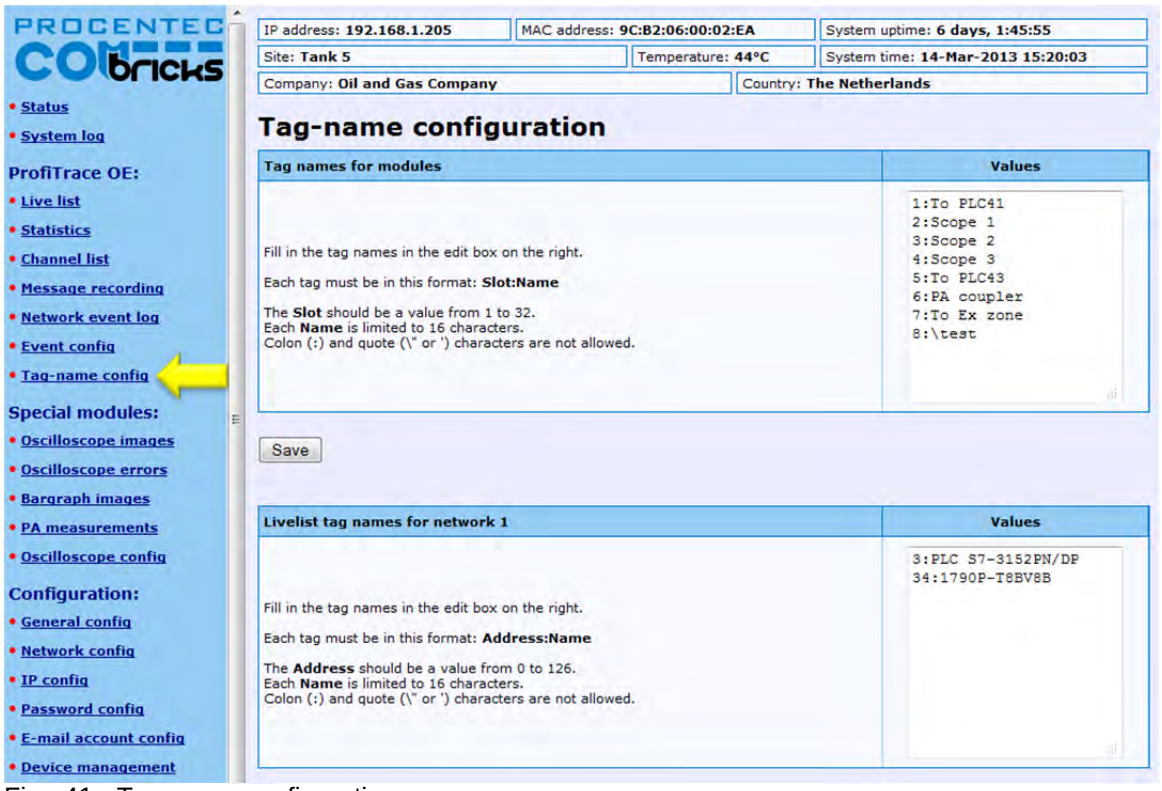

Fig. 41 - Tag name configuration screen

The first block of tag names is used to assign tags to the COMbricks modules.
Each tag must have the format **slot:name**, where slot is the slot number. The tag names are limited to 16 characters. The Colon (:) and quote (‘ or “) characters cannot be used.

The second to the fifth block of tag names are used to assign tags to individual stations in each network.

The tag names are visible in the Channel List page if you hover over a module or station address. It is also possible to show the tag names in the Live List:

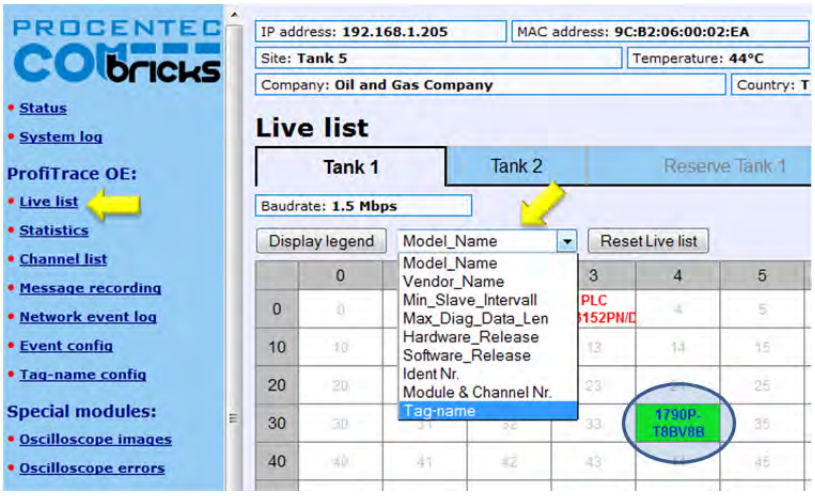


Tag names of modules are also displayed in drop-down references to modules and in tables on the following pages:

- Oscilloscope Images
- Oscilloscope Error Images
- Oscilloscope configuration
- Bar Graphs
- PA measurements
- Network Configuration
- Output Control configuration


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.6 Oscilloscope images

**"The easiest PROFIBUS oscilloscope ever....."**

SCOPE repeater modules have an integrated oscilloscope to measure the signal quality of the telegrams. The oscilloscope has an interface with the web server to display the signals from the devices which are connected to its channel. After opening the web page, all oscilloscope signals are displayed and updated live.

The SCOPE repeater is the most easy to use PROFIBUS oscilloscope available:

- You do NOT have to touch the installation
- Works automatically
- Oscilloscope data is never mistaken with the wrong segment
- No probe wiring
- No spur lines

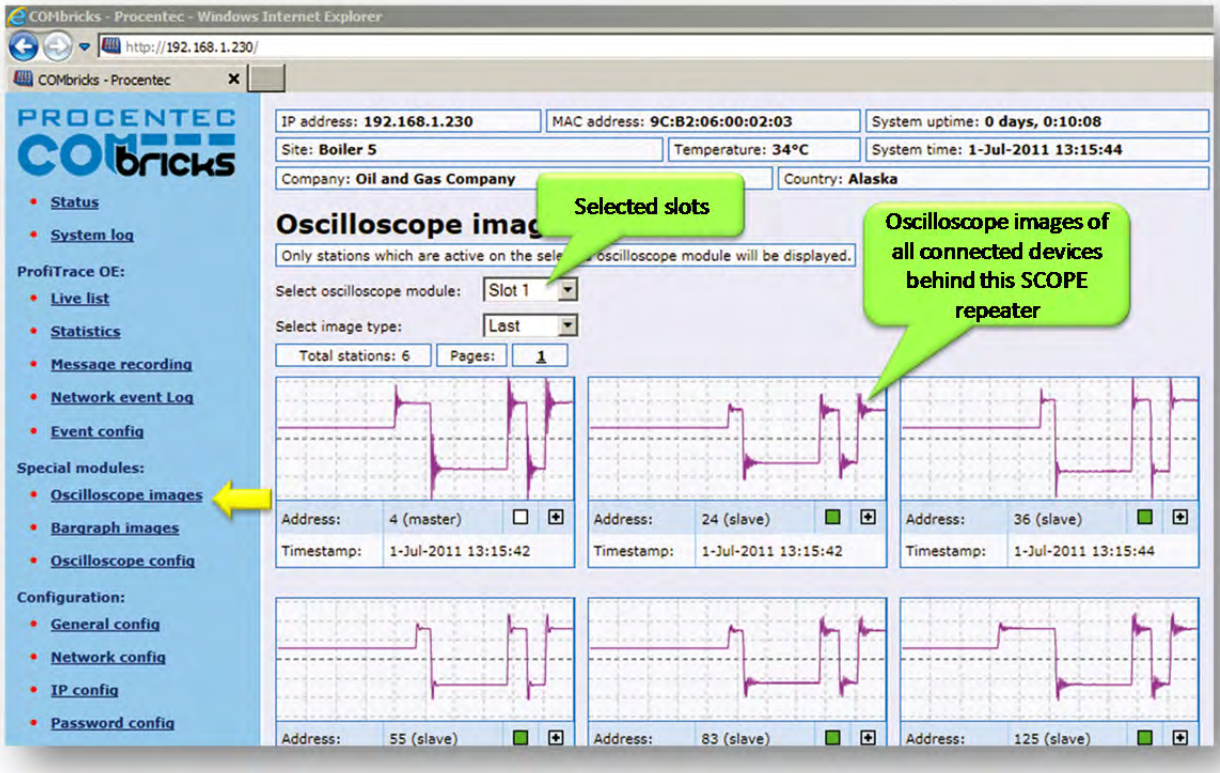


Fig. 42 - Oscilloscope images from all devices

By clicking on the oscilloscope waveform of a device, the oscilloscope triggers on the respective device and displays its signals in a new page.

The SCOPE repeater is only able to do differential measurements.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.7 Bar graph

The Bar graph illustrates the average signal strength from all available connected devices behind a specific SCOPE repeater. It is a helpful utility to get an impression of the overall signal quality of the network.

The average amplitude should be around 5 V. When there are bus problems the Bar graph will display different Voltage levels and the color of the bars will change.

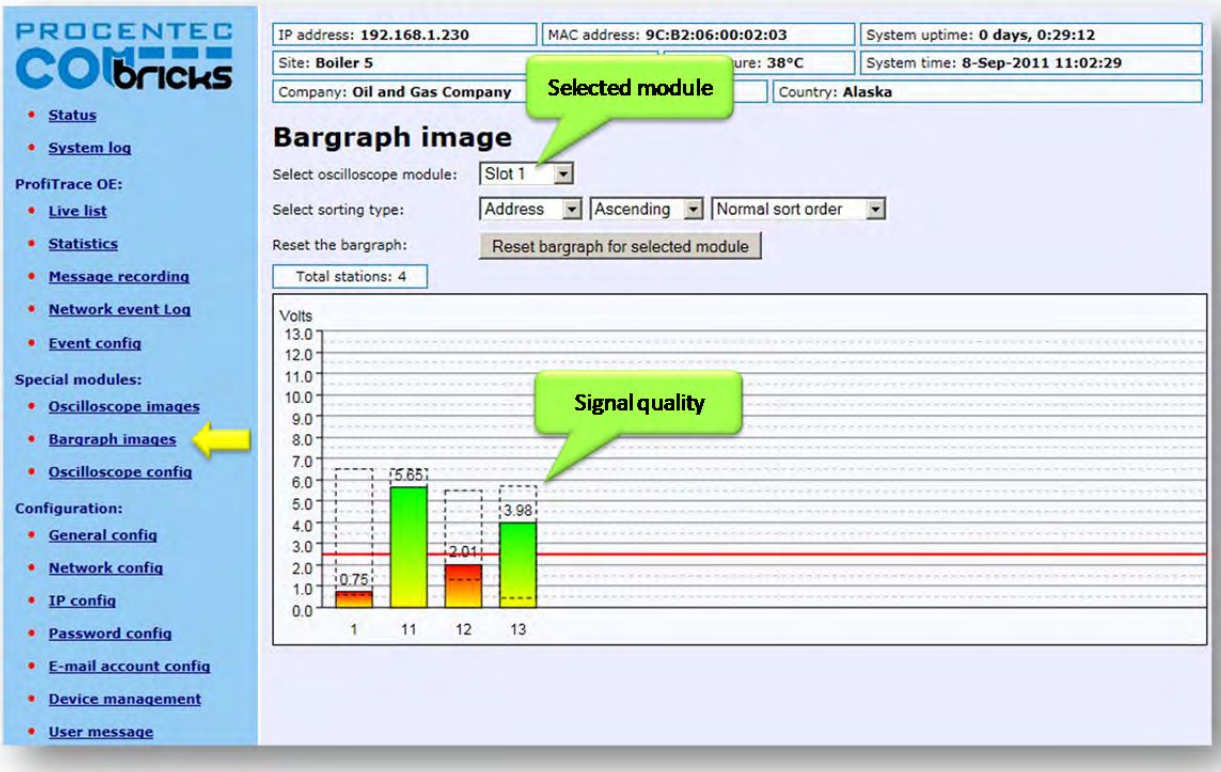


Fig. 43 - Bar graph


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.8 Streaming with ProfiTrace 2

Streaming with ProfiTrace 2 is a feature that allows the user to use the ProfiTrace 2 software and create a scenario as if a ProfiCore is connected to the PC. ProfiTrace 2 is a software tool used by thousands of engineers worldwide, so there is much experience with this tool. A license for ProfiTrace 2 is NOT required!

Streaming with ProfiTrace 2 only works under the following circumstances and settings:

- Only Head Stations Type 1B or 1C with firmware V1.253 or higher
- Max. 1.5 Mbps (PROFIBUS)
- Clean TCP/IP connection
- ProfiTrace 2.6.0 or higher
- Only 1 COMbricks connection

After successfully installing ProfiTrace 2, you can find a '*ProfiTrace v2.x for COMbricks*' in the start menu of Windows (see **Fig. 44**).

This is the standard ProfiTrace2.exe, but with an additional parameter; ProfiTrace2.exe" -_CBMODE_

After Starting '*ProfiTrace V2.x for COMbricks*' ProfiTrace will initially look very similar to the regular version, but now with a reduced number of program option tabs offered near top of screen. The ScopeWare, Bargraph, Topology, ProfiCaptain and other tabs/menus are missing to the right of the single ProfiTrace tab (see **Fig. 44**).

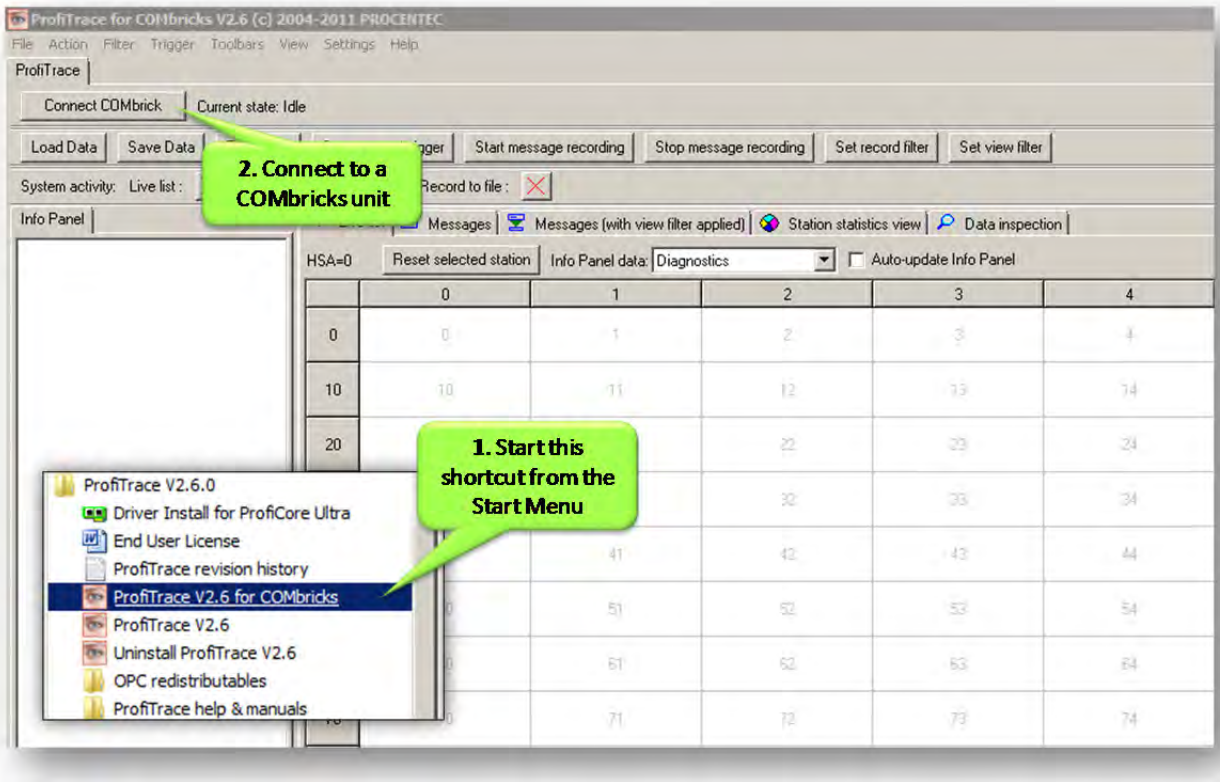


Fig. 44 - Starting ProfiTrace 2 for COMbricks


© PROCENTEC 2014 - Copyright - all rights reserved

After clicking on the 'Connect COMbricks' button, a mid-screen dialogue window is displayed which is used to setup the connection with COMbricks (see **Fig. 45**).

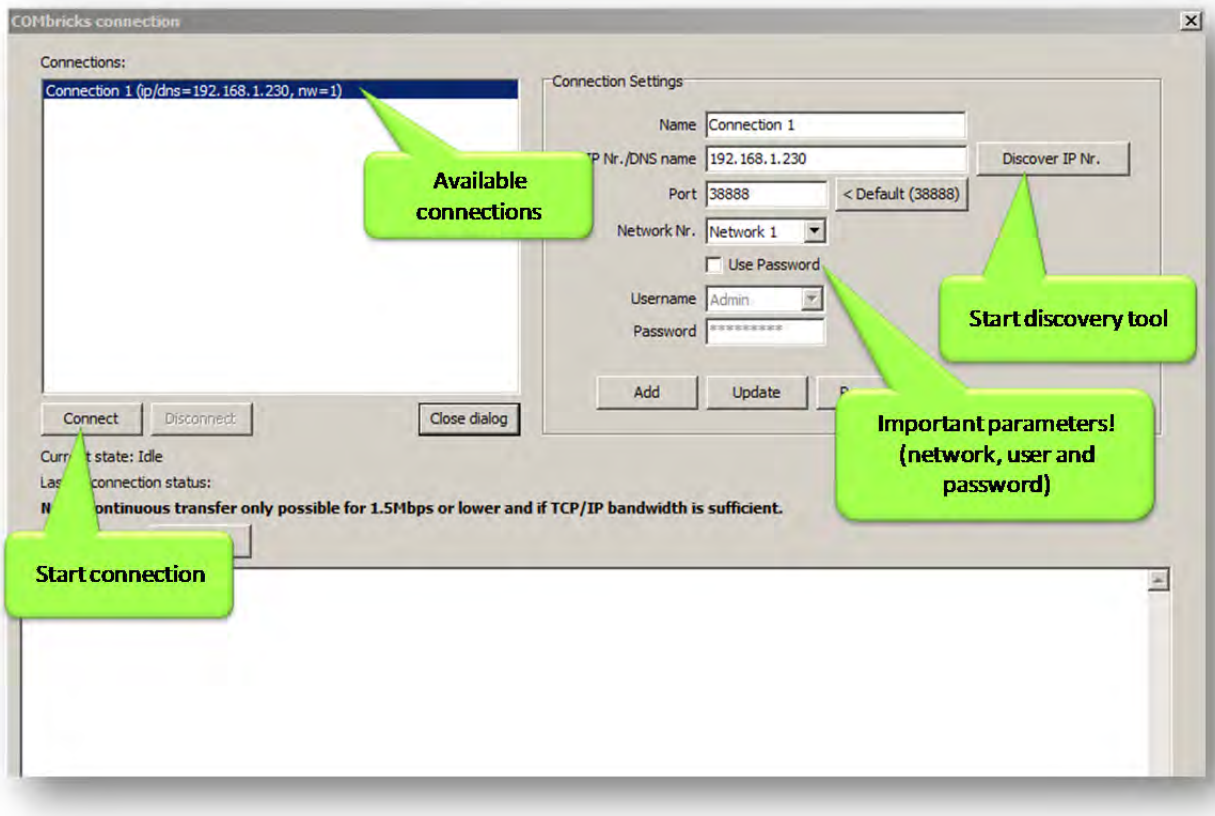


Fig. 45 - Setting up the connection

Important parameters for the connection and the streaming process:

- IP number
- User type and password
- Network number

If one of the connection parameters is incorrect, the connection will not be established or no data is streamed. It is recommended to start the discovery tool to verify the IP connection.

Multiple connection instances can be saved and loaded each with their own connection parameters.

COMbricks itself can handle 1 streaming connection, but on the PC multiple ProfiTrace instances can be opened that simultaneously communicate with different COMbricks units.


© PROCENTEC 2014 - Copyright - all rights reserved

## 5.9 Summary of Statistics and Events

This paragraph contains a description of the items listed in the statistics and/or events.

| Statistics | Description | Critical |
|---|---|---|
| **Lost** | How many times a device in data exchange fails to respond after the maximum retries have been reached. Lost is retriggered when the device recovers back to data exchange and fails to respond again.<br>- Live List will indicate a yellow colored address (after time-out).<br>- When the device was already lost after the activation of ProfiTrace Lost will not be updated. Only Syncs will indicate the problem. | YES |
| **Syncs** | Attempts of the master to contact a device for the first time or establish a communication relationship. This occurs in most cases after station lost, device unavailability or startup of the master. In the statistics view this values adds up relatively quick.<br>- Some DCS systems read diagnostics all the time with Syncs ON.<br>- Live List could indicate a yellow colored address. | YES (in most cases) |
| **Repeats Total** | Attempt of the master to get a response from an unanswered telegram. The response did not come or has content errors. The maximum amount of repeats a master attempts can be customized in the master.<br>- When the retries have reached the limit, the master goes to the Syncs state | YES |
| **Repeats Max (worst sequence)** | This value represents the highest amount of retries that were attempted on this specific device in one cycle.<br>- This value will never get higher than the retry value that has been setup in the master. | YES |
| **Illegal Responses** | The response to a master request telegram contains framing errors (parity error, wrong FCS, SD error, etc). This mostly happens with EMC and cabling problems.<br>- When this statistic adds up relatively quick, it could also be a double device address. | YES |


© PROCENTEC 2014 - Copyright - all rights reserved

| Statistics | Description | Critical |
|---|---|---|
| **Internal Diag** | Negative responses at the lowest telegram level (Layer 2: FDL) and are rare. In the telegram recording you will see SD1 telegrams with for example an RS (Reject Service) or RR (Reject Resources).<br>Examples of situations where this occurs:<br>- DP-V1 connections to DP-V0 devices.<br>- Watchdog has run out on a DP device and the master sends a Data Exchange output telegram.<br>- Non-certified DP devices that do not support a specific service/command or cannot handle a command in time. | NO |
| **External Diag** | All responses from Get Diagnostics requests from all masters. | NO |
| **Diag while in DX** | Only responses to Get Diagnostics requests from the master that controls this slave (primary class 1 master).<br>- When the first 2 bytes of the diagnostic content contains a 08 0C or 08 04, a red indicator blinks in the left corner of the device in the Live List (critical content). | YES (in most cases) |
| **Master lost** | One of the masters is not active after getting the token; it is not responding anymore. Note that this also happens when a Class 2 DP-V1 master is disabled. | YES (in most cases) |
| **Baudrate change** | The detected baudrate of the PROFIBUS network has been changed. | YES (in most cases) |
| **Low/High signal (Bargraph)** | At least one station has a too low (in DP and PA networks) or too high (in PA networks only) amplitude. | YES |
| **Redundancy Failure** | One of the redundant cables has failed. | NO |
| **PA signal and levels** | PA values such as jitter, DC voltage or DC noise out of range. | YES |
| **Fiber Optic signal** | Fiber Optic signal is out of range. | YES |


© PROCENTEC 2014 - Copyright - all rights reserved

# 6 Head Station 1A/1B/1C

**The Head Station is the primary element of COMbricks and has to be inserted in the most left slot of the fixed backplane socket. It schedules the interaction between all modules and provides data storage and an Ethernet interface for the user.**

## 6.1 Overview

Type 1A is the basic model and ALL Head Stations are hardware technically identical with type 1A.

Type 1B and 1C are enhanced types that contain a ProfiTrace core and advanced web server for permanent remote maintenance of the PROFIBUS installation over Ethernet (hardware is identical as a type 1A).

- Type 1A: NO monitoring capabilities, no streaming, no OPC
- Type 1B: Monitors 1 PROFIBUS network + ProfiTrace 2 streaming + OPC **(since June 2013)**
- Type 1C: Monitors 4 PROFIBUS networks + ProfiTrace 2 streaming + OPC

For the monitoring with ProfiTrace OE, repeater modules or slave modules are required to provide PROFIBUS telegrams on the backplane network.

Head Station type 1B and 1C are able to stream live data directly in the ProfiTrace 2 software package over Ethernet. ProfiTrace 2 will run with full monitoring functionality and the user can benefit from its features.

The Head Station provides power to all modules through its redundant power supply.

Table 3 - Head Station comparison

| | Head Station 1C (101-20011C) | Head Station 1B (101-20011B) | Head Station 1A (101-20011A) |
|---|---|---|---|
| **Backplane networks (for repeater modules)** | 4 | 4 | 4 |
| **Web server** | YES | YES | YES |
| **CommDTM / Class 2 master** | YES | YES | YES |
| **SNMP** | YES | YES | YES |
| **ProfiTrace OE networks (for monitoring)** | 4 (**ALL networks**) | 1 (**network 1**) | - |
| **Oscilloscope features** | YES | YES | - |


© PROCENTEC 2014 - Copyright - all rights reserved

| | Head Station 1C (101-20011C) | Head Station 1B (101-20011B) | Head Station 1A (101-20011A) |
|---|---|---|---|
| **ProfiTrace 2 live streaming** | YES | YES | - |
| **OPC** | YES | YES | - |

## 6.2 Relay contact

With the relay contact it is possible to react on an event (retries, lost, bus voltage too low, etc). It is also possible to control the relay manual or on a timer. Refer to **Paragraph 4.6** for details. The relay is capable of switching 0.5 A - 170 VAC.

## 6.3 SD card

The SD card is used to store ProfiTrace file recording data, logs, the GSD info file and backup settings.

By default a 2 GB SD card is supplied together with the Head Station, but it can be exchanged by an SD card with a maximum size of 32 GB.

The SD card is addressable directly with an FTP client. In the FTP software the SD card has a drive letter with a directory structure, on which files can be read and written from and to the SD card. When the password is set in the web server, this same password has to be used by the FTP software to establish a connection.

### 6.3.1 Inserting/replacing the SD card

The socket is located on the front plate of the Head Station.

To remove the SD card, gently press it inwards. The SD card is unlocked and released from the socket.

With insertion, just insert the SD card in the socket and press it inwards. The SD card socket has a polarity to make sure it is not inserted backwards.

The SD card is hot swappable, but there is a risk that monitoring data is lost when the system wants to write at exactly the same time as the removal or insertion.


© PROCENTEC 2014 - Copyright - all rights reserved

### 6.3.2 Life cycle of the SD card

The life of a SD card depends on the following factors:
- Number of read and write operations
- Ambient temperature

At an ambient temperature of up to 60 °C the SD card has a service life of 10-years at maximum 100000 write/delete sequences.

If the maximum number of read and write operations has exceeded the limits, data loss may be possible.

### 6.3.3 Directories and files

The following directories have been standardized for COMbricks and are in most cases located on the SD card;

| Directories | Description |
|---|---|
| **/Busmon** | ProfiTrace message recoding files<br>(Head Station type 1B and 1C only) |
| **/Log** | Log files |
| **/Doc** | Contains the web server download page<br>(See **Paragraph 4.9** on how to set it up) |

| Files and extensions | Description |
|---|---|
| **Journal.DAT** | System file<br>(Do not delete or remove it) |
| **GSD.BIN** | File with GSD information for the Live List.<br>(Generated with the ProfiTrace 2 software).<br>See **Paragraph 5.1.1** how to generate this file. |
| **SETTINGS.INI** | Head Station settings<br>(IP address, name, location, etc.) |
| **LICxxxxxxx.TXT** | License files |
| | |
| **.PTC** | ProfiTrace OE message recoding files. (located in the "*Busmon*" directory).<br>The files can be opened with ProfiTrace V2.5.3 and higher (See **Paragraph 5.3** on how to generate PTC files). |


© PROCENTEC 2014 - Copyright - all rights reserved

| Files and extensions | Description |
|---|---|
| **.PKG** | Firmware files |
| **.CSV** | Log files<br>(located in the "*Log*" directory) |

## 6.4 Audio jack

Not supported. This connector is removed from hardware versions higher than 1.5.


© PROCENTEC 2014 - Copyright - all rights reserved

## 6.5 Switch navigation of the Head Station 1A/1B/1C

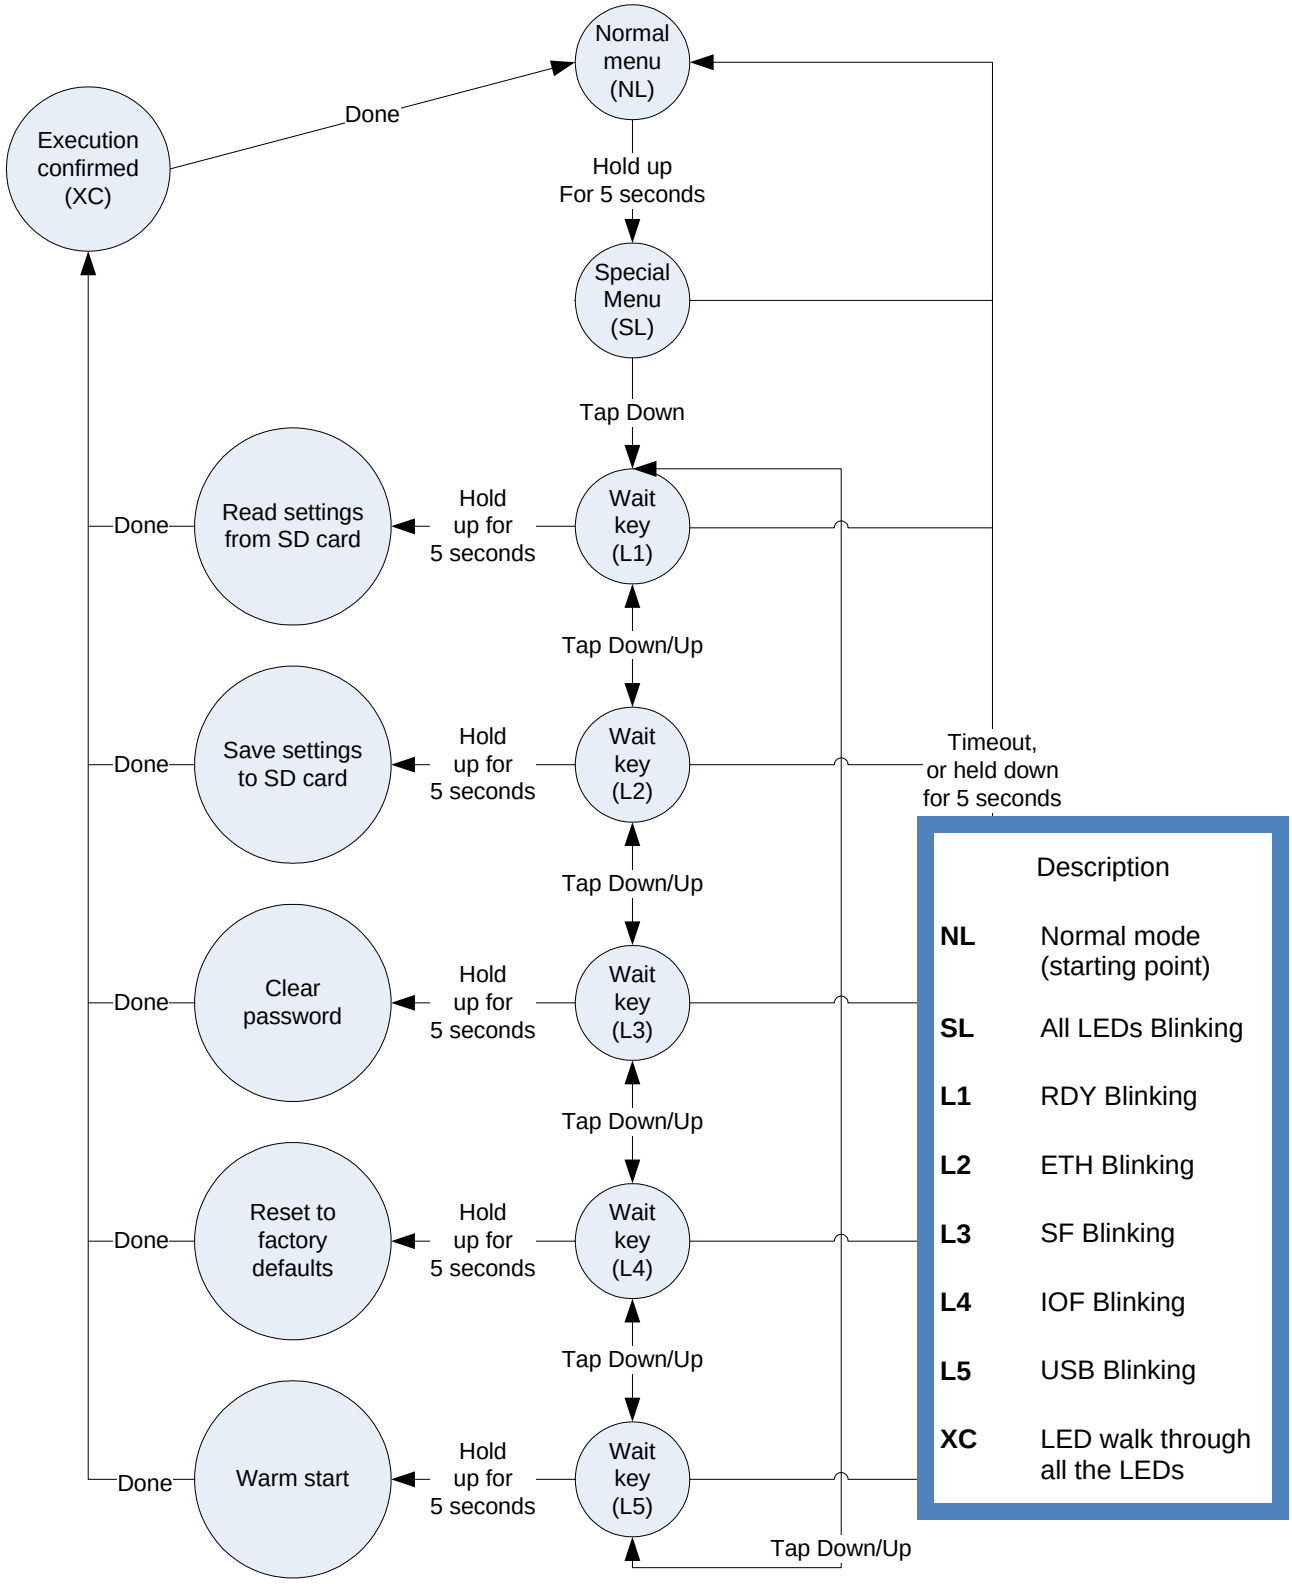



© PROCENTEC 2014 - Copyright - all rights reserved

## 6.6 LEDs on the Head Station

In the tables below the LEDs of the Head Stations during normal operation are described. The LED conditions in firmware update and menu mode are not described here.

| RDY - Ready | OFF | Blinking | ON |
|---|---|---|---|
| **Starting up** | | X | |
| **Run** | | | X |

| ETH - Ethernet | OFF | Blinking | ON |
|---|---|---|---|
| **No Ethernet link established** | X | | |
| **DHCP configuration is pending** | | X | |
| **Ethernet link established** | | | X |

| SF - System failure on the Head Station | OFF | Blinking | ON |
|---|---|---|---|
| **OK** | X | | |
| **Backplane voltage too low (under 5,5 VDC) or current draw to high (above 2,5 A)** | | Fast | |
| **Clock-chip error** ***(contact your local Distributor or PROCENTEC)*** | | Slow | |
| **Internal component or firmware error** ***(contact your local Distributor or PROCENTEC)*** | | | X |


© PROCENTEC 2014 - Copyright - all rights reserved

| IOF - Failure on modules | OFF | Blinking | ON |
|---|---|---|---|
| **OK** | X | | |
| **High speed module in slot 11-32** | | | X |
| **More than 32 modules found** | | | X |
| **Module NOT identified** | | | X |

| USB - Mini USB connecting | OFF | Blinking | ON |
|---|---|---|---|
| **No USB connection** | X | | |
| **USB connection** | | | X |

| SD card | OFF | Blinking | ON |
|---|---|---|---|
| **No SD card inserted** | X | | |
| **SD card inserted (activity)** | | X | |
| **SD card inserted (no activity)** | | | X |


© PROCENTEC 2014 - Copyright - all rights reserved

# 7 Repeater modules (RS 485)

**The standard RS 485 PROFIBUS repeater modules can be a 1 or 2 channel type. Suitable for 12 Mbps with screw terminals, additional DB9 connector, onboard termination, diagnostic LEDs and redundancy feature.**

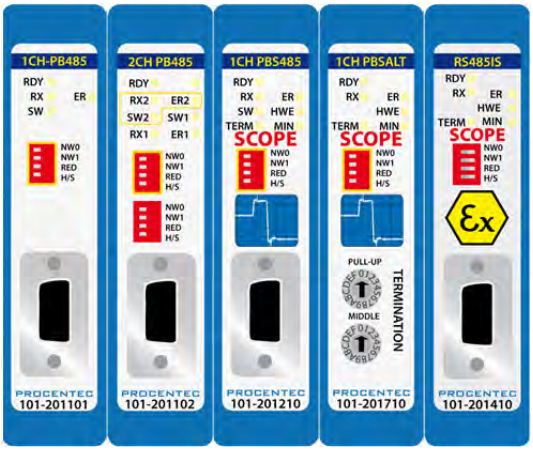


The advanced 12 Mbps core of the repeater module is identical as the ProfiHub and repeater B1; it can be cascaded unlimitedly and has increased RS 485 strength. It does not have the frustrating short-circuit bug and the bus communication is constantly monitored for glitches which are digitally filtered out. Every channel has on-board switchable termination and is able to drive 31 devices.

The repeater channels are directly connected with the ProfiTrace OE core in the 1B/1C Head Station. Busmonitor data is directly available in the web server.

10 Repeater modules can be inserted in the backplane. This is independent of the amount of channels on the repeater modules.

This chapter does not apply to the characteristics of the RS 485-IS Barrier module. It has been listed for comparison purposes only. For a detailed description of the RS 485-IS Barrier module, refer to chapter 8.

| | 1CH Repeater module (101-201101) | 2CH Repeater module (101-201102) | 1CH SCOPE Rep. (101-201210) | 1CH SALT repeater module (101-201710) | 1CH RS485-IS Rep. (101-201410) |
|---|---|---|---|---|---|
| **Channels** | 1 | 2 | 1 | 1 | 1 |
| **Networks** | 4 | 4 | 4 | 4 | 4 |
| **Redundancy** | YES | YES | YES | YES | YES |
| **ProfiTrace (busmonitor)** | YES | YES | YES | YES | YES |
| **Oscilloscope (bus signals / bargraph)** | NO | NO | YES | YES | YES |
| **EMC and cable improving** | NO | NO | NO | YES | NO |
| **Intrinsically safe** | NO | NO | NO | NO | YES See chapter 8 |


© PROCENTEC 2014 - Copyright - all rights reserved

## 7.1 Multiple channels per module

Repeater modules contain 1 or 2 channels. **Fig. 46** illustrates a 2 channels repeater module. Every channel can be assigned to a specific backplane network by means of the NW dipswitches or the web server.

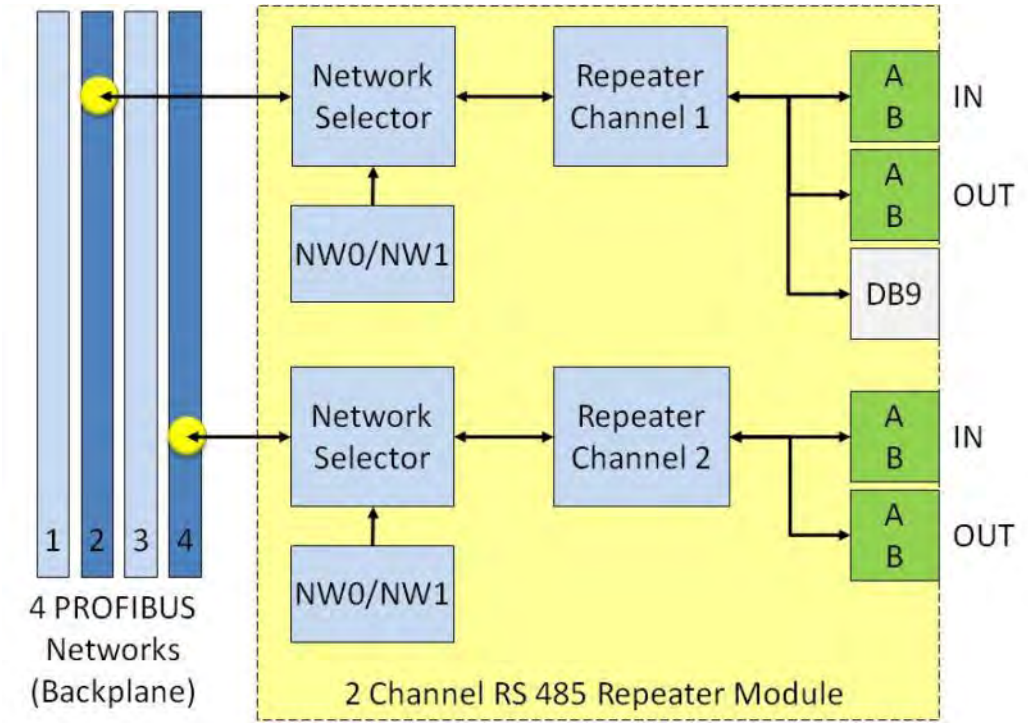


Fig. 46 - Multiple channels per module

ProfiTrace OE is able to monitor 4 PROFIBUS networks with 2 pieces of 2 channel repeater modules.

The DB9 connector is 1-on-1 with all connectors of channel 1 (see **Fig. 46**).

## 7.2 Channel structure

Every Channel is electrically isolated and internally connected to one of the transparent PROFIBUS networks on the backplane (see **Fig. 47**).

The shielding of the PROFIBUS cable can be directly grounded or indirectly grounded (see **Paragraph 7.4**).

The termination is switchable and powered by the repeater module. A LED on the front of the module or in the web server diagnostics indicate the status of the termination switch.

When the termination is switched ON, the OUT connector of the specific channel is disconnected. If it is activated on Channel 1, the DB9 connector is NOT affected.
A possible termination on the connected plug could jeopardize the communication on the segment.


© PROCENTEC 2014 - Copyright - all rights reserved

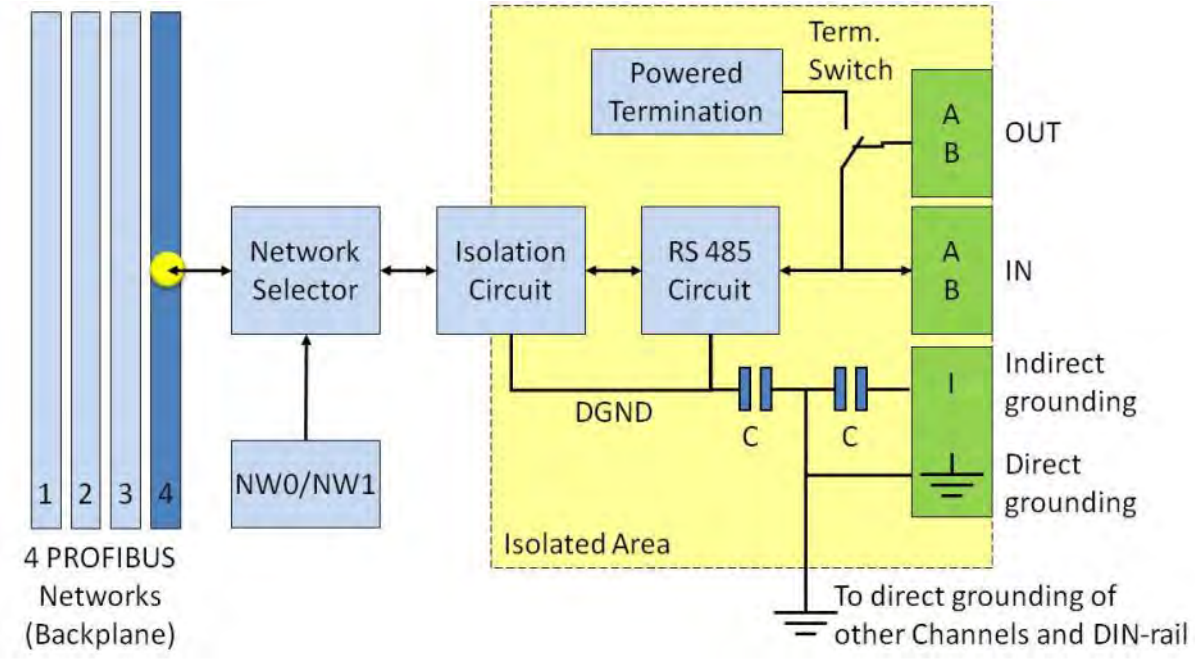


Fig. 47 - Channel structure of the repeater modules

## 7.3 EMC barrier

The galvanic isolation and bit recovery circuit in the repeater modules, make the COMbricks perfect to act as an EMC barrier for sensitive areas.

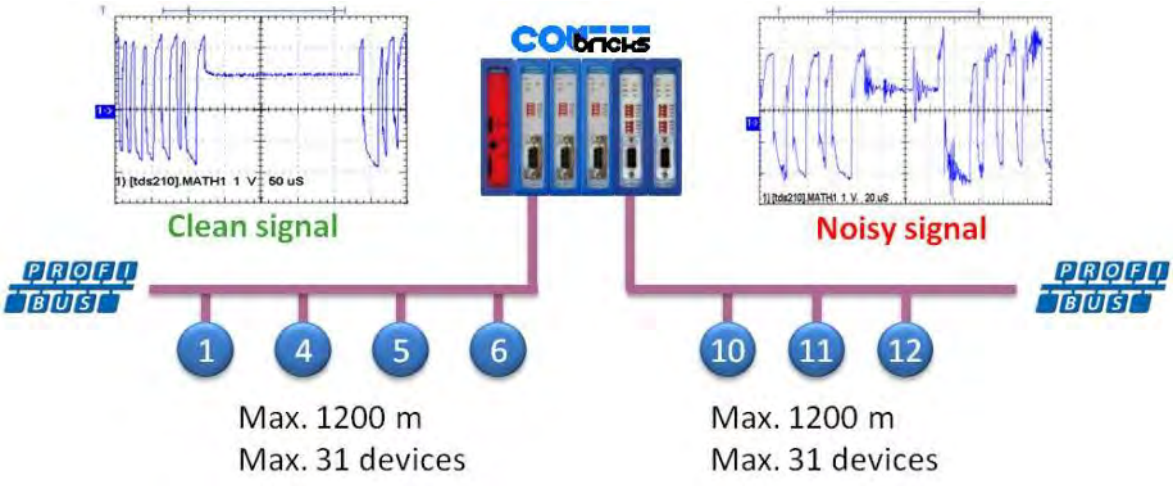


Fig. 48 - COMbricks as EMC barrier


© PROCENTEC 2014 - Copyright - all rights reserved

## 7.4 Grounding system

There are 3 methods to ground the PROFIBUS cable:
1) Direct grounding
2) Indirect grounding (through a capacitor)
3) Combination of direct and indirect.

In most cases it is recommended always to use Direct Grounding with the power supply and the shielding of the PROFIBUS cables. If you do not want to ground all or some cables to the common ground, the cable shielding should be connected to pin 'I'. A capacitor with a parallel high value resistor will separate the 2 potentials (see Fig. 47).
If the Direct Grounding is connected with the Indirect Grounding by mistake, the Direct Grounding "wins".

## 7.5 Baudrate detection

It takes less than 10 seconds for a module to detect the baudrate (in practice it will be around 3 seconds). The detection mechanism is started when telegrams enter the module from the field side (not the backplane). If the baudrate has been detected, the 'ER' LED will be OFF.

When the baudrate has been detected, the module has to "see" a valid telegram within 50 seconds, otherwise the module unlocks the baudrate and the 'ER' LED will be ON.

## 7.6 PROFIBUS DP cable lengths

The length of the PROFIBUS cable connected to the repeater channels should comply with the PROFIBUS DP cable specifications for RS 485.

| Baudrate (kbps) | 9.6 | 19.2 | 45.45 | 93.75 | 187.5 | 500 | 1500 | 3000 | 6000 | 12000 |
|---|---|---|---|---|---|---|---|---|---|---|
| Segment length (m) | 1200 | 1200 | 1200 | 1200 | 1000 | 400 | 200 | 100 | 100 | 100 |

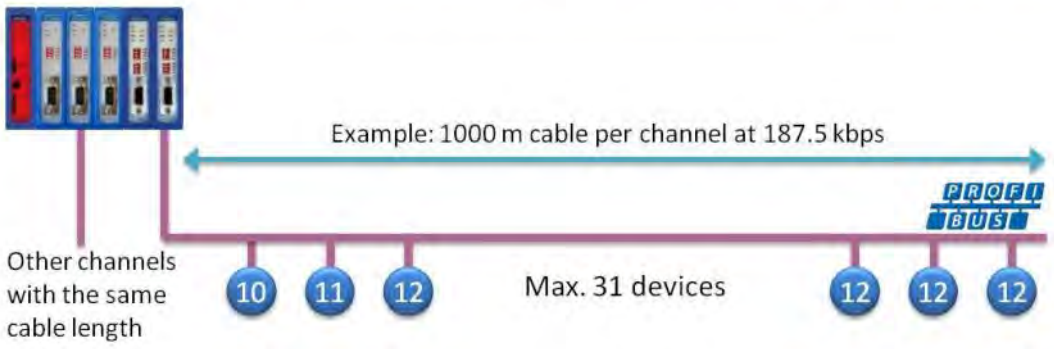


Fig. 49 - PROFIBUS DP cable lengths


© PROCENTEC 2014 - Copyright - all rights reserved

## 7.7 PROFIBUS DP cable specifications

The cable should comply with the PROFIBUS DP cable specifications for RS 485.

Table 4 - PROFIBUS DP cable specifications

| Parameter | Value | Parameter | Value |
|---|---|---|---|
| **Wires** | 2 (twisted) | Wire diameter | ≥ 0.64 mm |
| **Impedance** | 150 Ohm (3 to 20 MHz) | Wire area | ≥ 0.32 $mm^2$ |
| **Capacity** | ≤ 30 pF/m | Shielding resistance | ≤ 9.5 Ohm/km |
| **Loop resistance** | ≤ 110 Ohm/km | | |

## 7.8 PROFIBUS DP cable types

The repeater modules can handle PROFIBUS cable based on multiple protection sheaths with a diameter between 6 to 12 mm (when the grounding clip is used).

- Robust cable
- Food cable
- Ground cable
- Trailing cable
- Festoon cable
- Fire and heat cable
- Flexible cable
- Shipboard cable
- Rodent protection cable

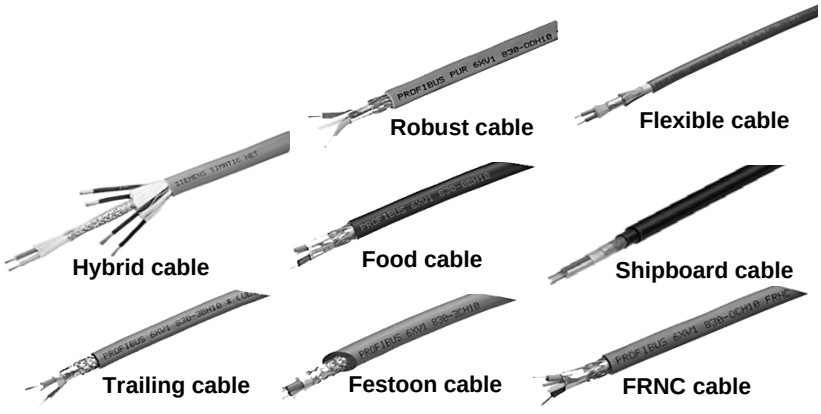


Fig. 50 - Supported PROFIBUS cable types


© PROCENTEC 2014 - Copyright - all rights reserved

## 7.9 Redundancy

The bus redundancy technology of the repeater modules is very advanced. A redundant system can be built using 10 parallel cables. This architecture provides extremely high availability. It is compatible with the RLM01 from ABB.

The redundancy procedure is very simple;
All the repeater channels of the specific application have to be assigned to the same network group. The repeater channels that carry the redundant task have to be activated with the RED switch. After a reset or power-up the redundancy system works directly.

COMbricks locks itself to the first redundant channel that has a valid start delimiter.
If this channel does not have valid telegrams anymore, COMbricks locks itself to the next redundant channel with a valid start delimiter. There is no logic which redundant channel is selected.

It is recommended to use single-channel repeater modules for redundant applications. If a module should fail, the replacement (pull/plug and wiring) will not affect the other redundant repeater modules (channels).

**Fig. 51** illustrates an application with 3 redundant segments. 3 Repeater modules of each COMbricks are set with the RED switch set to ON and are wired to the redundant segments.

The devices and the controller(s) are connected to the regular repeater modules. The maximum amount of devices which is allowed behind a regular repeater module depends on the application (between 1 and 31 devices).

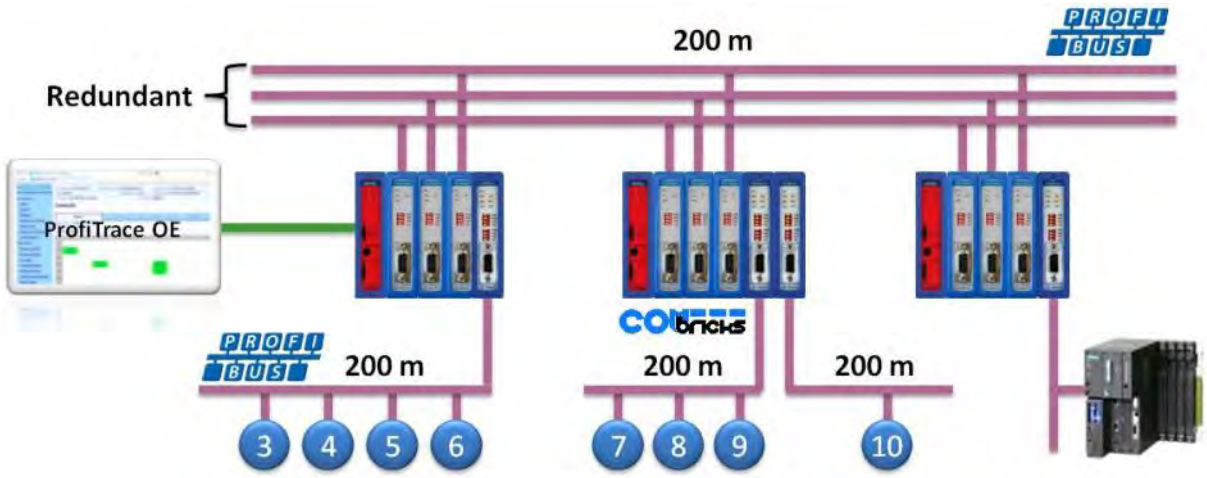


Fig. 51 - Application with 3 redundant segments


© PROCENTEC 2014 - Copyright - all rights reserved

## 7.10 Mixing with other repeaters

Normally it is advised not to mix regular repeaters because of the limitation in cascading that these repeaters have (caused by the bit width alteration due to internal opto-couplers and digital electronics).

COMbricks regenerates the telegrams (same as a ProfiHub or B1 Repeater). This means there is just a small delay time, but no limitations in cascading.
If you mix COMbricks with other repeaters you only have to follow the cascading rules of the other repeater manufacturer. If the other repeaters are also from PROCENTEC, you can cascade and mix without problems.

Keep in mind that monitoring will fully work, but the SCOPE repeaters only measure the signals up to the first repeater module.

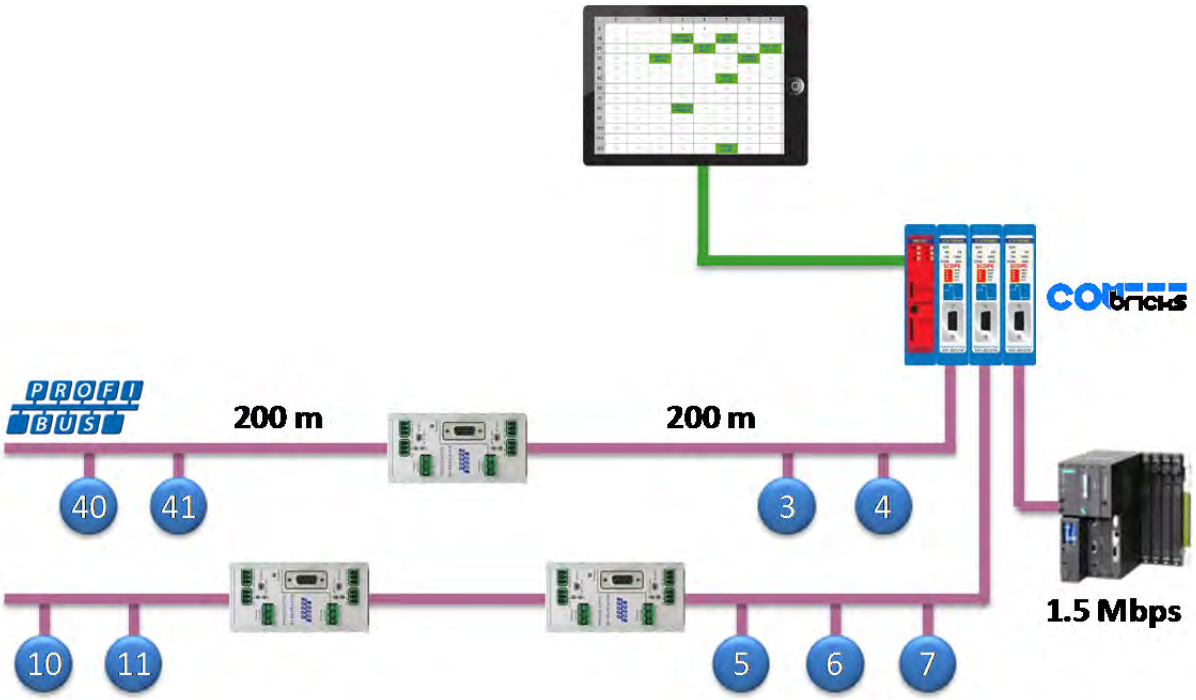



© PROCENTEC 2014 - Copyright - all rights reserved

## 7.11 LEDs of the repeater module

The LEDs on the repeater modules are very useful for visual diagnostics.

Table 5 - LEDs on the standard repeater module

| | OFF | Blinking | ON |
|---|---|---|---|
| **RDY** | ☹ Repeater module has NOT been configured yet. | 😐 Head Station is configuring the repeater module. | ☺ Repeater module has been configured and is operational |
| **RX** | 😐 NO valid telegrams detected on this channel. | ☺ 1 or more devices are communicating on this channel. | ☺ 1 or more devices are communicating on this channel. |
| **ER** | ☺ The baudrate has been detected. | ☹ Problem in the cabling has been detected on this channel. | ☹ This channel has not detected the baudrate (yet) or there is a problem with the wiring of the cable. |
| **SW** | Internal termination for this channel is OFF. | | Internal termination for this channel has been activated. |

Table 6 - Additional LEDs on the SCOPE repeater module

| | OFF | Blinking | ON |
|---|---|---|---|
| **MIN** | ☺ Valid telegram signal amplitude (> 2.5 V) | | ☹ Telegram signal amplitude is too low (< 2.5 V) |
| **TERM** | ☺ Valid idle voltage (~ 1 V). | | ☹ Idle voltage is too low (< 1 V) |
| **HWE** | ☺ Repeater is operational. | | ☹ Internal repeater error (contact PROCENTEC) |


© PROCENTEC 2014 - Copyright - all rights reserved

# 8 RS 485-IS Barrier module

**The COMbricks RS 485 Intrinsic Safety barrier is capable of creating segments for use in potentially explosive atmospheres. It complies with the specifications for PROFIBUS DP in IS segments and drives 31 RS 485-IS PROFIBUS DP devices. ProfiTrace and an Oscilloscope are integrated and also suitable for Intrinsic Safety.**

The RS 485-IS barrier is the only available product for remotely monitoring IS segments over Ethernet from the safe zone. Because of the permanent mounting of the barrier, the user does not have to touch the installation anymore. This avoids hot permits and other paper work.

As an alternative it can also be used as a busmonitor on existing IS segments created by 3rd party barriers.

The IS barrier can be mixed on the backplane with other COMbricks modules, such as the PROFIBUS PA, Fiber Optic and regular RS 485 modules.

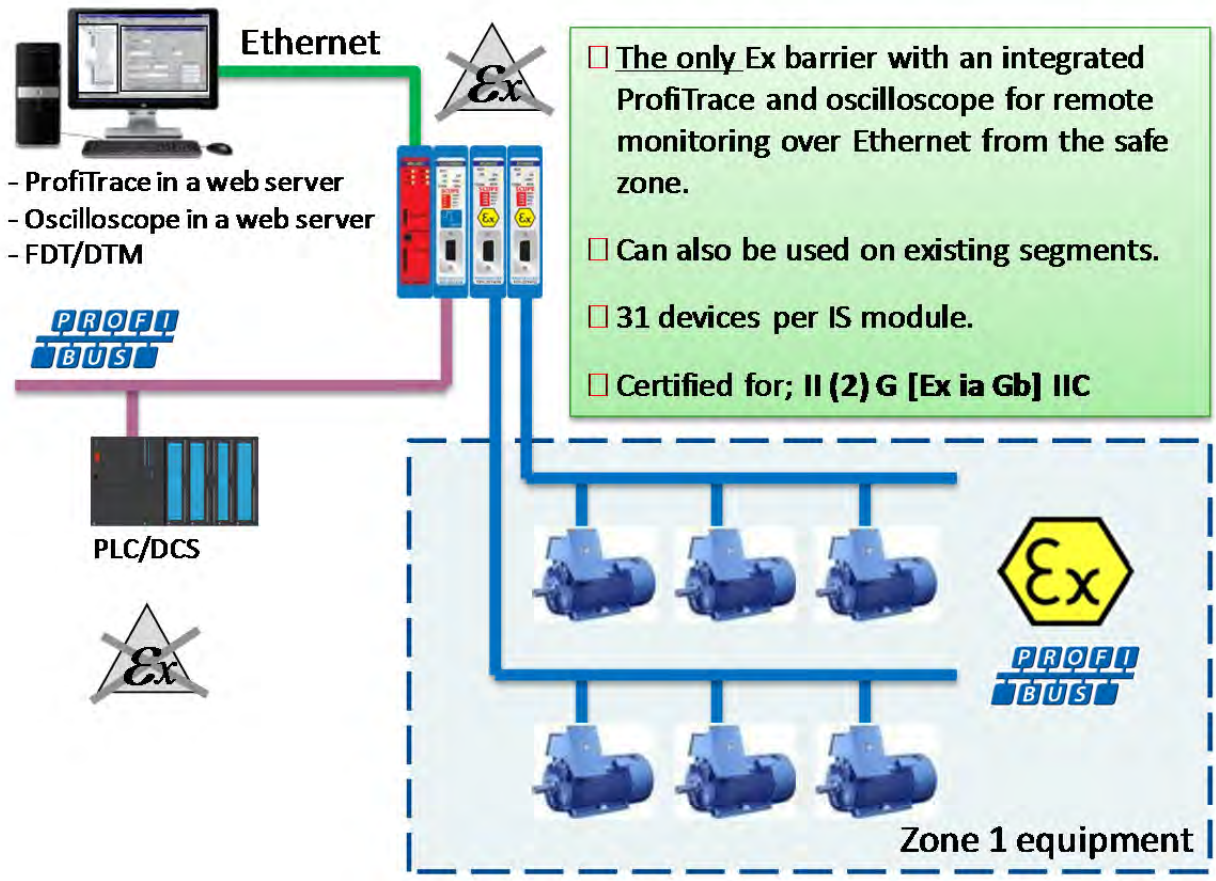
Ethernet
- ProfiTrace in a web server
- Oscilloscope in a web server
- FDT/DTM
PROFIBUS
PLC/DCS
The only Ex barrier with an integrated ProfiTrace and oscilloscope for remote monitoring over Ethernet from the safe zone.
Can also be used on existing segments.
31 devices per IS module.
Certified for; II (2) G [Ex ia Gb] IIC
Zone 1 equipment


© PROCENTEC 2014 - Copyright - all rights reserved

## 8.1 Compliancy and certificates

The RS 485-IS Barrier module complies with:

II (2) G [Ex ia Gb] IIC
EN-IEC60079-0: 2009
EN-IEC60079-11: 2012
EN-IEC60079-25: 2010
PROFIBUS International IS Installation Guidelines
Certification number: DEKRA 12ATEX019

DEKRA

# CERTIFICATE

## EC-Type Examination

(1) EC-Type Examination

(2) Equipment and protective systems intended for use in potentially explosive atmospheres - Directive 94/9/EC

(3) EC-Type Examination Certificate Number: DEKRA 12ATEX0192 Issue Number: 1

(4) Equipment: Profibus RS485-IS bus coupler Model COMbricks 1CH485-IS and Model COMbricks 1CH485-IS SCOPE

(5) Manufacturer: Exalon Delft B.V.

(6) Address: Rotterdamseweg 183C, 2629 HD Delft, The Netherlands

(7) This equipment and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.

(8) DEKRA Certification B.V., notified body number 0344 in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres given in Annex II to the directive.

The examination and test results are recorded in confidential test report number 215498200.

(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:

EN 60079-0 : 2012 EN 60079-11 : 2012

(10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.

(11) This EC-Type Examination Certificate relates only to the design, examination and tests of the specified equipment according to the Directive 94/9/EC. Further requirements of the directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate.

(12) The marking of the equipment shall include the following:

II (2) G [Ex ia Gb] IIC

This certificate is issued on 8 January 2013 and, as far as applicable, shall be revised before the date of cessation of presumption of conformity of (one of) the standards mentioned above as communicated in the Official Journal of the European Union.

DEKRA Certification B.V.

T. Pijpker
Certification Manager

Page 1/2

* Integral publication of this certificate and adjoining reports is allowed.
This Certificate may only be reproduced in its entirety and without any change.

DEKRA Certification B.V. Utrechtseweg 310, 6812 AR Arnhem P.O. Box 5185, 6802 ED Arnhem The Netherlands
T +31 26 3 56 20 00 F +31 26 3 52 58 00 www.dekra-certification.com Registered Arnhem 09085396

DEKRA

(13) SCHEDULE

(14) to EC-Type Examination Certificate DEKRA 12ATEX0192 Issue No. 1

(15) Description

Profibus RS485-IS Bus Coupler Model COMbricks 1CH485-IS provides an intrinsically safe RS 485 interface for a COMbricks system, that consists of various modules, connected to a backplane that provides power and communication to the modules.
The Bus Coupler provides galvanic isolation between the backplane and the RS 485 Profibus.

Profibus RS 485-IS Bus Coupler Model COMbricks 1CH485-IS SCOPE additionally provides an option to connect an oscilloscope to monitor the A and B lines of the RS 485 Profibus.

The Bus Couplers are intended to be installed outside the hazardous area or in an enclosure with a suitable type of protection.

Ambient temperature range -20 °C to +60 °C.

**Electrical data**

Supply and communication signals (backplane connector CN1):
$U_N$ = 5.75 V
P ≤ 3 W
$U_m$ = 250 V

RS 485 Profibus Interface (front connector CN2):
In type of protection intrinsic safety Ex ia IIC, with following maximum values:
$U_O$ = 4.2 V; $I_O$ = 149 mA (resistive); $P_O$ = 115 mW; $C_O$ = 6.8 µF; $L_O$ = 1.7 mH;
$U_i$ = 4.2 V, $C_i$ = 0 µF; $L_i$ = 0 µH.

The intrinsically safe RS 485 Profibus Interface complies with the specifications of clause 22.2.4 of EN 61158-2: 2010.

For a safe use of the Profibus RS 485-IS Bus Coupler, a reliable connection to the potential equalizing system shall be assured.

**Installation instructions**

The instructions provided with the equipment shall be followed in detail to assure safe operation.

(16) Test Report

No. 215498200.

(17) Special conditions for safe use

None.

(18) Essential Health and Safety Requirements

Covered by the standards listed at (9).

(19) Test documentation

As listed in Test Report No. 215498200.

Page 2/2

Form 100
Version 2 (2011-05)

Fig. 52 - Dekra ATEX Certificate


© PROCENTEC 2014 - Copyright - all rights reserved

## 8.2 Channel structure

Every Channel is electrically isolated and internally connected to the transparent PROFIBUS networks on the backplane (see **Fig. 47**).

The shielding of the PROFIBUS cable is grounded 1-on-1 to the DIN rail.

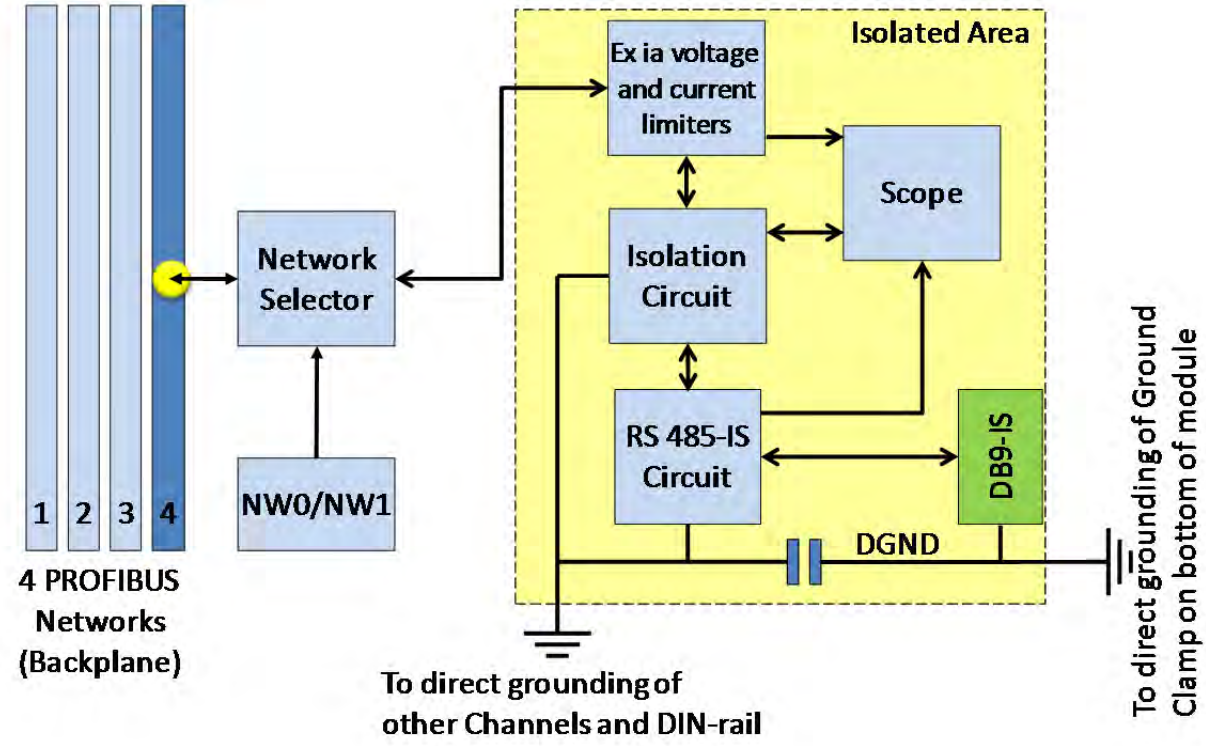


## 8.3 Connecting the cable

Connect the cable to the module with a DB9 connector on the front of the module. The DB9 connector must be suitable for use in Intrinsically safe networks, and the internal termination shall have a value of 200 Ohms.

Do not connect a cable which is connected to non-IS components. This will damage the internal electronics and makes the use of this module dangerous in Intrinsically Safe segments.

## 8.4 Grounding system

Always use Direct Grounding with the power supply and the shielding of the PROFIBUS cables. If you do not want to ground all or some cables to the common ground, the cable shielding should be connected to pin 'I'. A capacitor with a parallel high value resistor will separate the 2 potentials (see **Fig. 47**).
If by accident the Direct Grounding is connected with the Indirect Grounding, the Direct Grounding "wins".


© PROCENTEC 2014 - Copyright - all rights reserved

## 8.5 Baudrate detection

Refer to **paragraph 7.57.9** for a description of the baudrate detection.

## 8.6 PROFIBUS DP cable lengths

The length of the PROFIBUS cable connected to the repeater channels should comply with the PROFIBUS DP cable specifications for RS 485-IS.

| Baudrate (kbps) | 9.6 | 19.2 | 45.45 | 93.75 | 187.5 | 500 | 1500 |
|---|---|---|---|---|---|---|---|
| Segment length (m) | 1200 | 1200 | 1200 | 1200 | 1000 | 400 | 200 |

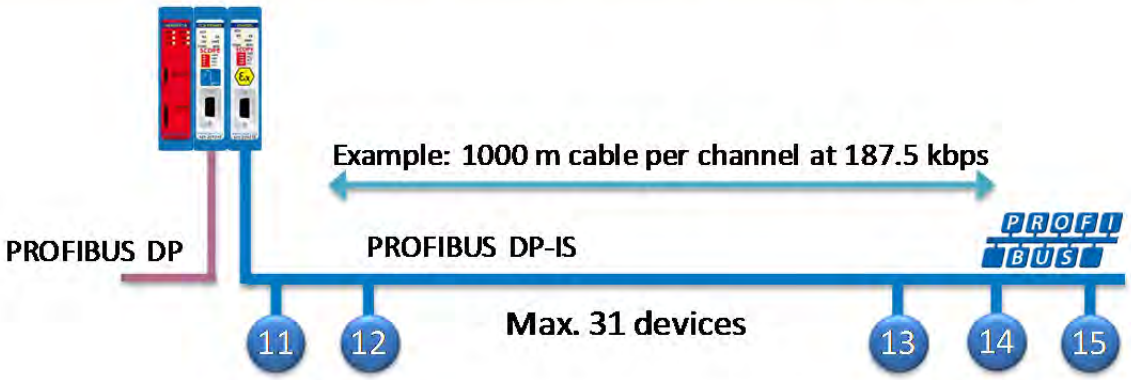


## 8.7 PROFIBUS DP cable specifications

The cable should comply with the PROFIBUS DP cable specifications for RS 485-IS.

Table 7 - PROFIBUS DP cable specifications

| Parameter | Value | Parameter | Value |
|---|---|---|---|
| **Wires** | 2 (twisted) | Wire diameter | ≥ 0.64 mm |
| **Impedance** | 135..165 Ohms at 3..20 MHz | Wire area | ≥ 0.34 $mm^2$ |
| **Capacity** | ≤ 30 pF/m | Shielding resistance | ≤ 9.5 Ohm/km |
| **Loop resistance** | ≤ 110 Ohm/km | | |


© PROCENTEC 2014 - Copyright - all rights reserved

## 8.8 LEDs and DIP switches of the repeater module

The LEDs on the repeater modules are very useful for visual diagnostics.

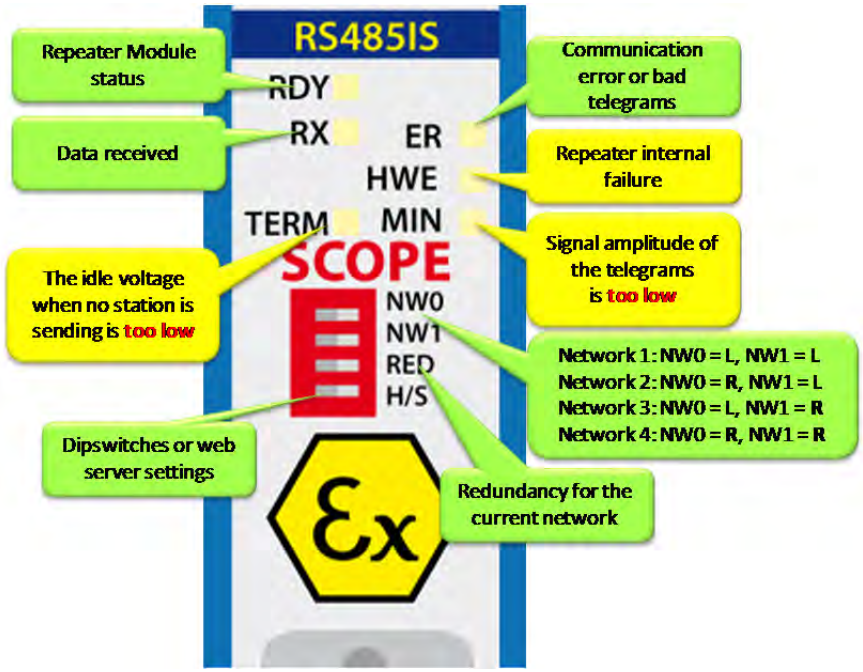


## 8.9 Redundancy

Refer to **paragraph 7.9** for a description of the redundancy system.


© PROCENTEC 2014 - Copyright - all rights reserved

# 9 Fiber optic module (FO)

**The 2 channel PROFIBUS fiber optic module is suitable for 3 km multimode cable. This module enables long cable distances and a galvanic isolation between devices and segments. It can be deployed in a point-to-point, bus, star and hub topology.**

The fiber optic modules can be placed side by side with repeaters modules. Just like any other communication module, the channels are directly connected with the ProfiTrace OE core in the Head Station. Busmonitor data is directly available in the web server.

COMbricks can easily be transformed to a fully dedicated fiber optic hub mixed with copper segments. The hub topology delivers an optimized delay time and live expansion.

The advanced 12 Mbps core of the fiber optic module can be cascaded unlimitedly with other fiber modules. It contains diagnostic LEDs and supports the redundancy feature. The fiber connection is utilized by 4 ST/BFOC connectors.

## 9.1 Topologies

The COMbricks fiber optic module supports multiple topologies: point-to-point, bus, star and hub topology (see **Fig. 53**).

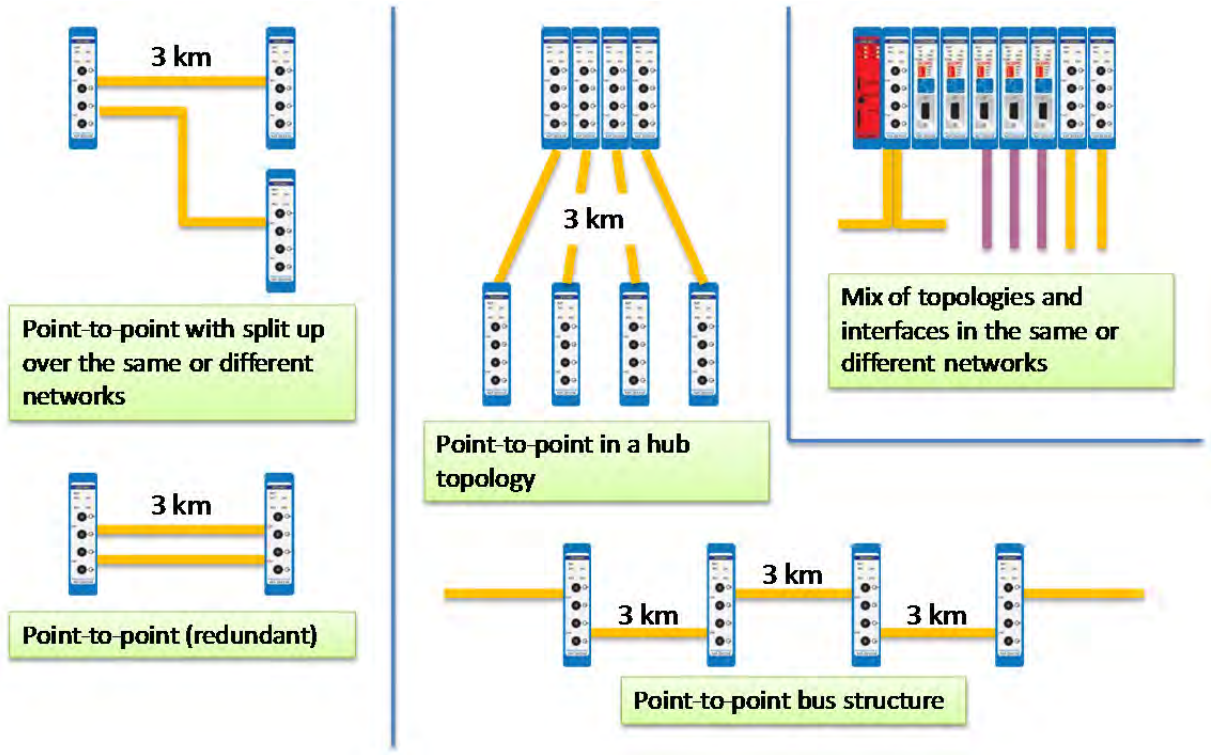


Fig. 53 - Fiber optic topologies


© PROCENTEC 2014 - Copyright - all rights reserved

Fiber optic communication is in all situations point-to-point where the receiver and transmitter wires are crossed. The combination of modules can create complex topologies like; bus and star/hub topologies. Every topology has its own advantages and disadvantages.

### 9.1.1 Bus topology with COMbricks

- Long delay time
- Long range possible (cascading)
- Extendable only at the ends (without adding new modules)

### 9.1.2 Star/Hub topology with COMbricks

- Relative short delay time (no busparameter adjustments required)
- Adjustable at any time
- More module are required
- High availability

## 9.2 Delay time

Fiber optic applications require a delay time calculation to adjust the Slottime busparameter in the configuration of the master(s). COMbricks complies with the following formulas:

$$\text{FO cable delay} = (5 * 10^{-6}) \times \text{FO cable length} \times \text{Baudrate}$$

Example: 1.5 Mbps, 3 km FO cable

$$\text{FO cable delay} = 0.000005 \times 3 \times 1500000 = 22.5 \text{ TBit}$$

$$\text{Tdelay} = (\text{FO cable delay} + (2 \times \text{Module delay time})) \times 2$$

Continued example: 1.5 Mbps, 22.5 TBit FO delay:

$$\text{Tdelay} = (22.5 + (2 \times 1.8)) \times 2 = \mathbf{52.2\ TBit}$$

This is between 2 fiber optic modules! More calculations have to be done when more modules are involved (see **Fig. 54**).

The total delay for the entire network has to be added to the Slottime setting in the busparameters of the master.


© PROCENTEC 2014 - Copyright - all rights reserved

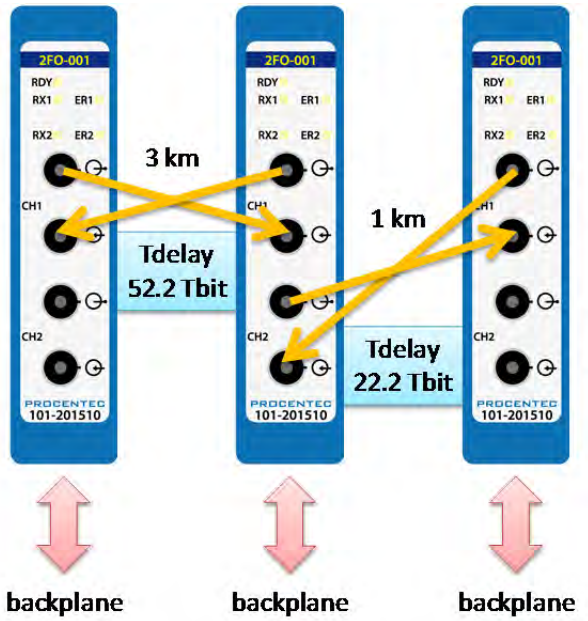


Fig. 54 - Fiber optic delay time

## 9.3 Baudrate detection

See **paragraph 7.5** for an explanation.

## 9.4 Fiber optic modules in redundancy mode

For correct pass-through of telegrams in redundancy mode, keep in mind that the delay time is longer in this mode. Increase the MinTSDR busparameter to at least 20 bittimes.


© PROCENTEC 2014 - Copyright - all rights reserved

# 10 PROFIBUS Slave Module PBS-001

**The PBS-001 PROFIBUS slave module enables your COMbricks set with real Remote I/O capabilities. A unique feature is that it can also be used as a DP/DP coupler, a PB/PN coupler or** gateway **between multiple PROFIBUS and/or PROFINET networks.**

The slave module can be placed side by side with any repeater module and can be used to control Digital Inputs or Outputs, or the relay card. The slave module has a PROFIBUS address, and busmonitor data is directly available in the web server of the Head Station.

It is possible to use the PBS-001 as a gateway between up to 10 PROFIBUS and/or PROFINET networks simultaneously. It transfers data on I/O level, which means that the master can be programmed to send data to the slave which is forwarded to another PROFIBUS or PROFINET module in the COMbricks backplane. Each module can transfer up to 64 words.

An additional benefit is that the DB9 connector of the PROFIBUS slave can be considered as a new segment. If the module is used with any another module on the same network number, then the signals coming out of the DB9 connector are re-generated in the PBS-001, in the same way as any repeater.

Make sure to update your PBS-001 module with the latest module firmware, and Head Station firmware 1.275 or higher. If an older firmware or GSD file is used, the module will not go into Data Exchange due to a parameter error. Please refer to **Chapter 14** for a guide to update your Head Station and module.

## 10.1 Status LEDs

The PBS-001 module has four diagnostic LEDs. These LEDs indicate whether the module is functioning properly.

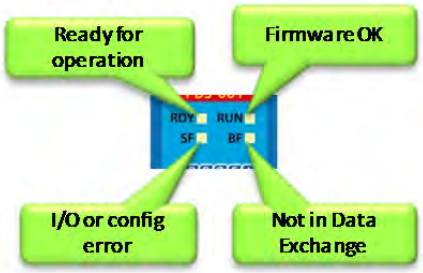



© PROCENTEC 2014 - Copyright - all rights reserved

### 10.1.1 RDY LED

The RDY LED indicates power supply and connection with the Head Station. Also a firmware update is indicated with this LED.

| LED | State | Meaning |
|---|---|---|
| RDY *(green)* | Off | No power supply, or PBS-001 module is faulty.<br>There is no voltage at the module, or the module has a hardware defect.<br>Remedy: Connect the 24 V DC supply voltage at the Head station. |
| | Flashing (1 Hz) | The PBS-001 module is connecting with the Head Station. This state is allowed for a short time (max 1 minute). |
| | Flashing (0.3Hz) | A backplane firmware update of the PBS-001 module is executed by the Head Station (max 1 minute). |
| | On | The connection with the Head Station is established. |

### 10.1.2 PROFIBUS LEDs

The PBS-001 module has three PROFIBUS diagnostic LEDs: RUN, SF (System Fail) and BF (Bus Fail).

| LED | State | Meaning |
|---|---|---|
| RUN *(green)* | Off | Internal application firmware is not running (PROFIBUS stack).<br>Remedy: Update application firmware. |
| | On | Internal application firmware is running (PROFIBUS stack). |
| SF *System Fail (red)* | Off | No error |
| | On | System error, or the received expected configuration (from configuration tool) does not match the actual configuration (I/O modules in the backplane, or gateway has a problem). |
| BF (red) | Off | PBS-001 module is in Data Exchange with a PROFIBUS master. |
| | On | PBS-001 module is not in Data Exchange with a PROFIBUS master. |

### 10.1.3 Dipswitches

The PBS-001 has four dipswitches, located on the bottom of the module. See for a description of the dipswitches.

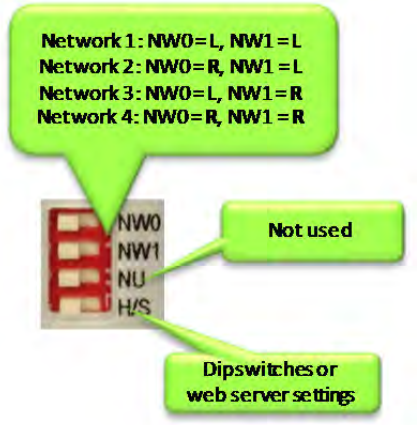
Network 1: NW0 = L, NW1 = L
Network 2: NW0 = R, NW1 = L
Network 3: NW0 = L, NW1 = R
Network 4: NW0 = R, NW1 = R
NW0
NW1
NU
H/S
Not used
Dipswitches or web server settings

Fig. 55 - Dipswitch descriptions


© PROCENTEC 2014 - Copyright - all rights reserved

## 10.2 Quick Start checklist

This checklist lists all the steps to a quick usage of the DP Slave module as a Remote I/O station.

| | | |
|---|---|---|
| **STEP 1:** | Provide the Head Station 1B or 1C with the latest firmware, at least v1.272. | (**7**) |
| **STEP 2:** | Add at least two empty backplane slots to the COMbricks set. | (**2.2**) |
| **STEP 3:** | Use the dipswitches on the bottom to assign the DP Slave module to the desired network. | **(2.4)** |
| **STEP 4:** | Assign a unique address to the module (either with rotary switches or software). | **(10.3)** |
| **STEP 5:** | Insert the DP Slave module in one empty slot. Do not insert it in slot number 11 or higher; this is not supported by the COMbricks. | **(2.3)** |
| **STEP 6:** | Insert a DI/DO/Relay card in the other empty slot. | **(2.3)** |
| **STEP 7:** | Provide power to the Head Station. | **(4.2)** |
| **STEP 8:** | Connect the Head Station to the Ethernet network with an Ethernet cable. | **(4.2)** |
| **STEP 9:** | Connect a DP cable to the DB9 connector, or make sure the module is assigned to another active COMbricks module. | |
| **STEP 10:** | Check the Channel List (in web browser) to see if the modules appear and check if the correct network and address is displayed. | **(4.2)** |

## 10.3 Setting up the slave module

Before inserting the module into your COMbricks set, first decide if you want to use the hardware address or if you want to use software addressing. Also decide to which network it listens by selecting the correct network number (see **paragraph 3.10.1**).

The baud rate cannot be set; the device detects the bus speed automatically.

If you wish to connect more than 4 networks, you need to make sure that these PBS-001 modules are not connected to one of the four available networks. The 5$^{th}$ up to (and including) the 10$^{th}$ module need to be set to ‘Not Connected’. To do this, set the H/S switch to ‘S’, reset the module and browse to the web server of your COMbricks. In the left menu choose ‘Network Config’, open the drop-down menu in the column ‘Set Network’ and select ‘N/C’ which means ‘Not Connected’. Then click ‘Save & Apply now’. This enables you to connect up to 10 different networks. Please note that all PBS-001 modules which are ‘Not Connected’ cannot be analysed by ProfiTrace in the Head Station.


© PROCENTEC 2014 - Copyright - all rights reserved

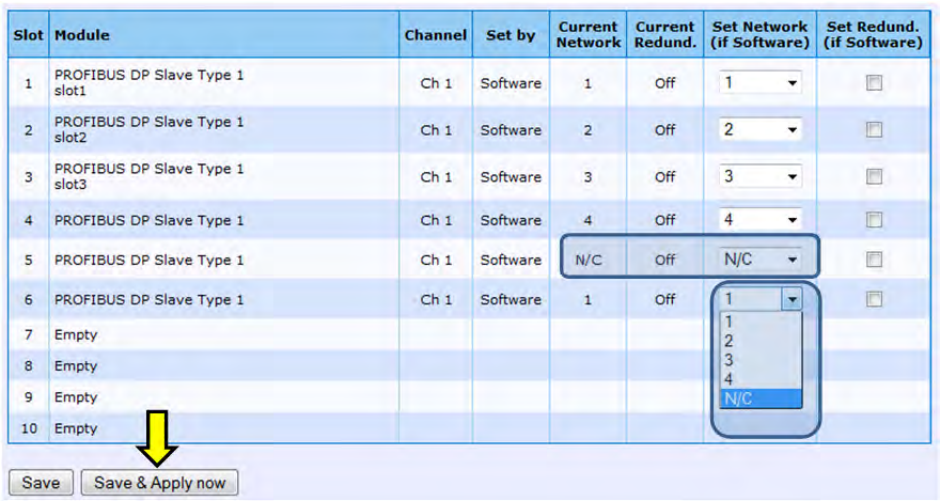
Slot
Module
Channel
Set by
Current Network
Current Redund.
Set Network (if Software)
Set Redund. (if Software)
1 PROFIBUS DP Slave Type 1 slot1 Ch 1 Software 1 Off 1
2 PROFIBUS DP Slave Type 1 slot2 Ch 1 Software 2 Off 2
3 PROFIBUS DP Slave Type 1 slot3 Ch 1 Software 3 Off 3
4 PROFIBUS DP Slave Type 1 Ch 1 Software 4 Off 4
5 PROFIBUS DP Slave Type 1 Ch 1 Software N/C Off N/C
6 PROFIBUS DP Slave Type 1 Ch 1 Software 1 Off 1
7 Empty
8 Empty
9 Empty
10 Empty
1
2
3
4
N/C
Save
Save & Apply now

### 10.3.1 Hardware addressing

Use the rotary switches on the bottom of the module to set the address. Make sure to use a suitable screwdriver to rotate the switches into the desired positions. The upper rotary switch indicates the value 10 times, the lower switch indicates its own value. The addressable range is 1 to 99. Examples:

| Rotary 10x: | Rotary 1x: | Resulting address: |
|---|---|---|
| 0 | 0 | Software addressing (see **10.3.2**) |
| 0 | 4 | 4 |
| 3 | 6 | 36 |
| 9 | 9 | 99 |

Now the module can be inserted in an empty backplane slot as described in **paragraph 3.6**.


© PROCENTEC 2014 - Copyright - all rights reserved

### 10.3.2 Software addressing

If you are using the software address, make sure the rotary switches are both set to 0. This enables a Class 2 Master to set the address with a telegram over PROFIBUS. The addressable range is 0 to 126 (where 126 is the default software address). The address is stored in non-volatile memory. When the module is power-cycled, the address will be loaded from non-volatile memory.
Use a configuration tool capable of sending “Set Slave Address” commands to change the address. Below is an example with ProfiCaptain:

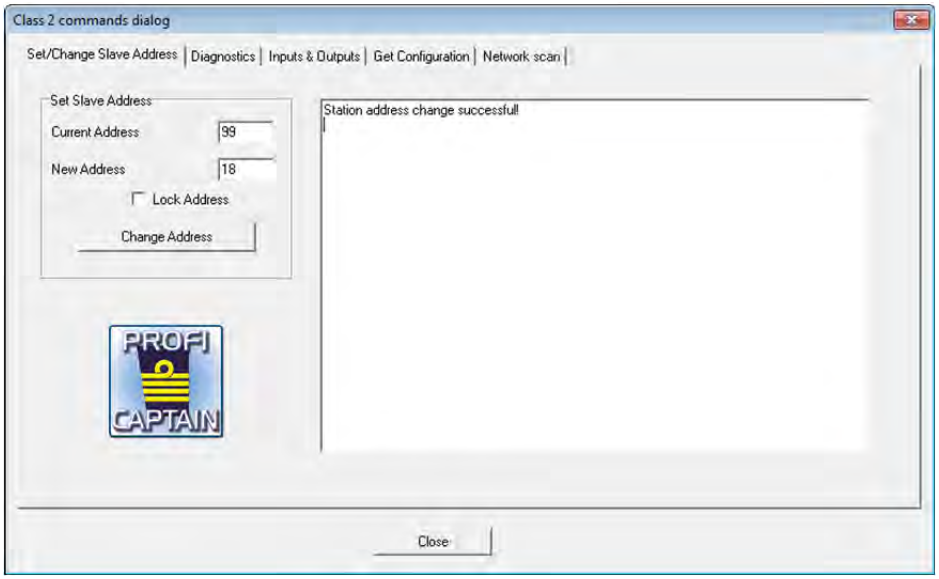


Fig. 56 - Software addressing of a slave

#### 10.3.2.1 Locking the software address

The “Set Slave Address” command also has a ‘Lock’ feature (see **Fig. 56**). If you enable this feature, this locks the device for any new attempts to change the software address. Unlocking is only possible as described in **paragraph 10.3.2.2**.

#### 10.3.2.2 Unlocking the software address

If the Lock feature was used in setting the address, the station address can only be unlocked if the PBS-001 is powered down and then powered up while the two rotary switches are NOT set to 0. This resets the software address to 126.


© PROCENTEC 2014 - Copyright - all rights reserved

## 10.4 Remote I/O mode

After the module has been set up with an address, you can start configuring it in the network with the configuration tool of the PLC. Refer to the manual of the supplier of your configuration tool for instructions for that tool.

This example, a typical COMbricks setup with remote I/O, is built up as follows (see **Fig. 57**)

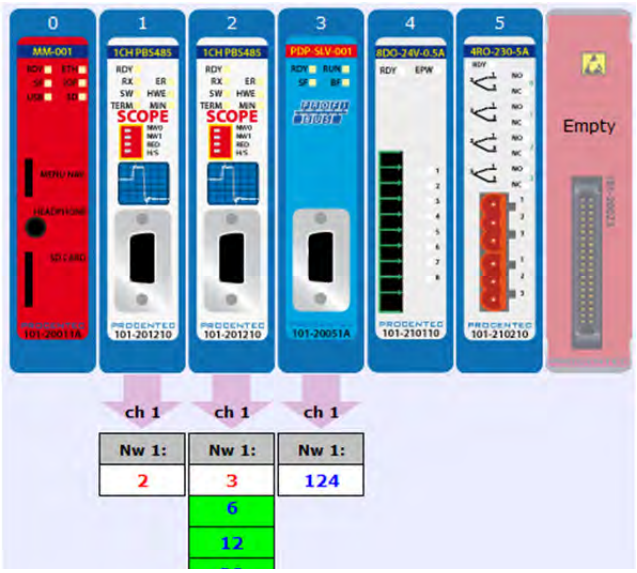


The first two slots are occupied by Scope Repeater modules, then a Slave PBS-001, then an 8DO module followed by a 4 Relay module.

The slave has been assigned an address of 124 and is not in Data Exchange yet. The master that will control the PBS-001 is on the first Scope Repeater with address 2.

Open your configuration tool and insert/import the PBS-001 GSD with filename PROC696F.gsd (download it from www.procentec.com/gsd).

Fig. 57 - COMbricks configuration screenshot of the web server

Then insert the correct modules into the configuration tool. In the first slots 1 and 2 insert two 'Empty Slots'. These are not really empty because they are occupied by Scope Repeater modules, but the PBS-001 cannot interact with them so they are considered to have no configuration.

In slot 3 place a PBS-001, in slot 4 an 8DO-24V-0.5A and the last module is the 4RO-230V-5A.

**Fig. 58** shows the complete configuration for this COMbricks system.

(124) PBS-001

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 0 | Empty Slot | | |
| 2 | 0 | Empty Slot | | |
| 3 | 2 | PBS-001 | | |
| 4 | 194 | 8DO-24-0.5A | 1 | 1 |
| 5 | 130 | 4RO-230V-5A | | 2 |
| 6 | | | | |
| 7 | | | | |

Fig. 58 - Configuration of the modules

**ATTENTION**: in some configuration tools, the slot numbers do **not** correspond to the slots displayed in **Fig. 57.** The modules are numbered from 0 instead of 1. This is not the case for all configuration tools. Make sure to check this before adding modules to your configuration.


© PROCENTEC 2014 - Copyright - all rights reserved

Even if a mistake has been made in the configuration, for example the output cards have been switched, the slave will go into Data Exchange. It will generate an external diagnostics message (see **Fig. 59**) which can be captured and read with a busmonitor such as ProfiTrace (see **Fig. 60**).

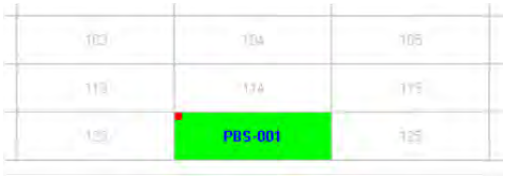


Fig. 59 - Slave indicating External Diagnostics

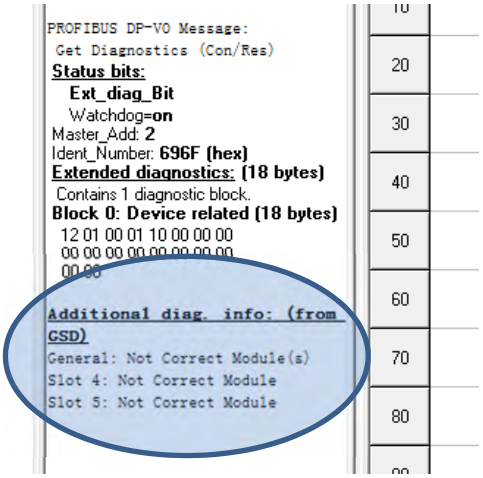


Fig. 60 - Diagnostics from the GSD in the Info Panel of ProfiTrace

### 10.4.1 Strict Check Configuration

This feature enables you to select if the slave should report a configuration mismatch, if this situation occurs. A configuration mismatch will take the slave out of Data Exchange. In the above example the slave was online and could send diagnostics. With Strict Configuration the configuration of the modules in the backplane must be exactly the same as the configuration in the PLC, or the slave will show up with a purple background in ProfiTrace as shown in **Fig. 61**. This feature gives you more control over how the slave behaves if a module is removed.

Fig. 61 - Slave indicating a configuration error or module mismatch with 'Strict check config' enabled

To activate this feature, go to the user parameter assignment of the PROFIBUS device in your configuration tool and change the value of the Strict Check Configuration from 'Disable' to 'Enable'. Remember to download the new configuration for the settings to take effect.

The slave will also generate diagnostics. These can be read as described in **Fig. 60**.


© PROCENTEC 2014 - Copyright - all rights reserved

### 10.4.2 Failsafe behaviour of outputs

The functionality in this paragraph is only available for PBS-001 modules with software version 2.1 or higher. Please refer to **paragraph 14.2** for a guide to update your module. Use the correct GSD file.

In case of failure of the master, cable, COMbricks Headstation or backplane, the outputs of the COMbricks modules can be set to a failsafe state. This happens after a certain time-out period during which the slave did not receive any telegram from its master. This time-out is called the watchdog in the master configuration.

You can configure the failsafe behaviour in the 'module parameters' of the master configuration tool. The following options are available for fail-safe state:

- All outputs to 0x00 (off)
- All outputs to 0xFF (on)
- Keep last value (no change)
- Pre-defined value (configurable)

Open the properties of a COMbricks output module (generally by double-clicking on it) in the configuration tool and select 'Parameter Assignment' or 'Module Parameters'. A screen similar to **Fig. 62** will appear:

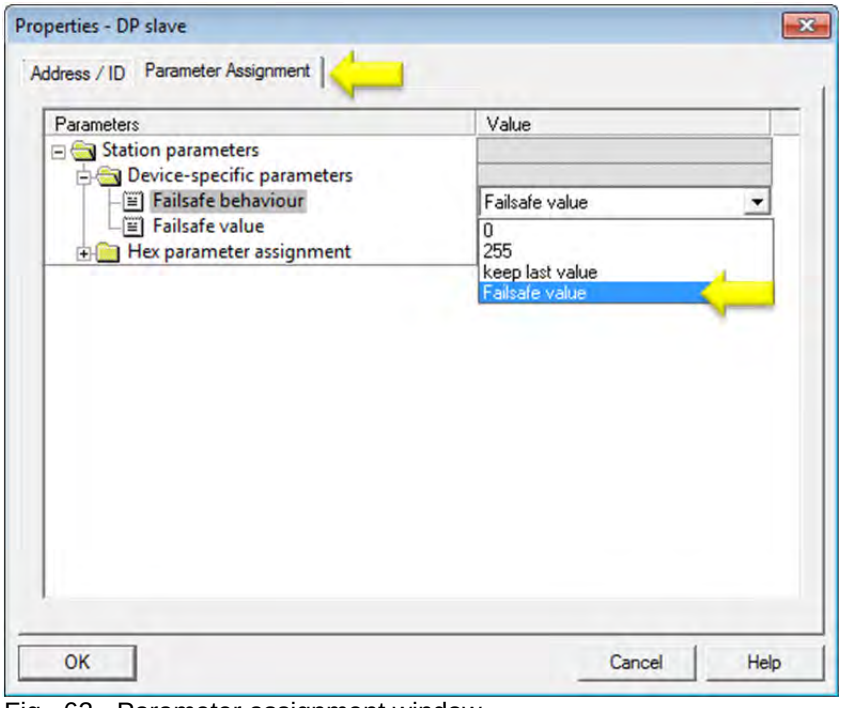


Fig. 62 - Parameter assignment window

After selecting 'Failsafe value' in the drop-down list, you can enter a decimal value of 0 to 255 in the Failsafe value box.


© PROCENTEC 2014 - Copyright - all rights reserved

### 10.4.3 Input test patterns

The functionality in this paragraph is only available for PBS-001 modules with software version 2.1 or higher. Please refer to **paragraph 14.2** for a guide to update your module. Use the correct GSD file.

The input modules of COMbricks can be set to a test mode. Different test patterns can be generated automatically for testing purposes, for example during a commissioning or FAT/SAT phase, to see if the PLC is programmed correctly.

The following simulation patterns are available:

- On (all inputs to ON)
- Off (all inputs to OFF)
- Blinking (all inputs will blink, frequency is configurable)
- Up counter (inputs will increase, frequency is configurable)
- Down counter (inputs will decrease, frequency is configurable)
- Zig-zag (inputs will zigzag up and down, frequency is configurable)

Open the properties of a COMbricks input module (generally by double-clicking on it) in the configuration tool and select 'Parameter Assignment' or 'Module Parameters'. A screen similar to **Fig. 63** will appear:

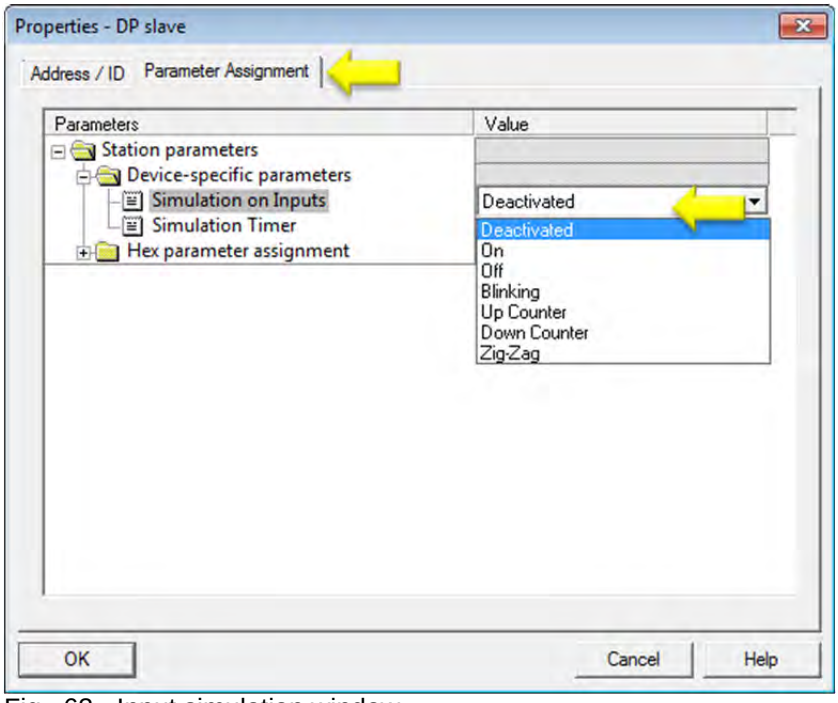


Fig. 63 - Input simulation window

After selecting a simulation pattern, you can enter a decimal value of 0 to 255 in the Simulation Timer box. This value indicates the waiting time in seconds before the input changes to the next value.


© PROCENTEC 2014 - Copyright - all rights reserved

## 10.5 DP/DP coupling or Gateway mode

A unique feature of the PBS-001 is that it can be used as a DP/DP coupler for up to 10 networks, where each network can have different bus parameters and baud rates. It connects the networks on an I/O level, where you can decide how many bytes need to be transferred. For each network a PBS-001 is needed. So if you wish to connect 2 networks, you need 2 PBS-001 modules in one COMbricks set.

A typical COMbricks configuration for a DP/DP setup may look like **Fig. 64**:

Fig. 64 - COMbricks configuration screenshot of the web server

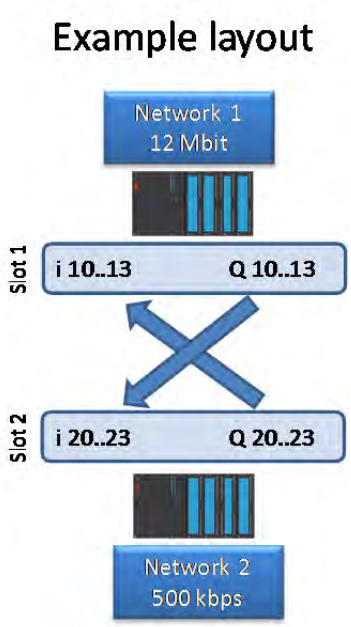


Fig. 65 - Schematic representation of the gateway

Slot 1 belongs to Network 1. Slot 2 is connected to Network 2. These networks can now be coupled via the configuration tools of each master. For example, if you want to transfer 4 bytes, the setup for the configuration tool of network 1 will look as follows:

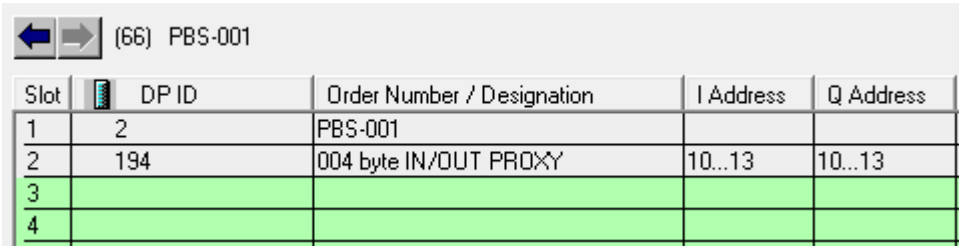


| Slot | DP ID | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 2 | PBS-001 | | |
| 2 | 194 | 004 byte IN/OUT PROXY | 10...13 | 10...13 |
| 3 | | | | |
| 4 | | | | |

Fig. 66 - Configuration for Network 1

The first slot is used for the PBS-001 module. The next slot is used for anther PBS-001 module, but a gateway module must be selected because the PBS-001 itself does not have any I/O.


© PROCENTEC 2014 - Copyright - all rights reserved

The setup for the second network will look as follows:

(45) PBS-001

| Slot | DP ID | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 194 | 004 byte IN/OUT PROXY | 20...23 | 20...23 |
| 2 | 2 | PBS-001 | | |
| 3 | | | | |
| 4 | | | | |

Fig. 67 - Configuration for Network 2

Now the Inputs and Outputs of both networks can be sent to the I/O of the gateways in the PLC program.

**ATTENTION**: in some configuration tools, the slot numbers do **not** correspond to the slots displayed in **Fig. 64.** The modules are numbered from 0 instead of 1. This is not the case for all configuration tools. Make sure to check this before adding modules to your configuration.

## 10.6 PROFIBUS / PROFINET gateway

The DP Slave module can also be used as a gateway to a PROFINET module. This works in the same way as the DP/DP coupler. Simply replace the second DP module for a PROFINET PND-001 module. Or extend the DP/DP coupler with a PROFINET module, as shown below. With this example you can exchange I/O from and to all networks. It is also possible to exchange data between more than 3 networks; up to 10 networks can be connected. It does not matter if these networks are PROFIBUS or PROFINET.

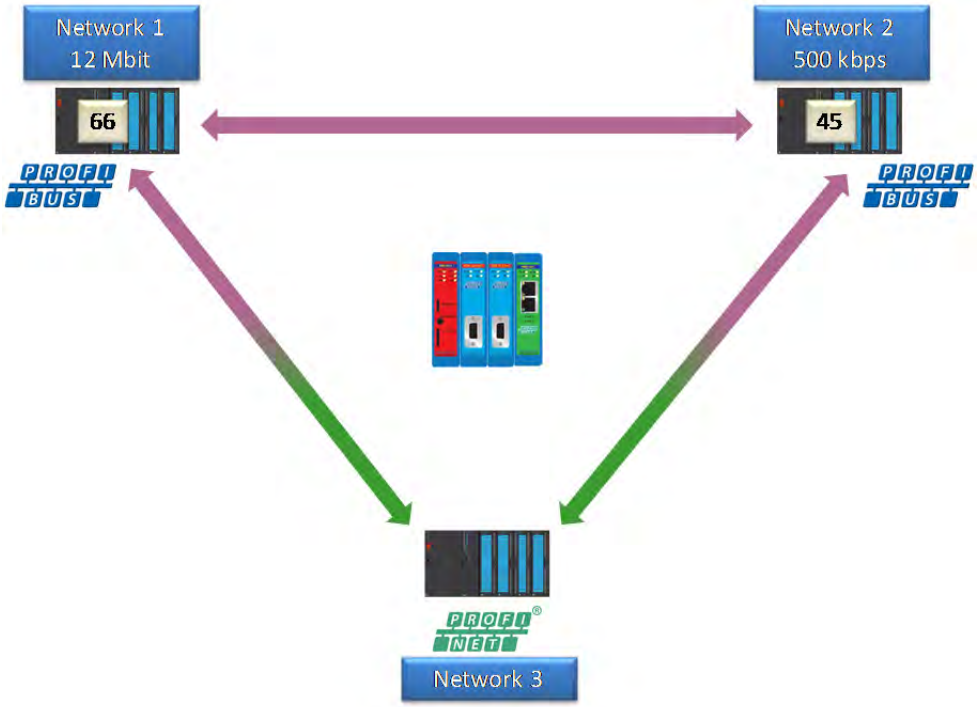


Fig. 68 - Example network layout of two PROFIBUS and one PROFINET networks


© PROCENTEC 2014 - Copyright - all rights reserved

The configuration of the networks is as follows:

(66) PBS-001

| Slot | DP ID | ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|---|
| 1 | 2 | | PBS-001 | | |
| 2 | 194 | | 001 byte IN/OUT PROXY | 4 | 4 |
| 3 | 194 | | 001 byte IN/OUT PROXY | 5 | 5 |
| 4 | | | | | |
| 5 | | | | | |

Fig. 69 - Configuration for PROFIBUS network 1

(45) PBS-001

| Slot | DP ID | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 194 | 001 byte IN/OUT PROXY | 2 | 2 |
| 2 | 2 | PBS-001 | | |
| 3 | 194 | 001 byte IN/OUT PROXY | 3 | 3 |
| 4 | | | | |
| 5 | | | | |

Fig. 70 - Configuration for PROFIBUS network 2

(1) combricks

| Slot | Module | Order number | I address | Q address |
|---|---|---|---|---|
| *0* | *combricks* | *101-20011A* | | |
| *X1* | *PN-IO* | | | |
| 1 | 001 Byte IN/OUT PROXY | 101-22xxxx | 0 | 0 |
| 2 | 001 Byte IN/OUT PROXY | 101-22xxxx | 1 | 1 |
| *3* | *PND-001* | *101-220110* | | |
| *X1 P1* | *Port 1* | | | |
| *X1 P2* | *Port 2* | | | |
| 4 | | | | |
| 5 | | | | |

Fig. 71 - Configuration for network 3 (PROFINET)

Now the Inputs and Outputs of all networks can be sent to the I/O of the gateways in the PLC programs.

## 10.7 Data consistency

For some applications it is required to have consistent bytes, for example robot cells with X, Y and Z axis. The polling of I/O in the PBS-001 and the processing in the Head Station and PLC is asynchronous which can cause data inconsistency in the PLC, which means that not all bytes in a telegram are 'up to date'. The use of Consistent Gateways (defined in the GSD file) instead of normal Gateways offers a solution.

The paragraphs below describe a simple example of two PLC projects in Siemens Step7 which can be used in a real byte-consistent project. Example setup:

The example shows how to transfer consistent data from network 2 to network 1. If the data is consistent, nothing happens. If the data is not consistent, this is visualized by incrementing the outputs of the 8DO card (assigned to network 1).


© PROCENTEC 2014 - Copyright - all rights reserved

### 10.7.1 Consistency over 2 bytes

Configuration of Network 1:

(10) PBS-001 PROCENTEC

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 2 | PBS-001 | | |
| 2 | 194 | Consistent 002 B IN/OUT GATEWAY | 0...1 | 0...1 |
| 3 | 194 | 8DO-24-0.5A | 32 | 32 |
| 4 | | | | |
| 5 | | | | |

Configuration of Network 2:

(45) PBS-001 PROCENTEC

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 194 | Consistent 002 B IN/OUT GATEWAY | 8...9 | 8...9 |
| 2 | 2 | PBS-001 | | |
| 3 | | | | |
| 4 | | | | |

Data Block 1 of Network 1:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | RCV_INCR_VALUE | BYTE | B#16#0 | Received Variable increased |
| +1.0 | RCV_MULTIPLY_VALUE | BYTE | B#16#0 | Multiplied value |
| =2.0 | | END_STRUCT | | |

Data Block 1 of Network 2:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | INCR_VALUE | BYTE | B#16#0 | Variable increased |
| +1.0 | MULTIPLY_VAL | BYTE | B#16#0 | Multiply Result |
| =2.0 | | END_STRUCT | | |

Organization Block 1 of Network 1:

```
      L     IW     0              //COPY 2 BYTES GATEWAY INPUTS TO DB1
      T     DB1.DBW    0

      L     DB1.DBB    0          //MULTIPLY RCV_INCR_VALUE * 3
      L     3
      *D
      L     255
      AW

      L     DB1.DBB    1          // LOAD RCV_MULTIPLY_VALUE
      <>D                         // COMPARE RCV_MULTIPLY_VALUE WITH RCV_INCR_VALUE * 3
      JCN   M004                  // JUMP TO M004 IF CONSISTENT

      L     QB     32            // IF NOT CONSISTENT: OUTPUT BYTE 32 IS LOADED,
      INC   1                     // INCREMENTED,
      T     QB     32            // AND TRANSFERRED TO OUTPUT BYTE 32
M004: NOP   0                     // NO OPERATION; NOTHING HAPPENS
```

Organization Block 1 of Network 2:

```
      L     DB1.DBB    0          //INCREMENT  INCR_VALUE
      INC   1
      T     DB1.DBB    0


      L     3
      *D
      L     255
      AW
      T     DB1.DBB    1          //MULTIPLY_VAL = INCR_VALUE*3


      L     DB1.DBW    0          //COPY DB1 TO 2-BYTES GATEWAY
      T     QW     8
```

### 10.7.2 Consistency over 4 bytes

Configuration of Network 1:

(10) PBS-001 PROCENTEC

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 2 | PBS-001 | | |
| 2 | 194 | Consistent 004 B IN/OUT GATEWAY | 0...3 | 0...3 |
| 3 | 194 | 8DO-24-0.5A | 32 | 32 |
| 4 | | | | |
| 5 | | | | |

Configuration of Network 2:

(45) PBS-001 PROCENTEC

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 194 | Consistent 004 B IN/OUT GATEWAY | 8...11 | 8...11 |
| 2 | 2 | PBS-001 | | |
| 3 | | | | |
| 4 | | | | |

Data Block 1 of Network 1:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | RCV_INCR_VALUE | INT | 0 | Received Variable increased |
| +2.0 | RCV_MULTIPLY_VALUE | INT | 0 | Multiplied value |
| =4.0 | | END_STRUCT | | |

Data Block 1 of Network 2:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | INCR_VALUE | INT | 0 | Variable increased |
| +2.0 | MULTIPLY_VAL | INT | 0 | Multiply Result |
| =4.0 | | END_STRUCT | | |

Organization Block 1 of Network 1:

```
      L     ID     0              //COPY 4 BYTES GATEWAY INPUTS TO DB1
      T     DB1.DBD    0


      L     DB1.DBW    0          //MULTIPLY RCV_INCR_VALUE * 3
      L     3
      *D
      L     DB1.DBW    2          // LOAD RCV_MULTIPLY_VALUE
      <>D                         // COMPARE RCV_MULTIPLY_VALUE WITH RCV_INCR_VALUE * 3
      JCN   M004                  // JUMP TO M004 IF CONSISTENT

      L     QB     32            // IF NOT CONSISTENT: OUTPUT BYTE 32 IS LOADED,
      INC   1                     // INCREMENTED,
      T     QB     32            // AND TRANSFERRED TO OUTPUT BYTE 32
M004: NOP   0                     // NO OPERATION; NOTHING HAPPENS
```

Organization Block 1 of Network 2:

```
      L     DB1.DBW    0          //INCREMENT  INCR_VALUE
      INC   1
      T     DB1.DBW    0

      L     3
      *D
      T     DB1.DBW    2          //MULTIPLY_VAL = INCR_VALUE*3

      L     DB1.DBD    0          //COPY DB1 TO 4-BYTES GATEWAY
      T     QD     8
```



© PROCENTEC 2014 - Copyright - all rights reserved

### 10.7.3 Consistency over 8 bytes

Configuration of Network 1:

(10) PBS-001 PROCENTEC

| Slot | DP ID | ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|---|
| 1 | 2 | | PBS-001 | | |
| 2 | 194 | | Consistent 008 B IN/OUT GATEWAY | 0...7 | 0...7 |
| 3 | 194 | | 8DO-24-0.5A | 32 | 32 |
| 4 | | | | | |
| 5 | | | | | |

Configuration of Network 2:

(45) PBS-001 PROCENTEC

| Slot | DP ID | ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|---|
| 1 | 194 | | Consistent 008 B IN/OUT GATEWAY | 8...15 | 8...15 |
| 2 | 2 | | PBS-001 | | |
| 3 | | | | | |
| 4 | | | | | |

Data Block 1 of Network 1:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | RCV_INCR_VALUE | INT | 0 | Received Variable increased |
| +2.0 | DUMMY1 | INT | 0 | dummy var |
| +4.0 | RCV_MULTIPLY_VALUE | DINT | L#20 | Received Result of multiplying *20 |
| +8.0 | MULTIPLY_VALUE | DINT | L#20 | Received Variable increased *20 |
| =12.0 | | END_STRUCT | | |

Data Block 1 of Network 2:

| Address | Name | Type | Initial value | Comment |
|---|---|---|---|---|
| 0.0 | | STRUCT | | |
| +0.0 | INCR_VALUE | INT | 0 | Variable increased |
| +2.0 | DUMMY1 | INT | 0 | dummy var |
| +4.0 | MULTIPLY_VALUE | DINT | L#0 | Result of multiplying *20 |
| =8.0 | | END_STRUCT | | |

Organization Block 1 of Network 1:

```
      CALL  "DPRD_DAT"
       LADDR  :=W#16#0
       RET_VAL:=MW0
       RECORD :=P#DB1.DBX0.0 BYTE 8

      L     DB1.DBW    0              //DO OUR OWN CALCULATION
      L     L#20
      *D
      T     DB1.DBD    8

      L     DB1.DBD    4              //COMPARE OWN CALCULATION WITH RECEIVED CALCULATION RESULT
      L     DB1.DBD    8
      <>D
      JCN   M004                     //JUMP IF CONSISTENT
      L     QB     32                //OUTPUTS ARE INCREMENTED IF NOT CONSISTENT
      INC   1
      T     QB     32
M004: NOP   0
```

Organization Block 1 of Network 2:

```
      L     DB1.DBW    0              //INC DB0.INCR_VALUE
      INC   1
      T     DB1.DBW    0

      L     L#20                      // *20
      *D
      T     DB1.DBD    4

      CALL  "DPWR_DAT"                //call SCF 15
       LADDR  :=W#16#8                //start output address 128
       RECORD :=P#DB1.DBX0.0 BYTE 8   //write data from data block to output address of I/O
       RET_VAL:=MW0
```



© PROCENTEC 2014 - Copyright - all rights reserved

# 11 PA Link/Coupler module

**The transparent PROFIBUS PA link/coupler enables seamless high speed integration to PROFIBUS PA. It powers the attached PA devices and fully emulates them as DP devices on the backplane. Adjusted busparameters are not required and therefore suitable for all DCS and PLC systems, even running on 12 Mbps.**

The combined internal ProfiTrace and oscilloscope make this product extremely useful for remote maintenance over Ethernet. Jitter, noise, DC current, DC voltage, bar graph and oscilloscope, it is all there and easy to access. The free CommDTM allows access for asset management tools over Ethernet.

COMbricks is able to carry 9 PA links and an RS 485 or Fiber Optic module. It can also be a customized mix of PA modules with other communication modules. The PA link provides 500 mA current on a customizable bus voltage. The integrated PA termination is automatically activated when the module works as a link or coupler. It is switched off in the monitoring mode.

It does not require configuration and operates the same way as regular COMbricks repeaters. In the web server the behavior on the PA side can be set, like retries (default 5) and the watchdog (default 3 seconds). This product can directly replace 3rd party Non-Ex PA couplers/links and can be used as a monitor behind existing 3rd party Non-Ex PA couplers.

This module is not suitable for use in Ex environments unless a barrier is used between the PA module and the Ex zone.

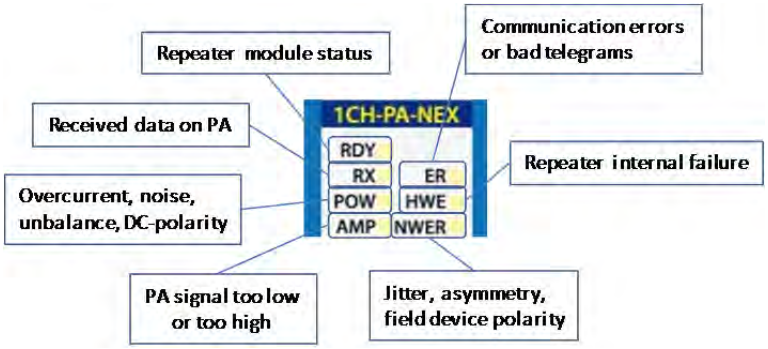


Fig. 72 - Overview of LEDs

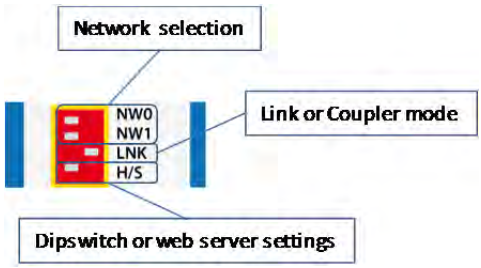


Fig. 73 - Overview of dipswitches


© PROCENTEC 2014 - Copyright - all rights reserved

## 11.1 Quick Start checklist

This checklist lists all the steps to a quick usage of the PA module in Link or Coupler mode. It is assumed that a running COMbricks set with at least one DP repeater module or fiber optic coupler module is already active.

| | | |
|---|---|---|
| **STEP 1:** | Provide the Head Station 1B or 1C with the latest firmware, at least v1.279. | (**7**) |
| **STEP 2:** | Add an empty backplane slot to the COMbricks set. | (**2.2**) |
| **STEP 3:** | Configure the PA module to the same network as a DP repeater module.<br>*NOTE: for monitoring mode, use a different and unused network!* | **(2.4)** |
| **STEP 4:** | Insert the PA module in the empty slot. | **(2.3)** |
| **STEP 5:** | Check the Channel List (in web browser) to see if the PA module appears. | **(4.2)** |
| | *For Monitoring Mode: skip to STEP 8.* | |
| **STEP 6:** | Power the top of PA coupler module . | **(2.6)** |
| **STEP 7:** | Check the status page of the PA module: is DC voltage OK?<br>Not too much noise on DC? Current consumption ± 10mA? | **(11.2.1)** |
| **STEP 8:** | Connect the PA trunk cable with PA station(s). | **(11.5.1)** |
| **STEP 9:** | Check the status page of the PA module:<br>Current consumption increased? | **(11.2.1)** |
| | *For Monitoring mode: Skip to STEP 11.* | |
| **STEP 10:** | Use the GSD Converter to change the PA GSD files. | **(11.3.1)** |
| **STEP 11:** | Setup a master on the DP side. | **(11.4.1)** |
| **STEP 12:** | Check the Scope Signals of the PA trunk. | **(11.2.2)** |


© PROCENTEC 2014 - Copyright - all rights reserved

## 11.2 Monitoring mode

If you have an existing PA network, you can add up to three PA modules as a monitoring and alarming tool. It measures telegrams and electrical signals which can be displayed in the web server. This is very similar to the standard Scope repeater card for PROFIBUS DP. The monitoring mode is enabled if:

1. No power is connected to the PA Power connector on the top of the module. The internal termination is automatically switched OFF in monitoring mode.
2. The 3rd dipswitch (LNK) is set to OFF (left).

If the module is used in Monitoring Mode, make sure to set the Network Selection to a different network than networks already used by the COMbricks set. See **paragraph 3.10.1** for an explanation how to do this. If the module is set to the same network, all DP messages will also be transmitted on the PA network! This will cause errors.

### 11.2.1 Module status

The module status page in the web server displays the following useful status information, see **Fig. 74**

- DC voltage (measured PA bus voltage)
- DC plus and min value (measured PA plus and min voltages)
- DC noise (measured variation in DC voltage)
- DC unbalance (measured difference between +/- and shield)
- Current consumption (measured mA supplied to the PA network by the module)

Fig. 74 - PA Oscilloscope module status

To view the page above, click on 'Status' in the upper left corner and then the appropriate PA module.


© PROCENTEC 2014 - Copyright - all rights reserved

### 11.2.2 PA oscilloscope images

The PA module has an integrated oscilloscope to measure the signal quality of the telegrams. The oscilloscope has an interface with the web server to display the signals from the devices which are connected to its channel. After opening the web page, all oscilloscope signals are displayed and updated live (see Fig. 75). By default one scope image is updated every second. This can be adjusted in the General Config page (see paragraph 4.4).

Click the button 'Reset oscilloscope images' to delete all scope images from memory. If the red 'AMP' LED on the PA module was on, this will be switched off. If the values are still not good, the LED will remain on.

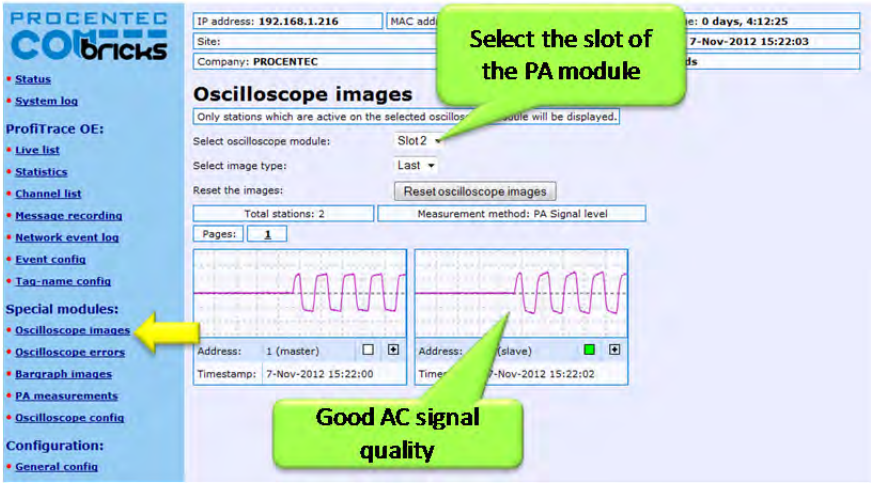


Fig. 75 - Oscilloscope images

### 11.2.3 PA Bar Graph

The Bar Graph illustrates the average AC signal strength from all available connected devices connected to the PA segment. It is a helpful utility to get an impression of the overall signal quality of the network (see **Fig. 76**).

The average amplitude should be around 750mV. When there are bus problems the Bar graph will display different Voltage levels and the color of the bars will change if the minimum or maximum level has been reached. These levels can be adjusted in the 'Oscilloscope Config' menu (see chapter 11.2.5).

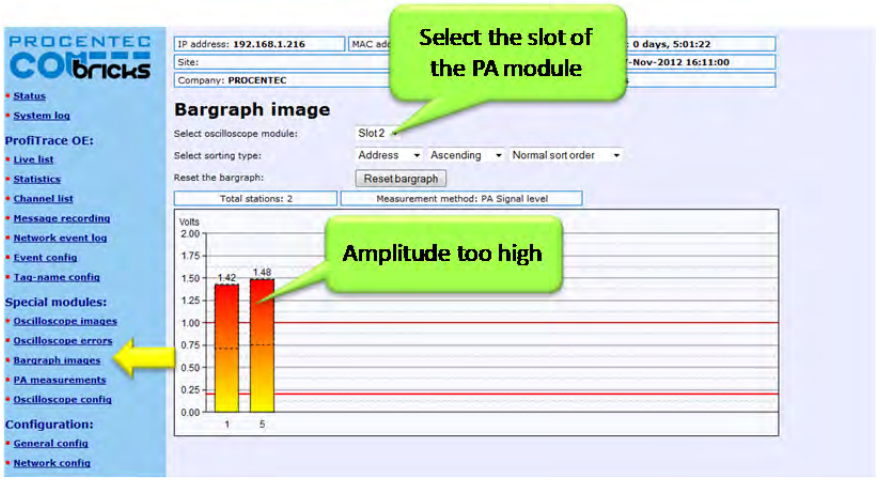


Fig. 76 - Bargraph image for PA


© PROCENTEC 2014 - Copyright - all rights reserved

In the above example the amplitude is too high due to missing termination on one side.
Normally the amplitude should be between 750 and 1000 mV.

### 11.2.4 PA measurements

The PA measurements page shows a static scope image; it is not an actual scope measurement. The blue arrows illustrate the measured value of the amplitude and the jitter. The values are displayed in the corresponding boxes (see **Fig. 77**).

#### 11.2.4.1 Amplitude
The amplitude is the difference between the highest and the lowest measured value of the AC signal (the actual data). The displayed result is measured by taking samples from all the bits in a telegram. Not the entire bit is measured, but only a small part to filter out irregularities such as overshoots.

#### 11.2.4.2 Jitter
Jitter is described as 'Zero-crossing point deviation', which means that the changing of a bit does not occur at the intended time. This is acceptable within the limit of 3200 nanoseconds, positive or negative. Causes for high jitter times can be wiring mistakes, EMI, cable cross talk or device problems.

#### 11.2.4.3 Polarity
This is NOT the polarity of the bus wiring, but the internal communication signal. In some products it is possible that the polarity is switched. This does not affect the communication.

#### 11.2.4.4 DC noise
The DC noise indicates how much the voltage of the signal varies. If the noise is too high it can influence the communication; it should not exceed 100 mV.

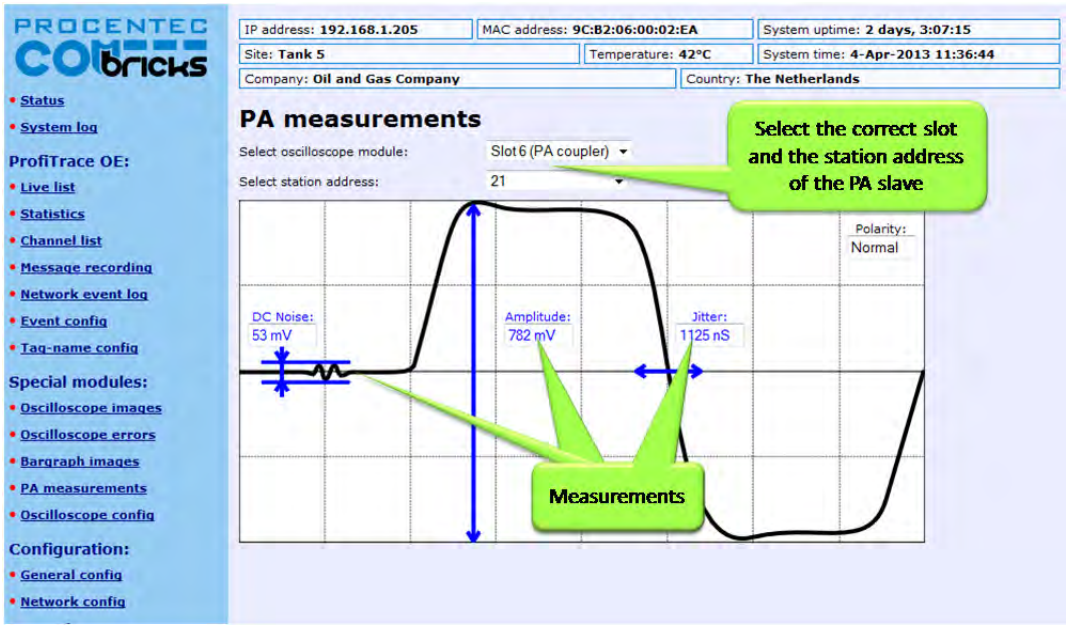

Fig. 77 - PA measurements


© PROCENTEC 2014 - Copyright - all rights reserved

### 11.2.5 Oscilloscope configuration

In the Oscilloscope Config page (see **Fig. 78**) you can set various warning levels for the PA module. These warning levels are shown in the PA Bar Graph, and are used for e-mail alarms, logging and output control (see paragraphs 0 and 5.4).

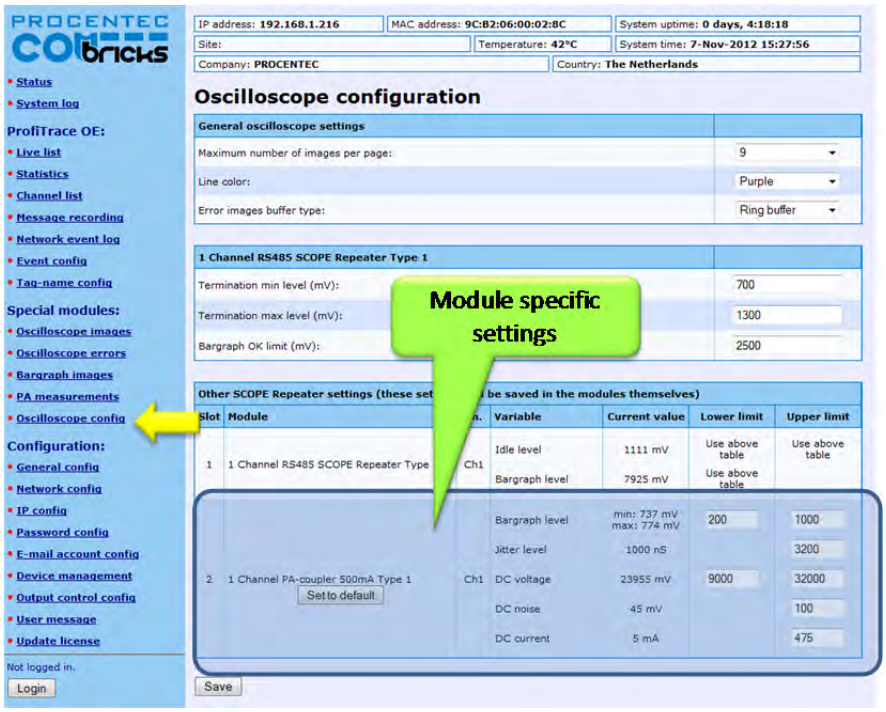


Fig. 78 - Oscilloscope configuration


© PROCENTEC 2014 - Copyright - all rights reserved

## 11.3 Link mode (module firmware v2.10.1 and higher only)

To use the module in Link mode, make sure it has module firmware version 2.10.1 and up, and NOT version 1.x. Refer to **paragraph 14.2** for updating your PA module. Also update the Head Station firmware to 1.279 or higher.

Set the 3rd dipswitch 'LNK' to 'ON' (to the right). Then connect a power source to the connector on top of the module. The DC voltage offered to the PA coupler module is the same as the output on the PA side. The minimum is 11VDC, maximum is 28VDC.

This module is now a fully functional PROFIBUS PA Link/Coupler combination. It is semi-transparent on all baud rates, it also sends FDL status requests onto PA. It supports connection of up to 126 devices that can take up a total of 500mA from the bus. Furthermore, all functionality described in paragraph 11.2 is also available in Link mode.

To receive telegrams from a PLC or DCS in Link mode, you need to install another module in the COMbricks backplane. This module can be any PROFIBUS DP interface card, either fiber optic or copper. All modules in chapters 7, 8 and 9 can be used. Set this DP card to the same network as the PA module.

### 11.3.1 Converting PA GSD files

For PA devices to correctly work in a DP configuration environment, it is necessary to alter the GSDs. It is highly recommended to use our GSDConvert tool for this, and NOT do it manually! The tool changes several lines in the GSD file so that it can be used on all baud rates instead of only the PA baud rate.

Download the tool on www.procentec.com.

Simply choose a GSD file and click 'Open', then choose the location to save it and click 'Save'. The program will create a new GSD file with 'LNK_' as the first four characters. The last four characters are the Ident number of the slave.

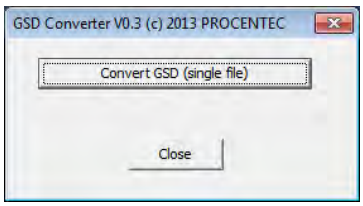


Import the new file into the configuration tool and use it as if it was a normal DP slave. Any baudrate can be used on the DP-side.

In Link/Coupler mode, the module has a fixed master address 1 on the PA side. The use of address 1 for PA field devices is therefore not possible.

### 11.3.2 Link configuration – bus parameters

The PA module in Link mode offers the possibility to configure the Watchdog time and the number of retries on the PA bus. These bus parameters are independent from the DP master parameters. Click on the Status page and then on the PA module to configure these parameters. See **Fig. 79** for available options.


© PROCENTEC 2014 - Copyright - all rights reserved

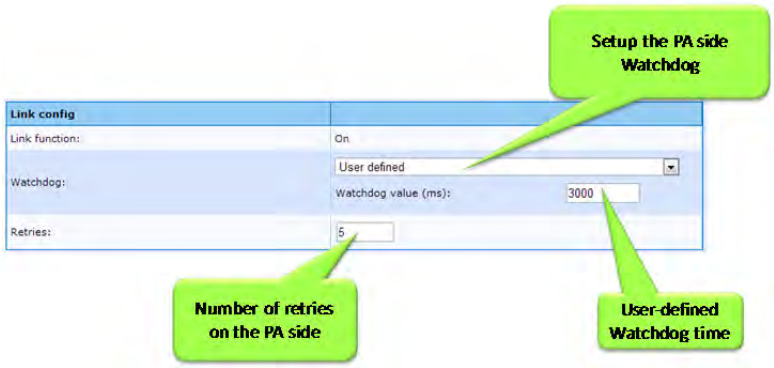


**Fig. 79 - Configuration of bus parameters on PA**

Options for the Watchdog selection:

- Off (not recommended)
- No change (PA watchdog is the same as DP watchdog)
- Scaled (Watchdog is calculated based on DP watchdog)
- User-defined (enter the watchdog time manually).

The number of retries can also be adjusted. This must be a number between 0 and 15.

## 11.4 Coupler mode

Make sure to set the 3rd dipswitch 'LNK' to 'OFF' (to the left). Then connect a power source to the connector on top of the module. The DC voltage offered to the PA coupler module is the same as the output on the PA side. The minimum is 11VDC, maximum is 28VDC.

This module is now a fully functional PROFIBUS PA coupler. It is totally transparent up to 1.5 Mbit/s, it also sends FDL status requests onto PA. It supports connection of up to 32 devices that can take up a total of 500mA from the bus. Furthermore, all functionality described in paragraph 11.2 is also available in Coupler mode.

To receive telegrams from a PLC or DCS in Coupler mode, you need to install another module in the COMbricks backplane. This module can be any PROFIBUS DP interface card, either fiber optic or copper. All modules in chapters 7, 8 and 9 can be used. Set this DP card to the same network as the PA Coupler module.

### 11.4.1 Bus Parameters

Some adjustments to the bus parameters in the PLC or DCS need to be made. Follow **Table 8** for your master project:

Table 8 - Bus Parameters for PA projects, in bit times

| Baud rate | Tslot (only DX) | MaxTSDR (only DX) | Tslot (with DP-V1) | MaxTSDR (with DP-V1) |
|---|---|---|---|---|
| **9.6 – 19.2 kbps** | 330 | 145 | 1500 | 150 |
| **45.45 kbps** | 640 | 480 | 640 | 480 |
| **93.75 kbps** | 2500 | 1000 | 2500 | 1000 |
| **187.5 kbps** | 3200 | 1500 | 14000 | 1400 |
| **500 kbps** | 8500 | 4000 | 38000 | 3700 |
| **1.5 Mbps** | 25500 | 11500 | 110000 | 11000 |


© PROCENTEC 2014 - Copyright - all rights reserved

These are ‘worst case’ values. It is recommended to examine the timing of your installation and decrease the bus parameters to a suitable value for your network.

The DP-V1 table has higher slot times than the Data Exchange table because DP-V1 telegrams can be up to 240 bytes. Such a telegram takes a long time to transmit, and therefore the Tslot needs to be larger.

In small applications it is required to set a value for the Tset parameter. Usually a value of 95 is sufficient.

Because of the longer Slot Time and MaxTSDR, it is also recommended to set the Watchdog to at least 2 seconds. This is normal in PA networks.

In Coupler mode, the module has no bus address on either side. When configuring your PA network there is no restriction in the use of addresses for field devices, although most configuration tools do not allow address 0, 1 and 2.

## 11.5 Physical layer

### 11.5.1 Connecting a PA segment

The bottom of the PA module has two identical connections for the PA trunk. These are connected 1-on-1. As stated above the integrated termination is ON when power is connected to the PA module, which means that the PA module is always the start of a segment. The automatic termination cannot be disabled. Most installations will use only one connector. In that case it does not matter which connector is chosen. See **Fig. 80** for an example.

It is also possible to use the second connector as a stub line, as shown in **Fig. 81**. Do not terminate the end of a stub line, otherwise the PA segment has too many terminations.

Examples:

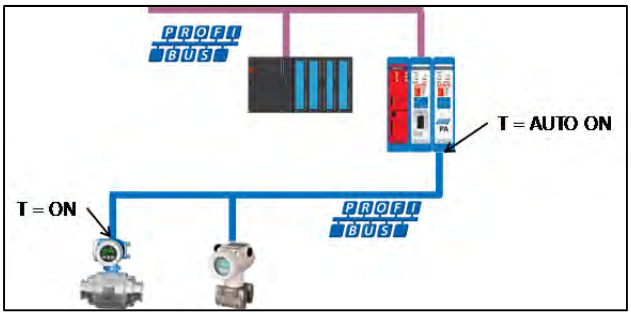


Fig. 80 – PA segment using one connector

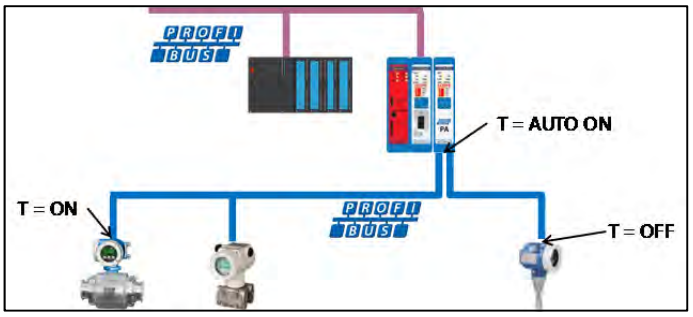


Fig. 81 - PA segment with a stub line


© PROCENTEC 2014 - Copyright - all rights reserved

### 11.5.2 Cable specifications

Use the correct cable for your project. **Table 9** shows the cable specifications for PROFIBUS PA. If a cable is not compliant with these specifications, the reliability of the installation may become unstable.

Table 9 - Cable specifications

| Characteristic | Specification |
|---|---|
| **Cable design** | Twisted pair, shielded |
| **Maximum conductor cross section (nominal)** | 0.8 mm² (AWG 18) |
| **Loop resistance (direct current)** | 44 Ohm/km |
| **Impedance (31,25 kHz)** | 100 Ohm ±20% |
| **Attenuation (39 kHz)** | 3 dB/km |
| **Capacitive asymmetry** | 2 nF/km |
| **Max. propagation delay change (7.9 to 39 kHz)** | 1.7 µsec/km |
| **Max. shield coverage** | 90% |
| **Cable length** | 1900 m |

### 11.5.3 Spur lines

The trunk line on the PA module can have up to 32 spur lines with the following lengths:

Table 10 - Spur lines

| Number of spur lines | Length of the spur (Non-Ex) |
|---|---|
| **25 to 32** | Max 1 meter |
| **19 to 24** | 30 meter |
| **15 to 18** | 60 meter |
| **13 to 14** | 90 meter |
| **1 to 12** | 120 meter |

The PROFIBUS PA specification allows up to 3 devices on a spur. Please refer to paragraph 11.5.1 for an explanation on how to connect the PA trunk to the PA module.

### 11.5.4 Current consumption calculations

The PA module provides a maximum of 500mA to the PA trunk. The total current consumption of all slaves on this trunk cannot exceed 500mA. The PA module consumes 10mA. At least one FDE (Fault Disconnection Electronics, stated in the manual of the PA device) should also be calculated . The calculation for the current consumption is as follows:

$I_{SEG} = I_{B0} + I_{B1} + .. + I_{BN} + I_{FDE}$

$I_{SEG}$ = Total current in a segment
$I_{BN}$ = Basic current of devices
$I_{FDE}$ = Current of the **F**ault **D**isconnection **E**lectronics

See **Fig. 82** for an example.


© PROCENTEC 2014 - Copyright - all rights reserved

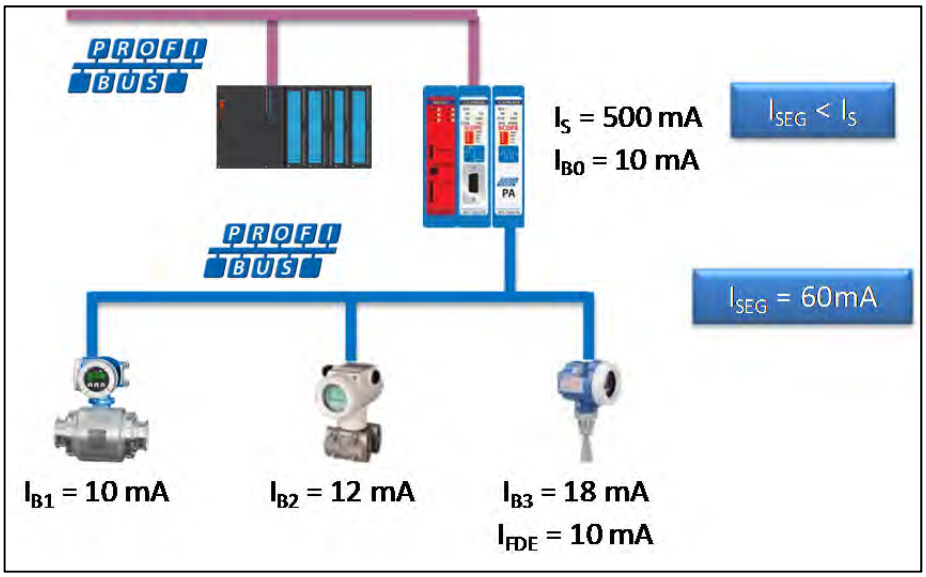


Fig. 82 - Example of current consumption calculation in a PA segment

### 11.5.5 Voltage at the end of the segment

The resistance of the cable causes a lower voltage at the end of the cable. At least 9V should be available for the last device at the end of the cable. The following calculation is a 'worst case' scenario where all devices are connected at the end of the cable:

$U_B = U_S - (I_{SEG} * R_{CABLE} * L_{SEG})$ (where $U_B > U_{min}$)

$U_B$ = Bus voltage at the last device (V)
$U_S$ = Voltage of the segment coupler (V)
$I_{SEG}$ = Total current In a segment (A)
$R_{CABLE}$ = Resistance per unit length of the cable (Ω/km)
$L_{SEG}$ = Length of all cables in the segment, including stubs (km)
$U_{min}$ = Minimal specified operating voltage of the last device (V)

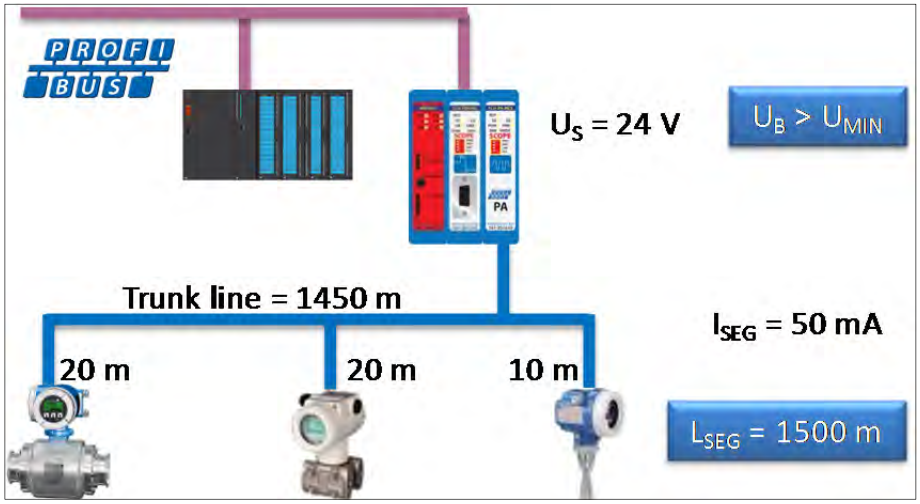


Fig. 83 - Example of voltage calculation at the end of the cable

In this example the voltage at the end of the cable is 24 V - (0.05A * 44 * 1.5) = **20.7 V**


© PROCENTEC 2014 - Copyright - all rights reserved

# 12 PROFINET Device PND-001

**The COMbricks PROFINET Device enables multiple proxies between other inserted PROFINET modules. Simultaneously the user can let the PROFINET Device publish I/O modules which are controlled by the PLC that has the PROFINET Device in Data Exchange.**

It's the component of choice to establish communication between multiple PROFINET controllers that manager their own specific network. The proxy works the same way as regular DP/DP and PN/DP couplers. Configurations from the GSD file define the data area between the modules. COMbricks has the advantage that 10 PROFINET modules can cross exchange information.

When the PROFINET Device has to publish I/O modules, the configuration steps are the same as any PROFINET device. By means of the GSD file the respective I/O modules have to be selected in the configuration tool, after which the PLC can map the I/Os to its application.

Application areas
- Coupling small machines.
- Linking networks with different controllers.
- Coupling PROFIsafe networks to regular networks.
- Migrating from old control systems to new control systems.
- Quasi master-master communication.

## 12.1 Topologies

The PROFINET modules can be used as a proxy between one or multiple PROFIBUS or PROFINET networks, and/or can be configured as PROFINET devices which control one or more output modules.

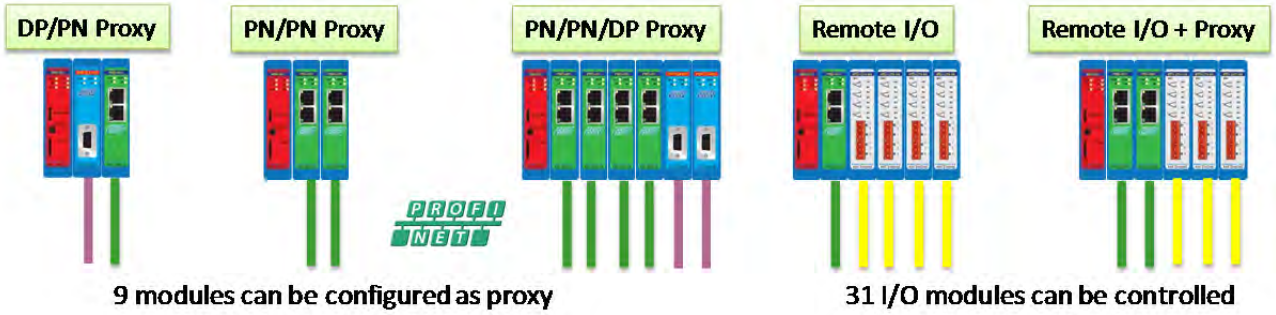


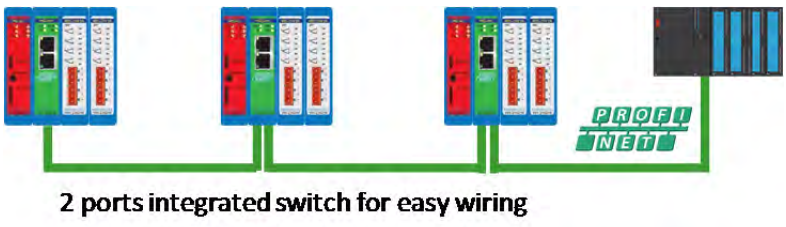



© PROCENTEC 2014 - Copyright - all rights reserved

## 12.2 Status LEDs

The PND-001 module has four diagnostic LEDs. These LEDs indicate whether the module is functioning properly.

### 12.2.1 RDY LED

The RDY LED indicates power supply and connection with the Head Station. Also a firmware update is indicated with this LED.

| LED | State | Meaning |
|---|---|---|
| RDY *(green)* | Off | No power supply, or PND-001 module is faulty.<br>There is no voltage at the module, or the module has a hardware defect.<br>Remedy: Connect the 24 V DC supply voltage at the Head station. |
| | Flashing (1 Hz) | The PND-001 module is connecting with the Head Station. This state is allowed for a short time (max 1 minute). |
| | Flashing (0.3Hz) | A backplane firmware update of the PND-001 module is executed by the Head Station (max 1 minute). |
| | On | The connection with the Head Station is established. |

### 12.2.2 PROFINET LEDs

The PND-001 module has three PROFINET diagnostic LEDs: RUN, SF (System Fail) and BF (Bus Fail).

| LED | State | Meaning |
|---|---|---|
| RUN *(green)* | Off | Internal application firmware is not running (PROFINET stack).<br>Remedy: Update application firmware. |
| | On | Internal application firmware is running (PROFINET stack). |
| SF *System Fail (red)* | Off | No error |
| | On | System error, or the received expected configuration (from configuration tool) does not match the actual configuration (I/O or proxy modules in the backplane). |
| | On | PND-001 module is not in Data Exchange with a PROFINET master. |
| BF *Bus Fail (red)* | Off | PND-001 module is in Data Exchange with a PROFINET controller. |
| | Flashing (0.5 Hz) | No data transfer between the PROFINET Controller and the PND-001 module, although a physical link is established<br>Causes:<br>• Incorrect device name<br>• The PROFINET Controller is switched off<br>Remedy:<br>• Check the configuration and assign a valid device name to the PND-001 module.<br>• Check the PROFINET Controller. |
| | On | No physical link.<br>Remedy: check the cable and switch. |


© PROCENTEC 2014 - Copyright - all rights reserved

## 12.3 Quick Start checklist

This checklist lists all the steps to a quick usage of the PROFINET Device module as a Remote I/O station.

| | | |
|---|---|---|
| **STEP 1:** | Provide the Head Station 1B or 1C with the latest firmware, at least v1.272. | (**7**) |
| **STEP 2:** | Add at least two empty backplane slots to the COMbricks set. | (**2.2**) |
| **STEP 3:** | Use the rotary switch on the bottom to assign a custom or pre-defined name to the PROFINET device. | **(12.4)** |
| **STEP 5:** | Insert the PROFINET Device module in one empty slot. Do not insert it in slot number 11 or higher; this is not supported by the COMbricks. | **(2.3)** |
| **STEP 6:** | Insert a DI/DO/Relay card in the other empty slot. | **(2.3)** |
| **STEP 7:** | Provide power to the Head Station. | **(4.2)** |
| **STEP 8:** | Connect the Head Station to the Ethernet network with an Ethernet cable. | **(4.2)** |
| **STEP 9:** | Connect a PROFINET cable and connector to one of the RJ45 connectors. | |
| **STEP 10:** | Check the Channel List (in web browser) to see if the modules appear. | **(4.2)** |

## 12.4 Identification and name assignment

### 12.4.1 MAC address

Each PROFINET-enabled network component has its own unique MAC-address. The MAC-address of the PND-001 is located on a label on the upper side of the module and has the following format:

**9C:B2:06:xx:xx:xx**

### 12.4.2 Assigning a custom name

The PND-001 supports fixed name assignment and custom name assignment. On the bottom of the module is a rotary switch. In position ‘0’ the module is programmable with a custom device name, and the name is stored in non-volatile memory. With the rotary switch set to ‘0’ during startup, the name will be read from memory.

The device name can be assigned with configuration tools or supervisor tools such as Step-7 or Netilities, as shown in **Fig. 84** and **Fig. 85**.


© PROCENTEC 2014 - Copyright - all rights reserved

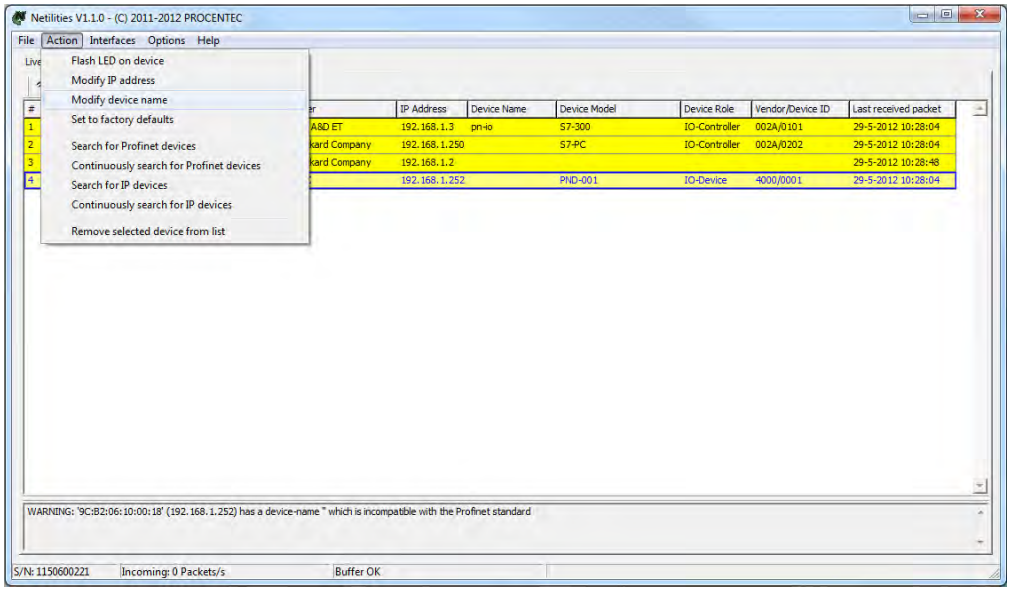

Fig. 84 - Assigning a new device name

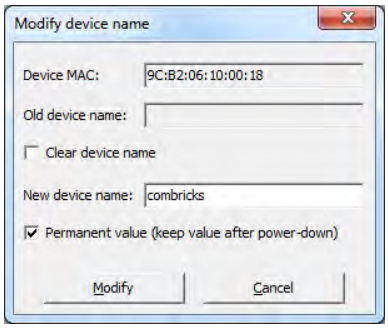

Fig. 85 - New device name options

The checkbox ‘Permanent value’ should be enabled if you wish to save the name to non-volatile memory.

### 12.4.3 Assigning a pre-defined name

The positions 1 – 9 of the rotary switch assign a pre-defined name to the device. The name has the format “COMbricks-x” where ‘x’ corresponds to the selected digit of the rotary switch.
For example, in position 4 the module has the following device name: “COMbricks-4”. The name is read during startup of the module; changing the rotary switch during operation does not change the device name.

## 12.5 Remote I/O mode

The PND-001 module can be included in a PLC project with the GSDML as any other PROFINET device. After the module has been set up with a name, you can start configuring it in the network with the configuration tool of the PLC. Refer to the manual of the supplier of your configuration tool for instructions for that tool.

This example, a typical COMbricks setup with remote I/O, is built up as follows (see **Fig. 86**).


© PROCENTEC 2014 - Copyright - all rights reserved

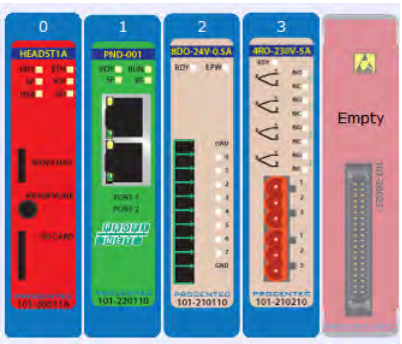


The first slot is occupied by the PND-001 module, and next to it are an 8DO and Relay module.

Open the PROFINET Controller configuration tool and insert/import the PND-001 GSD with filename “GSDML-V2.25-PROCENTEC-COMbricks PND_001-20120831.xml” (download it from www.procentec.com/gsd).

Fig. 86 - Example configuration for Remote I/O

Then insert the correct modules into the configuration tool. Drag the following device into the configuration: ‘Head Station+PND-001(SLOT 01)’. Make sure that this slot corresponds with the physical slot of the PND-001. See **Fig. 87**.

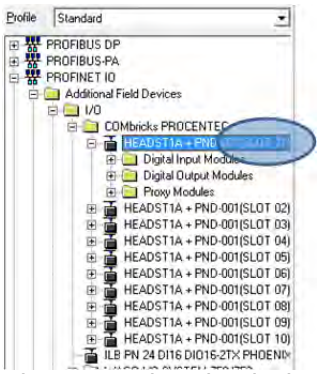


Fig. 87 - Select the device with correct slot number

Next, insert the correct modules into the configuration tool. In the 2nd slot place a 8DO-24V-0.5A, and the last module is the 4RO-230V-5A.

**Fig. 88** shows the complete configuration for this COMbricks system.

(2) COMbricks

| Slot | Module | Order number | I address | Q address | Diagnostic address |
|---|---|---|---|---|---|
| 0 | COMbricks | 101-20011A | | | 2045* |
| X1 | PN-IO | | | | 2040* |
| 1 | PND-001 | 101-220110 | | | 2039* |
| X1 | Port 1 | | | | 2038* |
| X1 | Port 2 | | | | 2037* |
| 2 | 8DO-24V-0.5A | 101-210110 | 5 | 7 | |
| 3 | 4RO-230V-5A | 101-210210 | | 8 | |
| 4 | | | | | |

Fig. 88 - Configuration of the modules

## 12.6 PN/PN coupling or Proxy mode

A unique feature of the PND-001 module is that it can be used as a PN/PN coupler for up to 10 networks. It connects the networks on an I/O level, where you can decide how many bytes need to be transferred. For each network a PND-001 is needed. So if you wish to connect 2 networks, you need 2 PND-001 modules in one COMbricks set.


© PROCENTEC 2014 - Copyright - all rights reserved

A typical COMbricks configuration for a PN/PN setup may look like this:

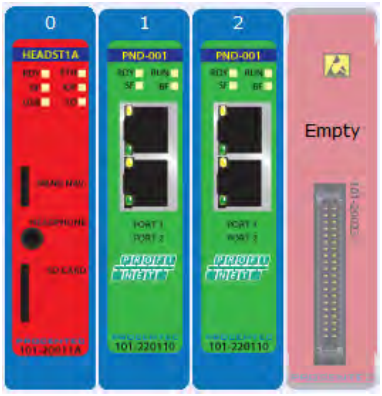


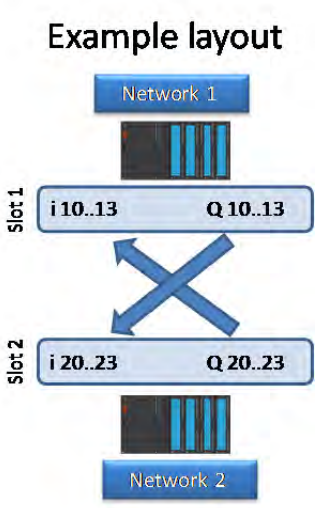


Fig. 90 - COMbricks configuration screenshot of the web server

Slot 1 belongs to Network 1. Slot 2 is connected to Network 2. These networks can now be coupled via the configuration tools of each master. For example, if you want to transfer 1 byte, the setup for the configuration tool of network 1 will look as follows:

(1) COMbricks

| Slot | Module | Order number | I address | Q address |
|---|---|---|---|---|
| *0* | *COMbricks* | *101-20011A* | | |
| *X1* | *PN-IO* | | | |
| *1* | *PND-001* | *101-220110* | | |
| *X1 A* | *Port 1* | | | |
| *X1 A* | *Port 2* | | | |
| 2 | 001 Byte IN/OUT PROXY | 101-22XXXX | 1 | 1 |
| 3 | | | | |

Fig. 89 - Schematic representation of the proxy

The first slot is used for the PND-001 module. The next slot is used for anther PND-001 module, but a proxy module must be selected because the PND-001 itself does not have any I/O. The setup for the second network will look as follows:

(2) COMbricks-1

| Slot | Module | Order number | I address | Q address |
|---|---|---|---|---|
| *0* | *COMbricks-1* | *101-20011A* | | |
| *X1* | *PN-IO* | | | |
| 1 | 001 Byte IN/OUT PROXY | 101-22XXXX | 2 | 2 |
| *2* | *PND-001* | *101-220110* | | |
| *X1 A* | *Port 1* | | | |
| *X1 A* | *Port 2* | | | |
| 3 | | | | |

Now the Inputs and Outputs of both networks can be sent to the I/O of the proxies in the PLC program.


© PROCENTEC 2014 - Copyright - all rights reserved

## 12.7 PROFINET / PROFIBUS proxy

The PND-001 module can also be used as a proxy to a PROFIBUS module. This works in the same way as the PN/PN coupler. Simply replace the second PN module for a PROFIBUS PBS-001 module. Or extend the PN/PN coupler with a PROFIBUS module, as shown below. With this example you can exchange I/O from and to all networks. It is also possible to exchange data between more than 3 networks; up to 10 networks can be connected. It does not matter if these networks are PROFIBUS or PROFINET.

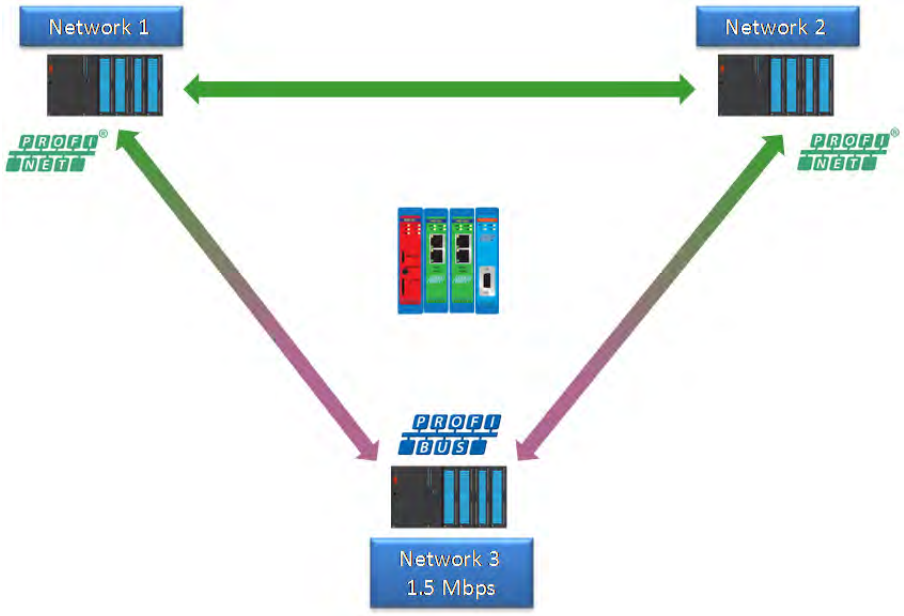


Fig. 91 - Example network layout of two PROFINET and one PROFIBUS networks

The configuration of the networks is as follows:

(1) COMbricks

| Slot | Module | Order number | I address | Q address |
|---|---|---|---|---|
| 0 | COMbricks | 101-20011A | | |
| X1 | PN-IO | | | |
| 1 | PND-001 | 101-220110 | | |
| X1 P1 | Port 1 | | | |
| X1 P2 | Port 2 | | | |
| 2 | 001 Byte IN/OUT PROXY | 101-22XXXX | 1 | 1 |
| 3 | 001 Byte IN/OUT PROXY | 101-22XXXX | 2 | 2 |
| 4 | | | | |

Fig. 92 - Configuration for PROFINET network 1

(2) COMbricks-1

| Slot | Module | Order number | I address | Q address |
|---|---|---|---|---|
| 0 | COMbricks-1 | 101-20011A | | |
| X1 | PN-IO | | | |
| 1 | 001 Byte IN/OUT PROXY | 101-22XXXX | 3 | 3 |
| 2 | PND-001 | 101-220110 | | |
| X1 P1 | Port 1 | | | |
| X1 P2 | Port 2 | | | |
| 3 | 001 Byte IN/OUT PROXY | 101-22XXXX | 4 | 4 |
| 4 | | | | |

Fig. 93 - Configuration for PROFINET network 2

(1) PBS-001

| Slot | DP ID ... | Order Number / Designation | I Address | Q Address |
|---|---|---|---|---|
| 1 | 194 | 001 byte IN/OUT PROXY | 5 | 5 |
| 2 | 194 | 001 byte IN/OUT PROXY | 6 | 6 |
| 3 | 2 | PBS-001 | | |
| 4 | | | | |

Fig. 94 - Configuration for the PROFIBUS network

Now the inputs and Outputs of all networks can be sent to the I/O of the proxies in the PLC programs.


© PROCENTEC 2014 - Copyright - all rights reserved

# 13 CommDTM

The COMbricks Head Station with a 1C license features a fully functional gateway between any Windows platform and field devices using a CommDTM. This enables the COMbricks to function as a real Asset Management tool. Currently we support FDT 1.2 frame applications such as PACTware and E+H FieldCare. During interaction with the CommDTM, all COMbricks functions can be used simultaneously (web based monitoring, oscilloscoping, OPC and alarms via email).

If you are using Siemens EDD files, you can convert these to DTM files using a tool called Sitrans DTM. More information can be found on www.siemens.com/sitransdtm.

## 13.1 Installing drivers, CommDTM and server

You can download the required PCD server and CommDTM installers separately from our website, located at the download section. You can also find the files in the Download page of the COMbricks itself.
It is a ZIP file containing several executables, which should all be installed.

## 13.2 Setting up the PCD server

Start the PCD (PROCENTEC Communication Driver) server (located in /Program Files/PROCENTEC/PCD/). You should see the PCD logo in the system tray.

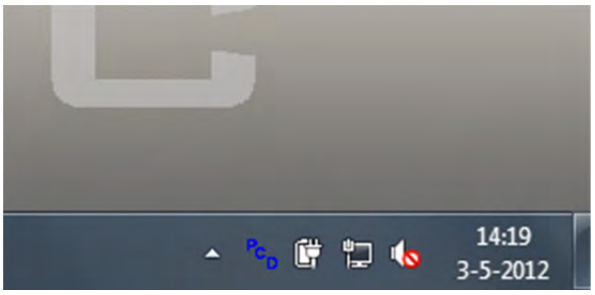


Right-click the PCD icon, then choose ‘Show’. Click ‘Modify’, enter a name for the interface, choose the latest ‘COMbricks PROFIBUS x.x’ driver and click ‘OK’. Note: You can leave the serial number field empty.

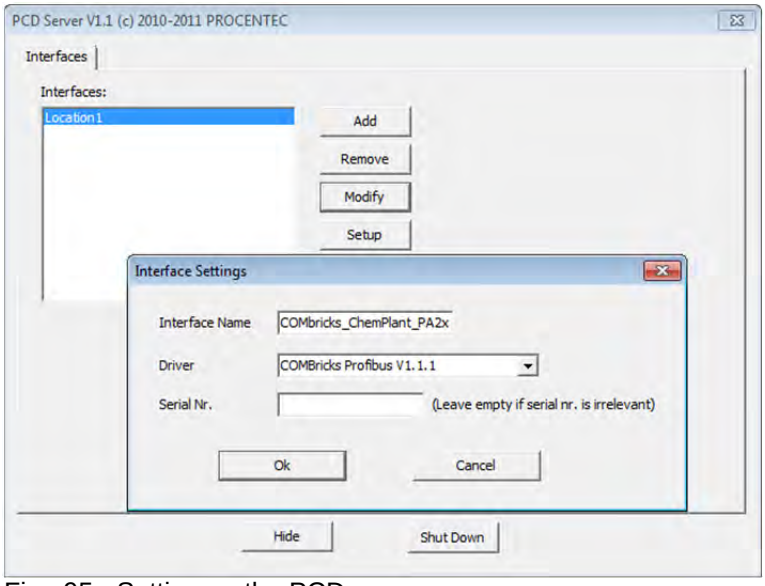


Fig. 95 - Setting up the PCD server


© PROCENTEC 2014 - Copyright - all rights reserved

Next, select this location again and click ‘Setup’. Enter the correct IP address of the COMbricks Head Station, and choose the port and network you wish to connect to. Depending on the password settings in the COMbricks, you might also have to fill in a username and password. Then click ‘Ok’.

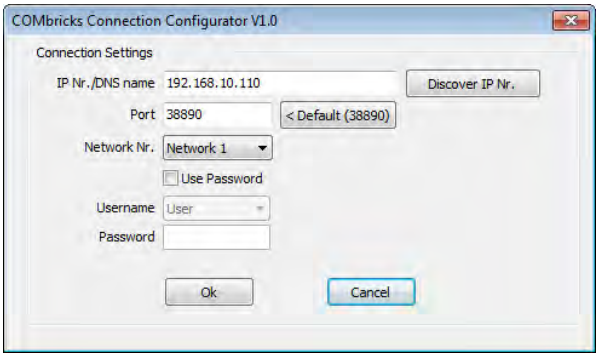


## 13.3 Using the CommDTM

Start your FDT manager and create or load a project. Vendor-independent platform PACTware is used in the example below. Refer to the manual of your FDT manager for details.
In the upper menu, choose ‘Device – Add device’ and click on ‘PROCENTEC DP-V1 Master’, as shown in **Fig. 96**.

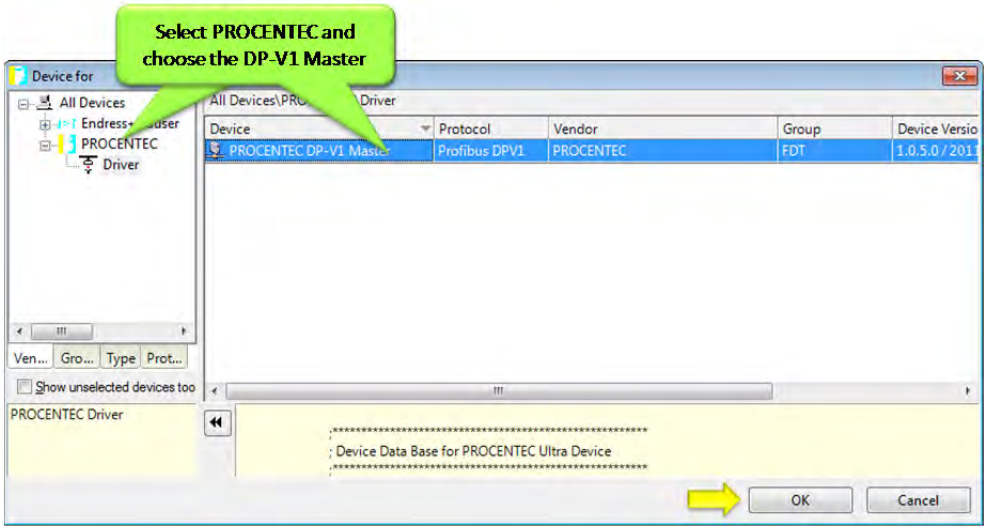


Fig. 96 - CommDTM selection dialog

After clicking ‘OK’ the PCD server is launched automatically (if it was not loaded already). You will see the COMbricks and PCD icons appear in the system tray:

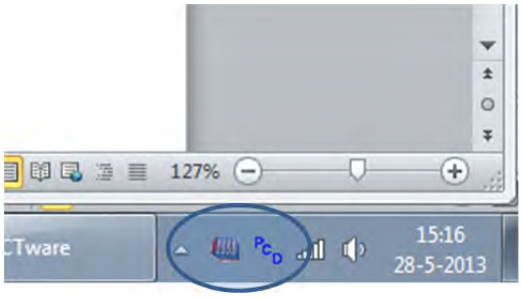



© PROCENTEC 2014 - Copyright - all rights reserved

In PACTware, make sure to set the correct bus parameters by right-clicking the PROCENTEC DP-V1 master and choose ‘Parameters’. Enter the correct parameters or select ‘Start’ to auto-detect these (see **Fig. 97**). Then click ‘OK’. Next, choose the icon ‘Connect’ from the top menu.

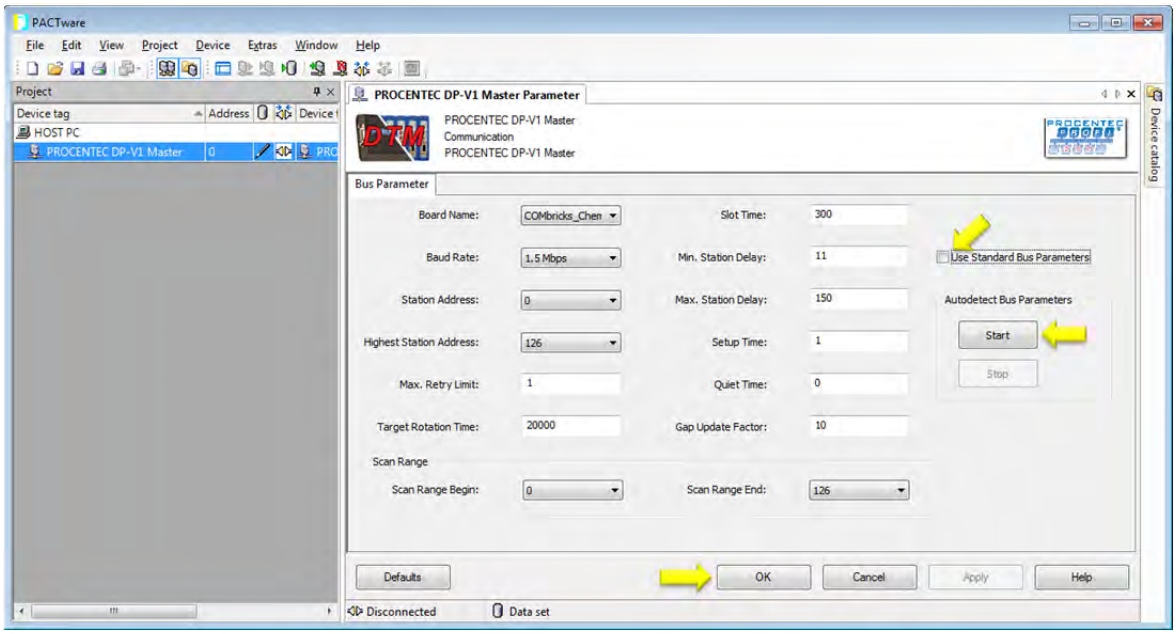

Fig. 97 - DTM master parameters

After you have correctly applied these steps, the COMbricks is now a DP-V1 master and ready for communication to field devices. For a detailed walk-through refer to the Download section of the PROCENTEC website for a comprehensive Quick Start for PACTware and FieldCare.


© PROCENTEC 2014 - Copyright - all rights reserved

# 14 Firmware updates

The Updater tools and new firmware for the Head Station and for the modules can be downloaded from **www.procentec.com/combricks**.

Firmware files have the extension *.PKG*.

For updating the firmware of the Head Station a mini USB cable is required.
For updating modules an Ethernet connection to the COMbricks is required.

## 14.1 Updating the Head Station

The Firmware Update procedure requires a power-down of the COMbricks system. Modules will not be active during the update sequence. This means that the repeater functionality of the COMbricks is disabled and (parts of) the network will be down.

After downloading the firmware and installing the firmware update tool, follow the procedure below:

**STEP 1:** Shutdown ALL power to the Head Station (also USB cables and power modules).

**STEP 2:** Hold the menu switch of the Head Station down and at the same time provide power to the Head Station. In the firmware update mode the SF and IOF LEDs should be blinking.

**STEP 3:** Connect the mini USB to the Head Station (see **Fig. 98**).

Fig. 98 - Firmware update cable


© PROCENTEC 2014 - Copyright - all rights reserved

| | |
|---|---|
| **STEP 4:** | Start the firmware update tool. If the tool detects the Head Station in the firmware update mode, the "Start update" button is enabled (see **Fig. 99**). |
| **STEP 5:** | Click on "Start update" to browse to the .PKG file and click "OK". The tool will now upload the new firmware to the Head Station. |
| **STEP 6:** | After the upload the Head Station will update the firmware. This can take a few minutes. **The window that appears be can closed directly**! |
| **STEP 7:** | Verify the firmware update by checking the firmware version in the web server (bottom of each web page). |

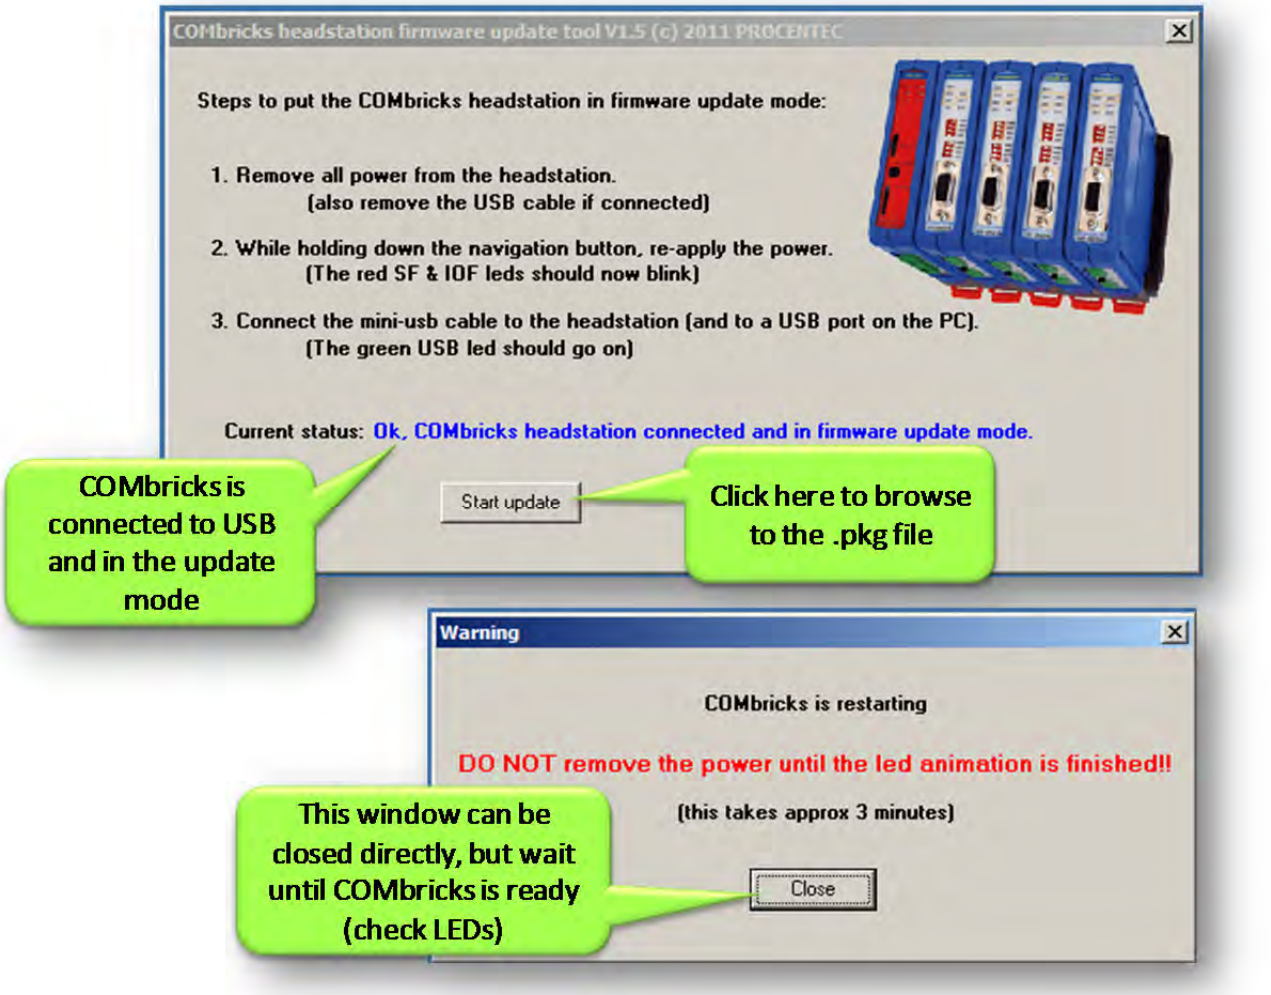
COMbricks headstation firmware update tool V1.5 (c) 2011 PROCENTEC
Steps to put the COMbricks headstation in firmware update mode:
1. Remove all power from the headstation.
(also remove the USB cable if connected)
2. While holding down the navigation button, re-apply the power.
(The red SF & IOF leds should now blink)
3. Connect the mini-usb cable to the headstation (and to a USB port on the PC).
(The green USB led should go on)
Current status: Ok, COMbricks headstation connected and in firmware update mode.
Start update
COMbricks is connected to USB and in the update mode
Click here to browse to the .pkg file
Warning
COMbricks is restarting
DO NOT remove the power until the led animation is finished!!
(this takes approx 3 minutes)
Close
This window can be closed directly, but wait until COMbricks is ready (check LEDs)

Fig. 99 - Firmware update tool


© PROCENTEC 2014 - Copyright - all rights reserved

## 14.2 Updating modules

Some COMbricks modules can get new functionality by updating the module firmware. These updates are not distributed through the Head Station firmware, but in separate Module firmware packages. For a listing of all available firmware, see **www.procentec.com/combricks**.

The tool for updating the module firmware is different than the tool for updating the Head Station. It can be downloaded from the above mentioned location.

After downloading the update tool and the module firmware follow the procedure below:

**STEP 1:** Make sure the Head Station and targeted module(s) are powered and running.

**STEP 2:** Connect an Ethernet cable between the Head Station and your workstation and verify the network connection.

**STEP 3:** Start the Module firmware update tool and enter the IP address of the targeted COMbricks Head Station. If you do not know the IP address, use 'Search network' to open the Discovery Tool and select the correct Head Station.

**STEP 4:** Click 'Connect to Head station' in the Update tool. It will scan all slots to check the module types.

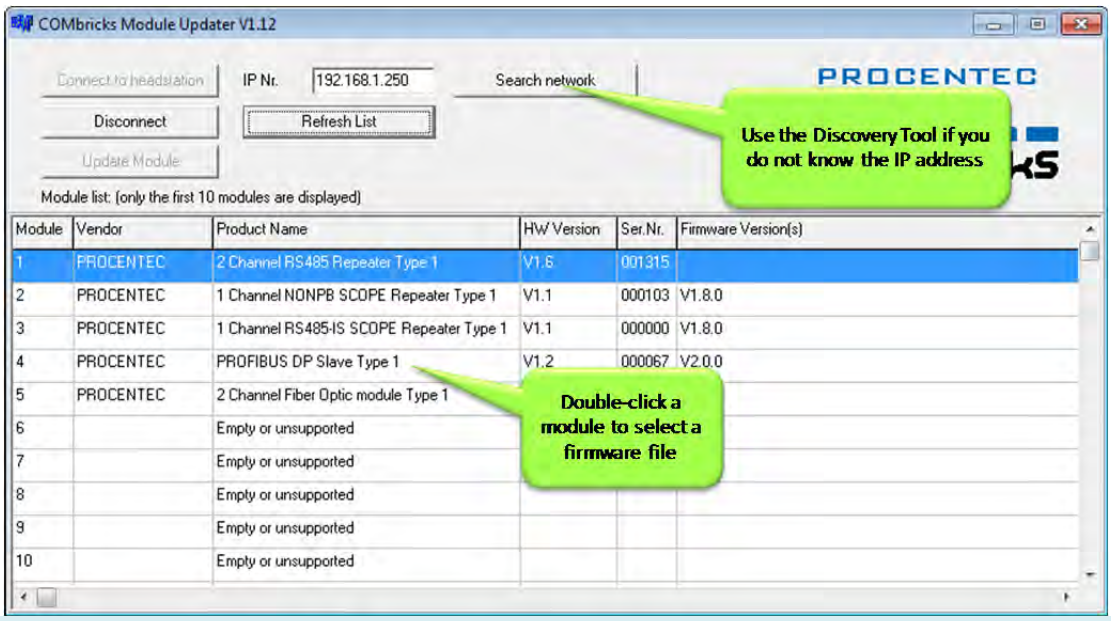
COMbricks Module Updater V1.12
Connect to headstation
IP Nr.
192.168.1.250
Search network
PROCENTEC
Disconnect
Refresh List
Update Module
Use the Discovery Tool if you do not know the IP address
Module list: (only the first 10 modules are displayed)
Module
Vendor
Product Name
HW Version
Ser.Nr.
Firmware Version(s)
1 PROCENTEC 2 Channel RS485 Repeater Type 1 V1.6 001315
2 PROCENTEC 1 Channel NONPB SCOPE Repeater Type 1 V1.1 000103 V1.8.0
3 PROCENTEC 1 Channel RS485-IS SCOPE Repeater Type 1 V1.1 000000 V1.8.0
4 PROCENTEC PROFIBUS DP Slave Type 1 V1.2 000067 V2.0.0
5 PROCENTEC 2 Channel Fiber Optic module Type 1
Double-click a module to select a firmware file
6 Empty or unsupported
7 Empty or unsupported
8 Empty or unsupported
9 Empty or unsupported
10 Empty or unsupported

**STEP 5:** Double-click the targeted module slot. A file dialog will appear; navigate to the local folder where you stored the firmware package.

**STEP 6:** The tool automatically filters all unrelated firmware files; you cannot select incorrect files. Choose the firmware and click 'Open'. The firmware update will start automatically. You should see the windows as shown in **Fig. 100** and **Fig. 101**.

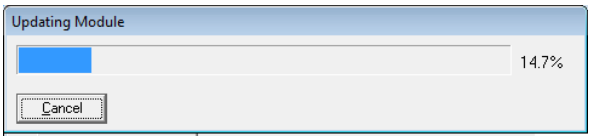


Fig. 100 - Updating module

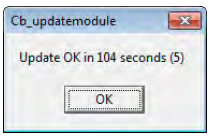


Fig. 101 - Update complete


© PROCENTEC 2014 - Copyright - all rights reserved

# 15 Tips and Tricks

## 15.1 Ident Number lookup

It is possible to check if COMbricks has info on a certain Ident Number (located in gsd.bin):

[COMbricks IP or DNS address]**/data_srv.cgi?data=gsdinfo:0x**[Ident Number]

Example: *http://192.168.1.230/data_srv.cgi?data=gsdinfo:0x6012*

It should display a line comparable with this:

**ABB**%20**Drives**%20**NPBA**%2D12%1FABB%2DDRIVES%1F40%1F8%1FNPBA%2D12%.....

## 15.2 Solution for secured email connections

Because COMbricks can only handle unsecured email connections, a proxy between COMbricks email and outgoing email could be helpful. hMailserver is a free tool that creates a mail server on one of the local PCs in the network. COMbricks can mail the events to this mailserver and the mailserver can forward it through a secured connection to an external mailserver.
**www.hmailserver.com**

## 15.3 IP address adjustment tool

Every time you go 1-on-1 with a laptop to a COMbricks unit, the IP settings of your laptop have to be adjusted to fit the local IP address of the COMbricks. To make this step very easy a tool is available with the name NetSetMan to automatically change all the settings according to customized profiles.
**www.netsetman.com**

## 15.4 Free Wi-Fi channel detector

For COMbricks streaming with the ProfiTrace 2 software over Wi-Fi, a clean connection is required to keep the streaming performance as high as possible. To verify that your Wi-Fi does not overlap with other channels, we recommend to use the free tool inSSIDer.
**www.metageek.net/products/inssider**

## 15.5 Some SNMP tools

To test the COMbricks SNMP functionality, you can use the tools below:
**- SNMPb**
**- NetSentinel by Micromedia**
**- MIBbrowser by iReasoning**
**- Solarwinds**


© PROCENTEC 2014 - Copyright - all rights reserved

# 16 Technical Data - COMbricks in general

| Technical Data - COMbricks in general | |
|---|---|
| **Dimensions, weight and mounting** | |
| **Dimensions H x D x W (mm)**<br>**Weight**<br>**DIN-rail** | 140 x 110 x 25 mm (1 module)<br>150 g<br>35 mm (minimal 50 mm wide) |
| **Ambient conditions** | |
| **Operating temperature**<br>**Isolation class** | 0..60° Celsius<br>IP 20 (DIN 40 050) |
| **Colours and material** | |
| **Housing**<br>**Backplane**<br>**DIN rail clip**<br>**Side cap** | RAL 5017 (blue) - ABS<br>RAL 7037 (grey) - ABS<br>RAL 2004 (orange) - PP<br>RAL 7024 (anthracite) - PP |


© PROCENTEC 2014 - Copyright - all rights reserved

# 17 Technical Data - Head Station 1A/1B/1C

| Technical Data - Head Station 1A/1B/1C | |
|---|---|
| **Type differences (Hardware is identical with all types)** | |
| Head Station 1A<br><br>Head Station 1B<br><br><br>Head Station 1C<br><br><br>For all Head Stations | No ProfiTrace OE<br><br>ProfiTrace OE for 1 PROFIBUS network +<br>ProfiTrace 2 live streaming + OPC (since June 2013)<br><br>ProfiTrace OE for 4 PROFIBUS networks +<br>ProfiTrace 2 live streaming + OPC<br><br>CommDTM |
| **Backplane** | |
| Modules<br>Current available for the backplane<br>PROFIBUS networks<br>Compatible backplane units | 32 (10 repeater modules positioned in the first 10 slots)<br>2.5 A<br>4<br>101-200012, 101-200023, 101-200024, 101-200027 |
| **Power supply specifications** | |
| Nominal supply voltage<br>Current consumption<br>Power<br>Reverse polarity protection<br>Redundant power supply<br>Wire diameter | 10.8 .. 26.4 VDC<br>800 mA (fully loaded)<br>20 W<br>Yes<br>Yes<br>< 2.5 $mm^2$ |
| **Ethernet** | |
| Connector<br>Cable length<br>Link speed<br>MAC address<br><br>Supported protocols<br><br>Default IP address after reset/purchase<br>Connections | RJ 45<br>Max. 100 m<br>10 / 100 Mbps<br>9C.B2.06.xx.xx.xx (label on the side of the Head Station)<br><br>HTTP, FTP, SMTP, TELNET, DHCP, SNMP<br><br>**192.168.1.254**<br>20 simultaneous web server clients |



© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - Head Station 1A/1B/1C | |
|---|---|
| **Relay contact** | |
| Resistance<br>Voltage<br>Current | 300 mOhm (plug included)<br>170 VAC<br>0.5 A |
| **SD Card** | |
| Types<br>Size | SD and SDHC<br>Max. 32 GB (2 GB is provided) |
| **Others** | |
| Weight<br>MTBF | 150 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 18 Technical Data - SCOPE Repeater (101-201210)

| Technical Data - SCOPE Repeater (101-201210) | |
|---|---|
| **Backplane** | |
| **PROFIBUS networks**<br>**Modules**<br>**Power supply**<br>**Current consumption**<br>**Compatible backplane units** | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 400 mA (555 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| **Supported Protocols**<br><br>**Address**<br>**Transmission speed**<br>**Transmission speed detection**<br><br>**Data delay time (normal mode)**<br><br><br>**Data delay time (redundant mode)**<br><br><br>**Delay time jitter** | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>NO bus address required<br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect (< 10 s detection and 50 s lost time)<br><br>2.0 TBit at 9.6 kbps .. 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps<br><br>12.0 TBit at 9.6 kbps .. 3 Mbps<br>12.75 TBit at 6 Mbps<br>13.75 TBit at 12 Mbps<br><br>Max. ¼ TBit |
| **Oscilloscope specifications** | |
| **Frequency**<br>**Resolution**<br>**Differential range** | 192 MS/s<br>50 mV<br>-6.436 .. 6.436 V |
| **PROFIBUS cable specifications** | |
| **Cable lengths**<br><br><br><br><br><br>**Wire diameter (for the screw terminals)**<br>**Wire type** | 1200 m at 9.6 kbps .. 93.75 kbps<br>1000 m at 187.5 kbps<br>400 m at 500 kbps<br>200 m at 1.5 Mbps<br>100 m at 3 Mbps .. 12 Mbps<br><br>< 1.5 $mm^2$<br>Stranded or solid core |



© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - SCOPE Repeater (101-201210) | |
|---|---|
| **Number of devices**<br>**Termination**<br><br>**Cascading depth**<br>**Redundancy** | Maximum 31 devices per channel (busloads)<br>Integrated (switchable - PB RS 485 - 390/220/390 Ohms)<br><br>No limit, only busparameter limitation of the master<br>Yes, maximum 10 cables activated by switch |
| **Dipswitches** | |
| **NW0 NW1**<br>**LEFT LEFT**<br>**RIGHT LEFT**<br>**LEFT RIGHT**<br>**RIGHT RIGHT**<br><br>**RED**<br>**LEFT / RIGHT**<br><br>**H/S**<br>**LEFT / RIGHT** | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF / ON<br><br>Settings<br>Hardware / Software<br> 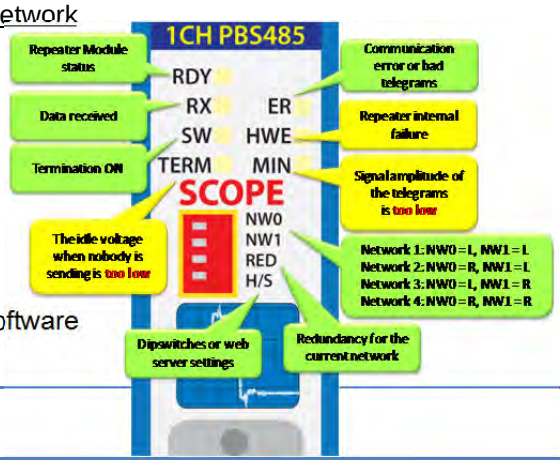 |
| **PROFIBUS connectors** | |
| **CH1**<br>**A, B**<br>**SH**<br>**I** | Screw terminals + DB9 connector (1-on-1)<br>Green wire, Red wire<br>Direct grounding<br>Indirect grounding |
| **LEDs** | |
| **RX**<br>**SW**<br>**HWE**<br>**ER**<br>**MIN**<br>**TERM** | Receiving telegrams (blinking)<br>Termination ON<br>Internal repeater error (contact PROCENTEC)<br>No or bad telegrams detected<br>Signal amplitude of the telegrams too low (< 2.5 V)<br>Idle voltage too low ( <0.95 V .. >1.26 V )<br><br>*The alarm values be changed through the web server.* |
| **Others** | |
| **Head Station firmware**<br>**Operating temperature**<br>**Weight**<br>**MTBF** | At least version 1.260<br>0 .. 60 °C<br>120 g<br>To be defined |



© PROCENTEC 2014 - Copyright - all rights reserved

# 19 Technical Data - 2 Channel Repeater (101-201102)

| Technical Data - 2 Channel Repeater (101-201102) | |
|---|---|
| **Backplane** | |
| **PROFIBUS networks**<br>**Modules**<br>**Power supply**<br>**Current consumption**<br>**Compatible backplane units** | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 300 mA (500 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| **Supported Protocols**<br><br>**Address**<br><br>**Transmission speed**<br>**Transmission speed detection**<br><br>**Data delay time (normal mode)**<br><br><br><br><br><br>**Data delay time (redundant mode)**<br><br><br><br><br><br>**Delay time jitter** | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>NO bus address required<br><br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect (< 10 s detection and 50 s lost time)<br><br>1.6 TBit at 9.6 kbps .. 93.75 kbps<br>1.7 TBit at 187.5 kbps .. 500 kbps<br>1.8 TBit at 1.5 Mbps<br>2.0 TBit at 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps<br><br>11.6 TBit at 9.6 kbps .. 93.75 kbps<br>11.7 TBit at 187.5 kbps .. 500 kbps<br>11.8 TBit at 1.5 Mbps<br>12.0 TBit at 3 Mbps<br>12.75 TBit at 6 Mbps<br>13.75 TBit at 12 Mbps<br><br>Max. ¼ TBit |
| **PROFIBUS cable specifications** | |
| **Cable lengths**<br><br><br><br><br><br>**Wire diameter (for the screw terminals)**<br>**Wire type** | 1200 m at 9.6 kbps .. 93.75 kbps<br>1000 m at 187.5 kbps<br>400 m at 500 kbps<br>200 m at 1.5 Mbps<br>100 m at 3 Mbps .. 12 Mbps<br><br>< 2.5 $mm^2$<br>Stranded or solid core |


© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - 2 Channel Repeater (101-201102) | |
|---|---|
| **Number of devices** | Maximum 31 devices per channel (busload) |
| **Termination** | Integrated (switchable)<br>Powered according to PB RS 485 (390/220/390 Ohms) |
| **Cascading depth** | No limit, only busparameter limitation of the master |
| **Redundancy** | Yes, maximum 10 cables activated by switch |
| **Dipswitches** | |
| **NW0 NW1**<br>**LEFT LEFT**<br>**RIGHT LEFT**<br>**LEFT RIGHT**<br>**RIGHT RIGHT**<br><br>**RED**<br>**LEFT**<br>**RIGHT**<br><br>**H/S**<br>**LEFT**<br>**RIGHT** | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF<br>ON<br><br>Settings<br>Hardware<br>Software<br> 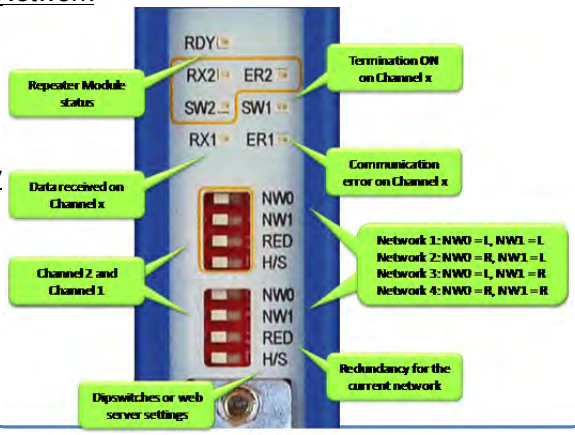 |
| **PROFIBUS connectors** | |
| **CH2**<br>**A, B**<br>**SH**<br>**I**<br><br>**CH1**<br>**A, B**<br>**SH**<br>**I** | Screw terminals<br>Green wire, Red wire<br>Direct grounding<br>Indirect grounding<br><br>Screw terminals + DB9 connector (1-on-1)<br>Green wire, Red wire<br>Direct grounding<br>Indirect grounding |
| **Others** | |
| **Head Station firmware**<br>**Operating temperature**<br>**Weight**<br>**MTBF** | ALL<br>0 .. 60 °C<br>125 grams<br>To be defined |



© PROCENTEC 2014 - Copyright - all rights reserved

# 20 Technical Data - 1 Channel Repeater (101-201101)

| Technical Data - 1 Channel Repeater (101-201101) | |
|---|---|
| **Backplane** | |
| **PROFIBUS networks**<br>**Modules**<br>**Power supply**<br>**Current consumption**<br>**Compatible backplane units** | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 160 mA (270 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| **Supported Protocols**<br><br>**Address**<br><br>**Transmission speed**<br>**Transmission speed detection**<br><br>**Data delay time (normal mode)**<br><br><br><br><br><br>**Data delay time (redundant mode)**<br><br><br><br><br><br>**Delay time jitter** | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>NO bus address required<br><br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect (< 10 s detection and 50 s lost time)<br><br>1.6 TBit at 9.6 kbps .. 93.75 kbps<br>1.7 TBit at 187.5 kbps .. 500 kbps<br>1.8 TBit at 1.5 Mbps<br>2.0 TBit at 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps<br><br>11.6 TBit at 9.6 kbps .. 93.75 kbps<br>11.7 TBit at 187.5 kbps .. 500 kbps<br>11.8 TBit at 1.5 Mbps<br>12.0 TBit at 3 Mbps<br>12.75 TBit at 6 Mbps<br>13.75 TBit at 12 Mbps<br><br>Max. ¼ TBit |
| **PROFIBUS cable specifications** | |
| **Cable lengths**<br><br><br><br><br><br>**Wire diameter (for the screw terminals)**<br>**Wire type** | 1200 m at 9.6 kbps .. 93.75 kbps<br>1000 m at 187.5 kbps<br>400 m at 500 kbps<br>200 m at 1.5 Mbps<br>100 m at 3 Mbps .. 12 Mbps<br><br>< 2.5 $mm^2$<br>Stranded or solid core |



© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - 1 Channel Repeater (101-201101) | |
|---|---|
| **Number of devices** | Maximum 31 devices per channel (busloads) |
| **Termination** | Integrated (switchable)<br>Powered according to PB RS 485 (390/220/390 Ohms) |
| **Cascading depth** | No limit, only busparameter limitation of the master |
| **Redundancy** | Yes, maximum 10 cables activated by switch |
| **Dipswitches** | |
| **NW0 NW1**<br>**LEFT LEFT**<br>**RIGHT LEFT**<br>**LEFT RIGHT**<br>**RIGHT RIGHT**<br><br>**RED**<br>**LEFT**<br>**RIGHT**<br><br>**H/S**<br>**LEFT**<br>**RIGHT** | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF<br>ON<br><br>Settings<br>Hardware<br>Software<br> 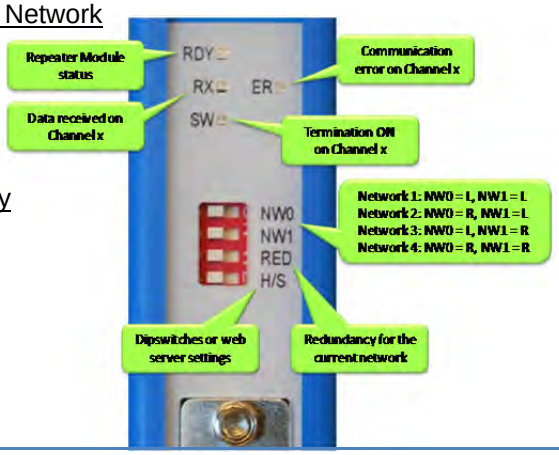 <br> |
| **PROFIBUS connectors** | |
| **CH1**<br>**A, B**<br>**SH**<br>**I** | Screw terminals + DB9 connector (1-on-1)<br>Green wire, Red wire<br>Direct grounding<br>Indirect grounding |
| **Others** | |
| **Head Station firmware**<br>**Operating temperature**<br>**Weight**<br>**MTBF** | ALL<br>0 .. 60 °C<br>110 grams<br>To be defined |



© PROCENTEC 2014 - Copyright - all rights reserved

# 21 Technical Data - Fiber Optic Module (101-201510)

| Technical Data - 2 Channel Fiber Optic Module Type 1 (101-201510) | |
|---|---|
| **Backplane** | |
| **PROFIBUS networks**<br>**Modules**<br>**Power supply**<br>**Current consumption**<br><br>**Compatible backplane units** | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 360 mA (510 mA max)<br><br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| **Supported Protocols**<br><br>**Address**<br><br>**Transmission speed**<br><br>**Transmission speed detection**<br><br>**Fiber optic cable delay calculation (between 2 modules, 1 direction)** | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>NO bus address required<br><br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br><br>Auto detect (< 10 s detection and 50 s lost time)<br><br>$\text{FO cable delay} = (5 * 10^{-6}) \times \text{FO cable length} \times \text{Baudrate}$<br><br>Example: 1.5 Mbps, 3 km FO cable<br><br>$\text{FO cable delay} = 0.000005 \times 3 \times 1500000 = 22.5\ \text{TBit}$ |
| **Module delay time (normal mode)**<br><br><br><br><br><br>**Module delay time (redundant mode)**<br><br><br><br><br><br>**Delay time jitter** | 1.6 TBit at 9.6 kbps .. 93.75 kbps<br>1.7 TBit at 187.5 kbps .. 500 kbps<br>1.8 TBit at 1.5 Mbps<br>2.0 TBit at 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps<br><br>11.6 TBit at 9.6 kbps .. 93.75 kbps<br>11.7 TBit at 187.5 kbps .. 500 kbps<br>11.8 TBit at 1.5 Mbps<br>12.0 TBit at 3 Mbps<br>12.75 TBit at 6 Mbps<br>13.75 TBit at 12 Mbps<br><br>Max. ¼ TBit |


© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - 2 Channel Fiber Optic Module Type 1 (101-201510) | |
|---|---|
| **Total delay between 2 modules (2 directions)** | $\text{Tdelay} = (\text{FO cable delay} + (2 \times \text{Module delay time})) \times 2$<br><br>Continued example: 1.5 Mbps, 22.5 TBit FO delay:<br><br>$\text{Tdelay} = (22.5 + (2 \times 1.8)) \times 2 = 52.2$ TBit |
| **Fiber optic specifications** | |
| **Cable type**<br>**Cable length**<br>**Connectors**<br><br>**Topologies**<br><br>**Fiber Optic type**<br><br><br>**Cascading depth**<br>**Redundancy** | Multimode G62.5 / 125 (OM1)<br>Max. 3 km (baudrate independent)<br>4 x ST/BFOC (2 channels)<br><br>Point-to-point, Star, Bus<br><br>Multimode 850 nm<br>Compatible with most other vendors in 3rd party compatibility mode<br><br>No limit, only busparameter limitation of the master<br>Yes, maximum 10 cables activated by switch |
| **Dipswitches** | |
| **NW0 NW1**<br>**LEFT LEFT**<br>**RIGHT LEFT**<br>**LEFT RIGHT**<br>**RIGHT RIGHT**<br><br>**RED**<br>**LEFT**<br>**RIGHT**<br><br>**H/S**<br>**LEFT**<br>**RIGHT** | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF<br>ON<br><br>Settings<br>Hardware<br>Software<br><br> 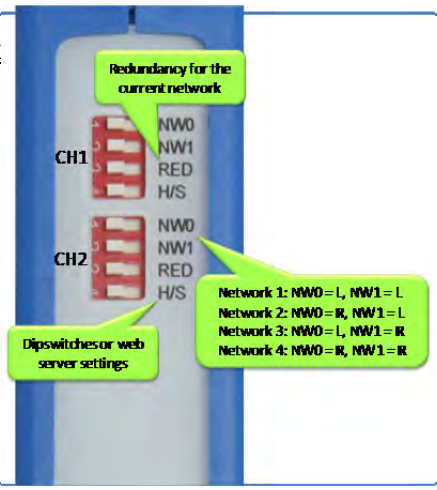 |
| **Others** | |
| **Head Station firmware**<br>**Operating temperature**<br>**Weight**<br>**MTBF** | 1.264 and higher<br>0 .. 60 °C<br>121 gram<br>To be defined |



© PROCENTEC 2014 - Copyright - all rights reserved

# 22 Technical Data - SALT Repeater (101-201710)

| Technical Data - Alternative Cable Repeater (101-201710) | |
|---|---|
| **Backplane** | |
| PROFIBUS networks<br>Modules<br>Power supply<br>Current consumption<br>Compatible backplane units | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 400 mA (555 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| Supported Protocols<br><br><br>Address<br>Transmission speed<br>Transmission speed detection<br><br>Data delay time (normal mode)<br><br><br><br>Data delay time (redundant mode)<br><br><br><br>Delay time jitter | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>NO bus address required<br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect (< 10 s detection and 50 s lost time)<br><br>2.0 TBit at 9.6 kbps .. 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps<br><br>12.0 TBit at 9.6 kbps .. 3 Mbps<br>12.75 TBit at 6 Mbps<br>13.75 TBit at 12 Mbps<br><br>Max. ¼ TBit |
| **Oscilloscope specifications** | |
| Frequency<br>Resolution<br>Differential range | 192 MS/s<br>50 mV<br>-6.436 .. 6.436 V |
| **Cable specifications** | |
| Cable lengths<br><br>Wire diameter (for the screw terminals)<br>Wire type<br>Number of devices<br><br>Cascading depth<br>Redundancy | Depends on the cable type used<br><br>< 2.5 $mm^2$<br>Stranded or solid core<br>Maximum 31 devices per channel (busloads)<br><br>No limit, only busparameter limitation of the master<br>Yes, maximum 10 cables activated by switch |



© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - Alternative Cable Repeater (101-201710) | |
|---|---|
| **Termination** | |
| Termination range (MIDDLE)<br>Idle voltage range (PULL-UP) | 94 .. 940 Ohm (DC)  57 .. 1500 Ohm (AC)<br>0 .. 5 V |
| **Dipswitches** | |
| NW0  NW1<br>LEFT  LEFT<br>RIGHT  LEFT<br>LEFT  RIGHT<br>RIGHT  RIGHT<br><br>RED<br>LEFT / RIGHT<br><br>H/S<br>LEFT / RIGHT | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF / ON<br><br>Settings<br>Hardware / Software<br> 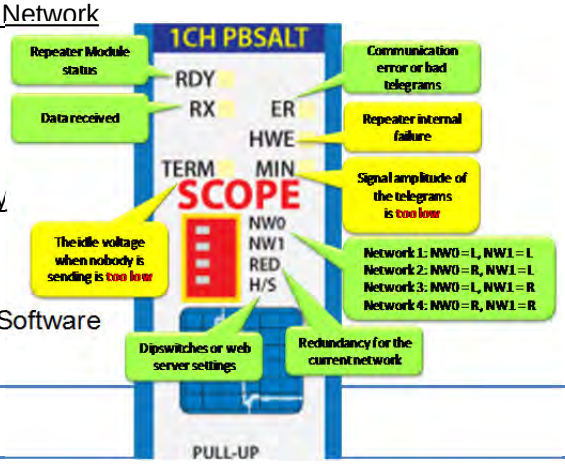 |
| **PROFIBUS connectors** | |
| CH1<br>A, B<br>SH<br>I | Screw terminals<br>Green wire, Red wire<br>Direct grounding<br>Indirect grounding |
| **LEDs** | |
| RDY<br>RX<br>HWE<br>ER<br>MIN<br>TERM | Module is ready for operation (ON)<br>Receiving telegrams (blinking)<br>Internal repeater error (contact PROCENTEC)<br>No or bad telegrams detected<br>Signal amplitude of the telegrams too low ( < 2.5 V )<br>Idle voltage too low ( <0.5 V .. >1.7 V )<br><br>*Alarm values can be changed through the web server.* |
| **Others** | |
| Head Station firmware<br>Operating temperature<br>Weight<br>MTBF | At least version 1.264<br>0 .. 60 °C<br>120 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD  WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 23 Technical Data - PA Module (101-201610)

| Technical Data - PA Module (101-201610) | |
|---|---|
| **Backplane** | |
| PROFIBUS networks<br>Modules<br><br><br>Power supply for the module<br>Current consumption<br>Compatible backplane units | 4 (set by dipswitches or web server)<br>Link mode: 9 modules (in the first 10 slots)<br>Coupler mode: 9 modules (in the first 10 slots)<br>Monitoring mode: 4 modules (in the first 10 slots)<br><br>Provided through the backplane<br>± 350 mA (555 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **PROFIBUS PA power specifications** | |
| Trunk voltage<br>Trunk current<br>Current consumption<br>Number of devices<br>Baudrate | 10 .. 27 V (customizable and Non-Ex)<br>500 mA<br>10 mA (in all modes)<br>32 (PROFIBUS PA specifications)<br>31.25 kbps PA signal |
| **PROFIBUS PA cable specifications** | |
| Cable length<br>Wire diameter<br>Wire type<br>Termination | Max. 1900 m cable length (PROFIBUS PA specifications)<br>< 2.5 mm2<br>Stranded or solid core<br>Automatic (ON in Link and Coupler mode) |
| **Connector specifications** | |
| 2 Removable PA screw terminals<br>PA-, PA+<br>SH<br>I<br><br>Removable power connector<br>-, +<br>SH | (1-on-1)<br>Wire colors are undefined<br>Direct grounding<br>Indirect grounding<br><br><br>11 .. 28 V (Max. 600 mA)<br>Direct grounding |
| **PROFIBUS DP specifications** | |
| Transmission speed<br>Transmission speed detection<br>PROFBIUS busparameters | 9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect (< 10 s detection and 50 s lost time)<br>No adjustments required in Link mode |


© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - PA Module (101-201610) | |
|---|---|
| Address<br><br>Supported Protocols | NO bus address required (Link has address 1 on PA)<br><br>DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol |
| **Oscilloscope specifications** | |
| AC PA voltage<br>DC PA voltage<br>DC PA current: | 4 MS/s, resolution 7.5 mV, range -0.95..0.95 V<br>1 kS/s, resolution 75 mV, range -38..+38 V<br>1 kS/s, resolution 1 mA, range 0..1024 mA |
| **Dipswitches** | |
| NW0 NW1<br>LEFT LEFT<br>RIGHT LEFT<br>LEFT RIGHT<br>RIGHT RIGHT<br><br>LNK<br>LEFT / RIGHT<br><br>H/S<br>LEFT / RIGHT | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Link mode<br>OFF / ON<br><br>Settings<br>Hardware / Software<br> 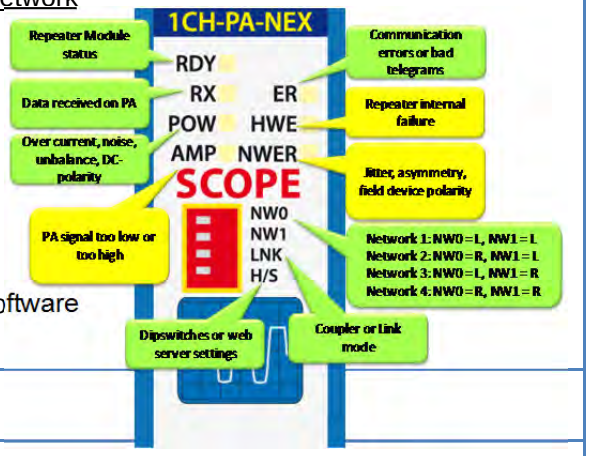 |
| **LEDs** | |
| RDY<br>RX<br>HWE<br>ER<br>AMP<br>POW<br>NWER | Module is ready for operation (ON)<br>Receiving PA telegrams (blinking)<br>Internal repeater error (contact PROCENTEC)<br>No or bad telegrams on PA detected<br>PA signal too low or too high<br>Over current, noise, unbalance, DC-polarity<br>Jitter, asymmetry, field device polarity<br><br>*Alarm values can be changed through the web server.* |
| **Others** | |
| Head Station firmware<br>Operating temperature<br>Weight<br>MTBF | At least version 1.279<br>0 .. 60 °C<br>133 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |



© PROCENTEC 2014 - Copyright - all rights reserved

# 24 Technical Data - 4 CH Relay Module (101-210210)

| Technical Data - 4 Channel Relay Module (101-210210) | |
|---|---|
| **Backplane** | |
| Controllers<br><br>Modules<br>Power supply<br>Current consumption<br><br>Compatible backplane units | Web server, PROFINET IO device, PROFIBUS DP slave<br><br>32 (all slots)<br>Provided through the backplane<br>± 225 mA (465 mA max)<br><br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Relays** | |
| Relays<br>Current<br>Voltage<br>Resistance<br>Toggles | 4 (2 on the front, and 2 on the bottom)<br>5 A per relay<br>230 VAC<br>300 mOhm (including connectors)<br>100000 (at 5A - 230 VAC) |
| **Connectors** | |
| Pins<br><br><br><br>Wire diameter (for the screw terminals)<br>Wire type | 1 = No (normally open)<br>2 = Common<br>3 = Nc (normally closed)<br><br>< 2.5 $mm^2$<br>Stranded or solid core<br> 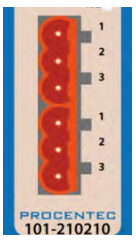 |
| **Others** | |
| Head Station firmware<br>Dimensions<br>Operating temperature<br>Weight<br>MTBF | V1.260 and later<br>140 x 110 x 25 mm<br>0 .. 60 °C<br>125 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 25 Technical Data - 8 CH D-out Module (101-210110)

| Technical Data - 8 Channel Digital Out Module (101-210110) | |
|---|---|
| **Backplane** | |
| Controllers<br><br>Modules<br>Power supply module electronics<br>Power supply digital outputs<br><br>Current consumption module electronics<br>Compatible backplane units | Web server, PROFINET IO device, PROFIBUS DP slave<br><br>32 (all slots)<br>Provided through the backplane<br>Provided through an additional 3-pin connector<br><br>± 290 mA (465 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Digital Outputs** | |
| Outputs<br>Current<br>Voltage range<br>Losses | 8 Digital Outs on 1 connector<br>0.5 A per Digital Out (direct current)<br>15..30 VDC (depends on provided voltage)<br>0.211 Ohm loss per Digital Out |
| **Power Connector** | |
| Pins power connector<br>Wire diameter (for the screw terminals)<br>Wire type | 1 = -, 2 = +, 3 = SH<br>< 2.5 $mm^2$<br>Stranded or solid core |
| **Digital Output Connector** | |
| Pins DO connector<br>Wire diameter (for the screw terminals)<br>Wire type | 1 = GND, 2..9 = DO0..DO7, 10 = GND<br>< 1.5 $mm^2$<br>Stranded or solid core |
| **Others** | |
| Head Station firmware<br>Dimensions<br>Operating temperature<br>Weight<br>MTBF | V1.260 and later<br>140 x 110 x 25 mm<br>0 .. 60 °C<br>105 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |



© PROCENTEC 2014 - Copyright - all rights reserved

# 26 Technical Data - 8 CH D-in Module (101-210010)

| Technical Data - 8 Channel Digital In Module (101-210010) | |
|---|---|
| **Backplane** | |
| Controllers | PROFINET IO device, PROFIBUS DP slave |
| Modules | 32 (all slots) |
| Power supply | Provided through the backplane |
| Current consumption | Typ. ±169 mA (465 mA max) |
| Compatible backplane units | 101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Digital Inputs** | |
| Inputs | 8 digital inputs on 1 connector |
| Power per input | 240 mW at 24 V |
| Signal Voltage for '1' | 3 .. 32 VDC |
| Input detection frequency | Max. 3 ms |
| **Digital Input Connector** | |
| Pins of Digital Inputs connector | 1 = GND, 2..9 = DI0..DI7, 10 = GND1 |
| Wire diameter (for the screw terminals) | < 1.5 $mm^2$ |
| Wire type | Stranded or solid core |
| **Others** | |
| Head Station firmware<br>Dimensions<br>Operating temperature<br>Weight<br>MTBF | V1.271 and later<br>140 x 110 x 25 mm<br>0 .. 60 °C<br>100 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |





© PROCENTEC 2014 - Copyright - all rights reserved

# 27 Technical Data – RS 485-IS Barrier (101-201410)

| Technical Data – RS 485-IS Barrier (101-201410) | |
|---|---|
| **Backplane** | |
| PROFIBUS networks<br>Modules<br>Power supply<br>Current consumption<br>Compatible backplane units | 4 (set by dipswitches or web server)<br>10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 450 mA (740 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Protocol specifications** | |
| Supported Protocols<br><br>Address<br><br>Transmission speed<br><br>Transmission speed detection<br><br>Data delay time (normal mode)<br><br>Data delay time (redundant mode)<br><br>Delay time jitter | DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol<br><br>No bus address required<br><br>9.6 kbps .. 1.5 Mbps (including 45.45 kbps)<br><br>Auto detect (< 10 s detection and 50 s lost time)<br><br>2.0 TBit<br><br>12.0 TBit<br><br>Max. ¼ TBit |
| **Oscilloscope specifications** | |
| Frequency<br>Resolution<br>Differential range | 192 MS/s<br>27 mV<br>-3.49..+3.49 V |
| **PROFIBUS cable specifications** | |
| Cable lengths<br><br><br><br>Number of devices<br><br>Required termination<br><br>Redundancy | 1200 m at 9.6 kbps .. 93.75 kbps<br>1000 m at 187.5 kbps<br>400 m at 500 kbps<br>200 m at 1.5 Mbps<br><br>Maximum 31 devices per channel (busloads)<br><br>DB9-IS connector with internal 200Ω only<br><br>Yes, maximum 10 cables activated by switch |


© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data – RS 485-IS Barrier (101-201410) | |
|---|---|
| **Dipswitches** | |
| NW0 NW1<br>LEFT LEFT<br>RIGHT LEFT<br>LEFT RIGHT<br>RIGHT RIGHT<br><br>RED<br>LEFT / RIGHT<br><br>H/S<br>LEFT / RIGHT | PROFIBUS Network<br>1<br>2<br>3<br>4<br><br>Redundancy<br>OFF / ON<br><br>Settings<br>Hardware / Software |
| **ATEX (electrical)** | |
| Uo<br>Io<br>Ui<br>Li<br>Ci<br>Output characteristic | 4.2 V<br>149 mA<br>≥ 4.2<br>≈ 0 µH V<br>Negligibly small<br>Linear |
| **ATEX (compliance):** | |
| II (2) G [Ex ia Gb] IIC<br>EN-IEC60079-0: 2009 / EN-IEC60079-11: 2012 / EN-IEC60079-25: 2010<br>PROFIBUS International IS Installation Guidelines<br>Certification number: **DEKRA 12ATEX0192** | |
| **LEDs** | |
| RDY<br>RX<br>HWE<br>ER<br>MIN<br>TERM | Module is ready for operation (ON)<br>Receiving telegrams (blinking)<br>Internal repeater error (contact PROCENTEC)<br>No or bad telegrams detected<br>Signal amplitude of the telegrams too low (< 1.64 V)<br>Idle voltage too low ( <0.35 V .. >0.75 V )<br>*Alarm values can be changed through the web server.* |
| **Others** | |
| Head Station firmware<br>Operating temperature<br>Weight<br>MTBF | At least version 1.272<br>0 .. 60 °C<br>150 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |

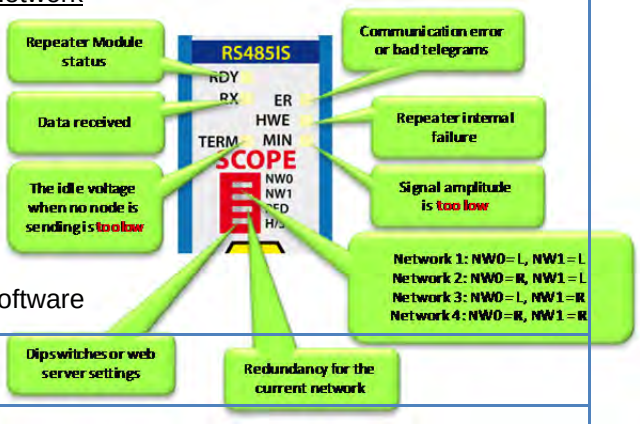




© PROCENTEC 2014 - Copyright - all rights reserved

# 28 Technical Data - PROFIBUS Slave Module PBS-001

| Technical Data – PROFIBUS Slave PBS-001 (101-220210) | |
|---|---|
| **Backplane** | |
| PROFIBUS networks<br>Modules<br><br>Power supply<br>Current consumption<br><br>Compatible backplane units<br>Compatible partner/gateway modules | 10 (web server), 4 (dipswitches and web server)<br>10 (positioned in the first 10 slots)<br><br>Provided through the backplane<br>± 390 mA typical (625 mA max)<br><br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027<br>101-220210, 101-220110, 101-210210, 101-210110, 101-210010 |
| **PROFIBUS DP Slave Device** | |
| Supported protocol<br>Ident Number<br>GSD filename<br><br>Bus address<br><br><br>Transmission speed<br>Transmission speed detection<br><br>Maximum transferrable data<br>Max. transferrable data per gateway<br>Maximum number of gateway modules<br><br>Selectable number of I/O bytes or<br>words per gateway<br><br>Consistent Gateways:<br><br><br>Failsafe options<br>Simulation input patterns | DP-V0 (certification number: Z01776)<br>696F<br>PROC696F.gsd (www.procentec.com/downloads)<br><br>1 – 99 (set by rotary switches) or<br>0 – 126 (set by software)<br><br>9.6 kbps .. 12 Mbps (including 45.45 kbps)<br>Auto detect<br><br>244 bytes input and 244 bytes output<br>128 bytes input and 128 bytes output<br>9<br><br>1, 2, 3, 4, 8, 12, 16, 20, 24, 28, 32, 64 bytes<br>48, 64 words<br><br>2, 3, 4, 8, 12, 16, 20, 24, 28, 32, 64 bytes<br>48, 64 words<br><br>Outputs OFF, Outputs ON, Keep last value, Custom failsafe value<br>ON, OFF, Blink, Up counter, Down counter, Zig Zag |
| **RS 485 Repeater** | |
| Bus channels<br>Connector<br><br>Number of devices<br><br>Cable lengths<br><br><br><br><br><br>Supported protocols | 1 x RS 485<br>DB9 (A, B, 5V, GND)<br><br>Maximum 31 devices per channel (busloads)<br><br>1200 m at 9.6 kbps .. 93.75 kbps<br>1000 m at 187.5 kbps<br>400 m at 500 kbps<br>200 m at 1.5 Mbps<br>100 m at 3 Mbps .. 12 Mbps<br><br>DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive |



© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data – PROFIBUS Slave PBS-001 (101-220210) | |
|---|---|
| | and any other FDL based protocol |
| Data delay time | 2.0 TBit at 9.6 kbps .. 3 Mbps<br>2.75 TBit at 6 Mbps<br>3.75 TBit at 12 Mbps |
| Delay time jitter | Max. ¼ TBit |
| **Dipswitches** | |
| <u>NW0 NW1</u><br>LEFT LEFT<br>RIGHT LEFT<br>LEFT RIGHT<br>RIGHT RIGHT<br><br><u>NU</u><br><br><u>H/S</u><br>LEFT / RIGHT | <u>PROFIBUS Network</u><br>1<br>2<br>3<br>4<br><br>Not Used<br><br><u>Settings</u><br>Hardware / Software |
| **LEDs** | |
| RDY (ON)<br>RDY (Flashing)<br><br>RUN (ON)<br><br>SF (ON)<br><br>BF (ON) | Module is ready for operation<br>Connecting or updating<br><br>Internal firmware is OK<br><br>System Failure: diagnostics or configuration mismatch<br><br>Bus Failure: not in Data Exchange with master |
| **Others** | |
| Head Station firmware<br>Operating temperature<br>Weight<br>MTBF | At least version 1.275<br>0 .. 60 °C<br>120 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |

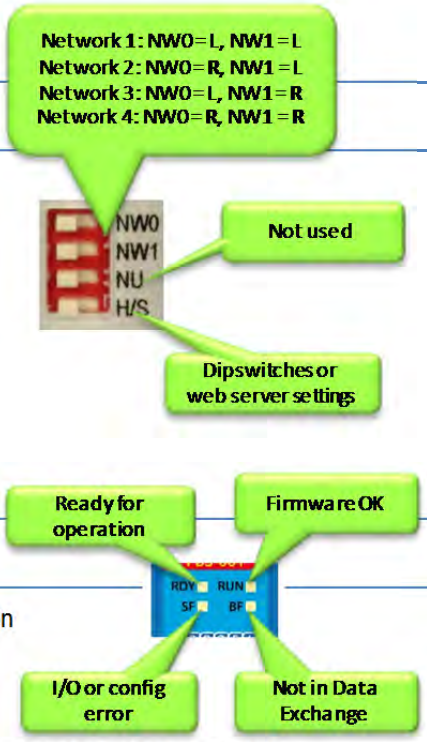




© PROCENTEC 2014 - Copyright - all rights reserved

# 29 Technical Data – PROFINET Device PND001

| Technical Data - PROFINET PND001 (101-220110) | |
|---|---|
| **Backplane** | |
| Modules<br>Power supply<br>Current consumption<br>Compatible backplane units<br><br>Compatible partner/gateway modules | 10 (positioned in the first 10 slots)<br>Provided through the backplane<br>± 410 mA typical (625 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027<br>101-220210, 101-220110, 101-210210, 101-210110, 101-210010 |
| **PROFINET specifications** | |
| PROFINET conformance class<br>Supported protocols<br><br>Switch propagation time<br><br>Cycle times<br><br><br><br>PROFINET IO cyclic process image<br><br><br><br><br><br><br>Transferrable bytes to proxies (inputs and outputs) | B<br>RT_CLASS_1, RTA, UDP, DCP, ARP, LLDP, SNMP (MIB II)<br><br>To be defined<br><br>1 ms - 1..128 input or output bytes<br>2 ms - 129..256 input or output bytes<br>4 ms - 257..512 input or output bytes<br>8 ms - 513..1024 input or output bytes<br><br>1024 input bytes, provider (IOPS) and consumer (IOCS) data qualifiers bytes included.<br>- PND-001 module 4 bytes IOPS<br>- Each input module 1 byte IOPS<br>- Each output module 1 byte IOCS<br><br>1024 output bytes, provider (IOPS) and consumer (IOCS) data qualifiers bytes included.<br>- PND-001 module 4 bytes IOCS<br>- Each output module 1 byte IOPS<br>- Each input module 1 byte IOCS<br><br>1, 2, 3, 4, 8, 12, 16, 20, 24, 28, 32, 64, 96, 128, 160, 192, 204 |
| **PROFINET cable and connector specifications** | |
| Technology standards<br><br>Transmission speed detection<br><br>Cable length<br><br>Connectors | 100BaseTX, 10BaseT<br><br>Auto detect, Auto cross-over, Auto polarity<br><br>Max. 100 m<br><br>RJ 45<br>- 90 Degree connector for port 1 is not recommended.<br>- Shielded connectors are recommended. |


© PROCENTEC 2014 - Copyright - all rights reserved

| Technical Data - PROFINET PND001 (101-220110) | |
|---|---|
| **PROFINET Device Name** | |
| Rotary switch<br>(the use of setting position 1..9 overrides the stored device name).<br><br>Maximum device name length | 0 = Stored device name (set by software - DCP protocol)<br>1 = "COMbricks-1" .... 9 = "COMbricks-9"<br><br>63 characters separated by (.) or (-) and a total length of max 240 characters |
| **LEDs** | |
| RDY (OFF)<br>RDY (blinking at 0.3Hz)<br><br>RDY (blinking at 1Hz)<br>RDY (ON)<br>RUN (ON)<br><br>SF (ON)<br>BF (OFF)<br>BF (blinking at 0.5 Hz)<br>BF (ON) | Module is not powered or module is faulty.<br>Module is receiving new firmware from the Head Station. Do not remove module or power down the Head Station.<br>Module is communicating with the Head Station.<br>The communication with the Head Station is established.<br>Application is running<br><br>PROFINET configuration mismatch or system error<br>Device is in PROFINET Data Exchange.<br>No Data Exchange, but physical link established.<br>No physical link. |
| **Certification, Approvals and Identification** | |
| Approvals<br><br><br><br>PROFINET certification number<br><br>GSD filename<br>GSD bitmap filename<br><br>Manufacturer / Product Ident Number | PNO PROFINET certificate (GSDML 2.25)<br>CE Emission acc. to EN 55022 (2006) + A1 (2007) class A<br>CE Immunity acc. to EN 55024 (1998) + A1 (2001) + A2 (2003) level 10V/m 10Vrms<br>FCC Emission 47 CFR 15 class A<br>ZZ10500<br><br>GSDML-V2.25-PROCENTEC-COMbricks PND_001-20120831.xml<br>GSDML-4000-0001-PND001.bmp<br><br>0x4000 hex - 0x0001 hex |
| **Others** | |
| Head Station firmware<br>Operating temperature<br>Weight<br>MTBF | Version 1.264 or higher<br>0 .. 60 °C<br>111 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**Email: info@procentec.com** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 30 Technical Data - 6A Power Module T1 (101-230010)

| Technical Data - 6A Power Module Type 1 (101-230010) | |
|---|---|
| **Backplane** | |
| Modules<br>Current consumption from the backplane<br>Compatible backplane units | 32 (all slots)<br>± 130 mA (465 mA max)<br>101-200011, 101-200012, 101-200023, 101-200024, 101-200027 |
| **Backplane power** | |
| Current<br>Maximum combined backplane current | **6 A**<br>*12 A* (provided by all inserted power modules) |
| **Power supply** | |
| Nominal supply voltage<br>Current consumption<br>Power<br>Reverse polarity protection<br>Redundant power supply | 12 .. 30 VDC<br>Max. 2 A @ 24 VDC<br>Max. 42 W<br>Yes<br>Yes |
| **Power supply connectors** | |
| Pins<br><br><br>Wire diameter (for the screw terminals)<br>Wire type | 1 = - (left)<br>2 = + (middle)<br>3 = Ground (right)<br>< 2.5 $mm^2$<br>Stranded or solid core |
| **LEDs** | |
| ERR ON<br>ERR + RUN OFF | Input voltage too low, or maximum current<br>No power supply connected |
| **Others** | |
| Head Station firmware<br>Dimensions<br>Operating temperature<br>Weight<br>MTBF | V1.265 and later<br>140 x 110 x 25 mm<br>0 .. 60 °C<br>125 g<br>To be defined |
| **PROCENTEC**<br>**Klopperman 16**<br>**2292 JD WATERINGEN (NL)** | **Tel.: +31-174-671800**<br>**Fax: +31-174-671801**<br>**info@procentec.com** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 31 Frequently asked questions / FAQ

- General -

**Are the Kits in the product list really required?**
NO, the Kits are just an easy step into the COMbricks world, because they contain all required components. You can also order all items separately; Head Station, repeater modules, I/O modules, etc. Kits are also cheaper than separate items.

Backplane

**How many modules can I insert in the backplane?**
COMbricks can handle 32 modules, but high speed modules can only be inserted in the first 10 sockets (repeater and fiber optic modules). If you only have 5 high speed modules, the rest of the sockets can be completed with regular modules (I/O modules).

**What is the "Backplane Network"?**
These are the 4 internal networks on the backplane that repeater modules utilize to transfer PROFIBUS messages transparently to other inserted repeater modules who are locked to the same network number. Each network can have its own masters, slaves and baudrate. They are completely isolated.
**http://www.youtube.com/watch?v=P3_gSC1pJO4**

**When I buy a module, is a backplane socket provided?**
YES, with every module a backplane socket is provided. If you require more sockets because of spare parts, an additional set can be purchased.

Installation

**What is the default IP address after purchase or reset?**
The default IP address is; **192.168.1.254**. This can be customized through the web server of the Head Station or the COMbricks Discovery Tool.

PROFIBUS PA Coupler Module

**How can I make the PA Coupler Module transparent for 500 kbps?**
You have to update the busparameters in the master. Here is a link to a table with recommended settings: **IMAGE**
Keep in mind that some configuration tools cannot handle the large Tslot values.

**I cannot make my PA module working. What are the steps to take?**
Please use the checklist below:
• Head Station type 1C (for the monitoring).
• At least 1 module with a DP master (RS 485 or Fiber Optic) or CommDTM class 2 master through the


© PROCENTEC 2014 - Copyright - all rights reserved

Head Station.
• At least 1 PA module.
• All involved modules on the same network number.
• After changing the network number, reset the COMbricks.

• Power the PA module (check the respective LED).
• If it is a floating power supply without ground (regular adapter), it is recommended to short the "-" and GND on the power supply connector of the PA module.

• Proper termination at the other end of the PA segment.
• In some cases the PA cable should also be more than 1 meter (same as RS 485).
• Verify "your" calculation of DC current with the current consumption stated in the web server (status screen).
• Verify the PA power supply voltage.

• Correct addresses of your PA devices.
• Adjust the busparameters in the master to the specific baudrate (http://www.procentec2.com/pics2/0018.jpg).
• Check the master in the Live List.
• Check the devices in the Live List.
• Check the PA oscilloscope signals.

ProfiTrace

**Do you need a constant PC connection to monitor the network?**
NO, This is a great feature for permanent monitoring. COMbricks contains a kernel and web server that works independently directly after power-up. Updates of the Live List, Statistics, Logging, Emailing, etc. are all carried out on its own initiative and can always be viewed.

**Do I need to install/buy monitoring software?**
NO, COMbricks is based on a web server. For the basic operation you only need a web browser. But if you are used to the ProfiTrace 2 software, you can stream data over Ethernet and keep working in your original software environment.

**What is the difference between ProfiTrace OE and regular ProfiTrace?**
OE stands for "Over Ethernet". It is the ProfiTrace core in COMbricks which visualizes all the information in a web server. The biggest difference is that ProfiTrace OE is permanently monitoring the installation and it does not require a constant PC connection.

**Where does it save monitoring data, logs and settings?**
The Head Station contains a uSD card on which all information is stored. By means of the web server or FTP the user can inspect and download the information. He can of course also take out the SD card and insert it in a PC.

**What is 'live data streaming' with ProfiTrace 2?**
Head Stations 1B and 1C have an integrated ProfiTrace that can be accessed with a web browser. The integrated ProfiTrace has some graphical and functional limitations compared to the powerful ProfiTrace 2 software. Live data streaming is a function within ProfiTrace that makes a connection with COMbricks over Ethernet and acts as if it works with a ProfiCore. The user can now use all the functionality of ProfiTrace 2 with the protocol data of 2 or 4 networks that COMbricks is capturing (Live List, statistics, message


© PROCENTEC 2014 - Copyright - all rights reserved

recording, triggering, searching, etc).

**We already have repeaters installed. How can we take advantage of COMbricks without disturbing the existing network?**
You can connect 1 channel of a COMbricks repeater module as a regular bus participant. Like a ProfiCore and ignoring the repeater functionality. Once a repeater channel is in contact with the cable/communication, ProfiTrace monitors telegrams.

**How many files does the automatic message recording triggering save?**
The automatic triggering saves 1000 files per network. Each file has its own name. When a new trigger takes place after 1000 files have already been saved, the oldest file is replaced by the new one (ring recording).

Repeater modules

**Are the COMbricks repeaters suitable for PROFIsafe networks?**
YES, especially in combination with the repeater redundancy makes COMbricks a perfect infrastructure component for PROFIBUS safety networks. Remote maintenance with ProfiTrace OE only makes it better.

**Can COMbricks be used in MPI networks?**
YES, MPI is using PROFIBUS FDL telegrams with its own user data implementation. Every COMbricks repeater and fiber optic coupler can interpret and forward MPI telegrams. Also the cabling rules are the same for MPI.

**How are repeater modules powered?**
All power is distributed over the backplane by the Head Station. The power to the Head Station is provided by 24V power connectors (redundant option).

**How can I remotely deactivate a repeater module during operation?**
Officially there is no shutdown function. What you can do is set the repeater network number by software (web server) instead of dipswitches. When you want to shut it down, change the assigned network number to a number that is not used. This will cause the repeater to be isolated from the rest.

**With a Head Stations 1B (ProfiTrace for 2 networks) can I still wire 4 networks divided over 10 repeater modules?**
YES, ProfiTrace OE on a 1B Head Station will monitor network 1 and 2. There is no link with the repeater modules which can be set to network 1, 2, 3 and 4.

**I have changed the dipswitches on the repeater modules. How can I actualize them in the system without removing the power on the Head Station?**
You can soft start the system with the nav button on the Head Station or in the Device Management menu of the web server. It is also possible to remove and insert the respective module.

**When a slot contains a 1 channel repeater module can I hot swap it with a 2 channel repeater module?**
YES, every time a module is inserted it is configured without looking at the past.


© PROCENTEC 2014 - Copyright - all rights reserved

**Is a 2 channel repeater module the same as a regular repeater?**
YES and NO, Of course you have 2 RS 485 sides like a regular repeater, but there is a 3rd channel going to the backplane to link up with the other inserted repeater modules. This means a 2 channel repeater module can also be compared with a 3 channel repeater, but the 3rd channel is not RS 485. Additional to this; the RS 485 channels can also be assigned to networks. Then it cannot be compared at all with a regular repeater.

**Is there an overview available how to connect the PROFIBUS cable with the repeater modules and when to switch on the on-board termination?**
This image illustrates the 4 configurations that we support:
**http://www.procentec2.com/pics2/0009.jpg**

In configuration A and C the cable starts at the repeater module. In configuration B and D the repeater module is in the middle of the cable.

Only in configuration A the on-board termination should be set to ON. With the other configurations the repeater module is in the middle of the segment or the termination is activated on the DB9 plug.


© PROCENTEC 2014 - Copyright - all rights reserved

# 32 Sales offices and distributors

**HEADQUARTERS**

PROCENTEC
Klopperman 16
2292 JD WATERINGEN
Netherlands
Tel.: +31-(0)174-671800
Fax: +31-(0)174-671801
Email: info@procentec.com
Internet: www.procentec.com

**ARGENTINA**

eFALCOM
Alcorta 2411
B1744- Moreno
Buenos Aires
ARGENTINA
Tel.: +54 237 46 31 151
Fax: +54 237 46 31 150
Email: santiago.falcomer@efalcom.com
Internet: www.efalcom.com.ar

**AUSTRALIA**

IS Systems Pty Limited
14 Laverick Ave., Tomago,
NSW, Australia, 2322
Tel.: +61 2 4964 8548
Fax: +61 2 4964 8877
Email: fritz.woller@issystems.com.au
Internet: www.issystems.com.au

Tyco Flow Control Pacific
1 Percival Road, Smithfield,
NSW, Australia, 2164
Tel.: +61 2 9612 2323
Fax: +61 2 9612 2324
Email: rkoenig@typac.com.au
Internet: www.profibuscentre.com.au

**BELGIUM**

Bintz Technics N.V.
Brixtonlaan 25,
1930 ZAVENTEM
Belgium
Tel.: +32 2 720 49 16
Fax: +32 2 720 37 50
Email: bloemen@bintz.be
Internet: www.bintz.be

**BRAZIL**

Westcon Instrument. Indl Ltda
Rual Alvaro Rodrigues, 257
São Paulo – SP
Brazil - CEP 04582-000
Tel.: +55 11 5561-7488
Fax: +55 11 5093-2592
Email: paolo@wii.com.br
Internet: www.wii.com.br

**CHILE**

RP Ingenieria Limitada
Tucapel 92 oficina 52
Concepción
Chile
Tel.: +56-(0)41-2469350
Fax: +56-(0)41-2522592
Email: rodrigopinto@rpingenieria.cl
Internet: www.rpingenieria.cl

**CHINA**

PROCENTEC Beijing
Room E-1115 WangJingYuan YouLeHui
ChaoYang
Beijing
CHINA
Tel.: +86(10)84766911 or 84787311
Fax: +86(10)84766722
Email: info@procentec.net
Internet: www.procentec.net

**CZECH REPUBLIC**

FOXON e-shop
Polní 367
460 01 Liberec 12
Czech Republic
Tel.: +420 484 845 555
Fax: +420 484 845 556
Email: foxon@foxon.cz
Internet: www.foxon.cz

**DENMARK**

ProSaiCon
Jernbanegade 23B
DK 4000 Roskilde
Denmark
Tel.: +45 70 20 52 01
Fax: +45 70 20 52 02
Email: hfj@prosaicon.dk
Internet: www.prosaicon.dk

**FINLAND**

Hantekno Oy
Kalliotie 2
FIN-04360 Tuusula
Finland
Tel.: +358 40 8222 014
Email:info@hantekno.com
Internet: www.hantekno.fi

**FRANCE**

AGILiCOM
Bâtiment B
1, rue de la Briaudière
Z.A. La Châtaigneraie
37510 BALLAN-MIRE
France
Tel.: +33 247 76 10 20
Fax: +33 247 37 95 54
Email: jy.bois@agilicom.fr
Internet: www.agilicom.fr

**GERMANY**

PROCENTEC GmbH
Benzstrasse 15
D-76185 Karlsruhe
Germany
Tel.: +49-(0)721 831 6630
Fax: +49-(0)721 831 66329
Email: info@procentec.de
Internet: www.procentec.de

**INDIA**

U L ELECTRODEVICES P LTD
NIRMAN CLASSIC ,
KATRAJ-KONDHWA ROAD,
KATRAJ, PUNE-411046
India
Tel.: +91-202 696 0050
Fax: +91-202 696 2079
Email: dileep.miskin@ulepl.com
Internet: www.ulepl.com

**IRELAND**

PROFIBUS Ireland
University of Limerick
National Technology Park, Plassey
LIMERICK, Ireland
Tel.: +353-61-202107
Fax: +353-61-202582
Email: info@profibus.ie
Internet: www.profibus.ie

**ISRAEL**

Instrumetrics Industrial Control
8 Hamlacha St.
New Industrial Zone
Netanya
42170 Israel
Tel.: +972-9-8357090
Fax: +972-9-8350619
Email: info@instrumetrics-ic.co.il
Internet: www.instrumetrics.com



© PROCENTEC 2014 - Copyright - all rights reserved

**ITALY**

C.S.M.T Gestione S.C.A.R.L.
via Branze n. 43/45
25123 BRESCIA
Italy
Tel.: +39 030 6595111
Fax: +39 030 6595000
Email: profibus@csmt.it
Internet: profibus.csmt.it

Genoa FIELDBUS Competence Centre
Via Greto di Cornigliano, 6R/38
16152 GENOVA
Italy
Tel.: +39 010 86 02 580
Fax: +39 010 65 63 233
Email: procentec@gfcc.it
Internet: www.gfcc.it

**JAPAN**

TJ Group
C/O Japanese PROFIBUS Organisation
West World Building 4F
3-1-6 Higashi-Gotanda,
Shinagawa-ku, TOKYO
Japan
Tel.: +81-3-6450-3739
Fax: +81-3-6450-3739
Email: info@profibus.jp

**KOREA**

Hi-PRO Tech. Co., Ltd.
#2802, U-Tower, 1029
Youngduk-dong, Giheung-gu
Yongin-Si, Kyunggi-do,
446-908 KOREA
Tel.: +82 82-31-216-2640
Fax: +82 82-31-216-2644
Email: chays@hiprotech.co.kr
Internet: www.profibus.co.kr

**LEBANON**

Industrial Technologies S.A.L (ITEC)
Point Center, Boulevard Fouad Chehab,
Sin El Fil
BEIRUT
Tel.: +961 1 491161
Fax: +961 1 491162
Email: sales@iteclb.com
Internet: www.iteclb.com

**NETHERLANDS**

PROCENTEC B.V.
Klopperman 16
2292 JD Wateringen
Tel.: +31-(0)174-671800
Fax: +31-(0)174-671 801
Email: info@procentec.com
Internet: www.procentec.com

**NORWAY**

AD Elektronikk AS
Boks 641
N-1401 SKI
Norway
Tel.: +47 64 97 60 60
Fax: +47 64 97 60 70
Email: kai@ade.no
Internet: www.ade.no

**POLAND**

INTEX Sp. z o.o.
ul. Portowa 4
44-102 Gliwice, Poland
Tel.: +48 32 230 75 16
Fax: +48 32 230 75 17
Email: intex@intex.com.pl
Internet: www.intex.com.pl

**ROMANIA**

S.C. SVT Electronics S.R.L.
Brăila 7
540331 Tg-Mure
Romania
Tel.: +40 365 809 305
Fax: +40 365 809 305
Email: sajgo.tibor@svt.ro
Internet: www.svt.ro

**SAUDI ARABIA**

asm establishment
Al-Zahra Dist. – Attas st.
cross section with helmy Kutby St.
Villa no.25
JEDDAH-21553
Tel.: +966 2 691 2741
Fax: +966 2 682 8943
Email: info@asmestablishment.com
Internet: www.asmestablishment.com

**SINGAPORE**

ISEP (S) Pte Ltd
Blk 3015A, #07-12,
Ubi Road 1,
Singapore 408705
Tel.: +65-6356 4237
Fax: +65-6844 4265
Email: stevenkee@ise-p.com
Internet: www.ise-p.com

**SLOVAKIA**

ControlSystem s.r.o.
Stúrova 4
977 01 BREZNO
Tel.: +421 486115900
Fax: +421 486111891
Email: jan.snopko@controlsystem.sk
Internet: www.controlsystem.sk

**SOUTH AFRICA**

IDX ONLINE CC
1 Weaver Street, Fourways
JOHANNESBURG
South Africa
Tel.: +27(11) 548-9960
Fax: +27(11) 465-8890
Email: sales@idxonline.com
Internet: www.idxonline.com

**SPAIN and PORTUGAL**

LOGITEK, S.A
Ctra. de Sant Cugat, 63 Esc. B Planta 1ª
Rubí (BARCELONA), 08191
Tel.: +34 93 588 67 67
Email: xavier.cardena@logitek.es
Internet: www.logitek.es

**SWEDEN**

P&L Nordic AB
Box 252,
S-281 23 HÄSSLEHOLM
Sweden
Tel.: +46 451 74 44 00
Fax: +46 451 89 833
Email: hans.maunsbach@pol.se
Internet: www.pol.se/profibus

**SWITZERLAND**

Hochschule für Technik und Informatik
PROFIBUS Kompetenzzentrum
Jlcoweg 1
CH-3400 BURGDORF
Switzerland
Tel.: +41 (0) 34 426 68 32
Fax: +41 (0) 34 426 68 13
Email: max.felser@bfh.ch
Internet: www.profitrace.ch

**TAIWAN**

Full Data Technology
6F., No.200, Gangqian Rd.,
Neihu District, Taipei City
114, Taiwan
Tel.: +886-2-87519941/9097
Fax: +886-2-87519533
Email: sales@fulldata.com.tw
Internet: www.fulldata.com.tw

**TURKEY**

Emikon Otomasyon
DES Sanayi sitesi 103 sokak B-7 blok No:16
Yukari Dudullu / Umraniye
Istanbul 34776
Turkey
Tel.: +90 216 420 8347
Fax: +90 216 420 8348
Email: tolgaturunz@emikonotomasyon.com
Internet: www.emikonotomasyon.com

**UNITED ARAB EMIRATES**

Synergy Controls
907, IT Plaza Silicon Oasis
DUBAI
Tel.: +971 4 3262692
Fax: +971 4 3262693
Email: sales@synergycontrols.ae


© PROCENTEC 2014 - Copyright - all rights reserved

**UNITED KINGDOM**

Verwer Training & Consultancy
5 Barclay Road
Poynton, Stockport
Cheshire SK12 1YY
Tel.: +44 (0)1625 871199
Email: andy@verwertraining.com
Internet: www.verwertraining.com

Hi-Port Software Limited
The Hub 2 Martin Close
Lee-on-Solent, Hampshire
PO13 8LG
Tel.: +44 (0)8452 90 20 30
Fax: +44 (0)2392 552880
Email: sales@hiport.co.uk
Internet: www.hiport.co.uk

iTech
Unit 1
Dukes Road
Troon, Ayrshire KA10 6QR
Tel.: +44 (0)1292 311 613
Fax: +44 (0)1292 311 578
Email: sales@itech-troon.co.uk
Internet: www.itech-troon.co.uk

Parkelect LTD
84 Dargan Road
Belfast
BT3 9JU
N. Ireland
Tel.: +44 2890 777743
Fax: +44 2890 777794
Email:jgillan@parkelect.co.uk
Internet: www.parkelect.co.uk

**UNITED STATES**

Grid Connect Inc.
1630 W. Diehl Road
Naperville, Illinois 60563
USA
Tel.: +1 630 245-1445
Fax: +1 630 245-1717
Email: sales@gridconnect.com
Internet:
www.gridconnect.com/procentec.html

**VIETNAM**

Bavitech Corporation
42 Truong Son Street
Ward 2, Tan Binh District
Ho Chi Minh City
Vietnam
Tel.: +84-8-3547 0976
Fax: +84-8-3547 0977
Email: hai.hoang@bavitech.com
Internet: www.bavitech.com


© PROCENTEC 2014 - Copyright - all rights reserved

# 33 Products and spare parts

| Component | Order code | Remarks |
|---|---|---|
| **Eco Monitoring Kit** | 101-200QBR | • Head Station type 1B<br>• 1CH repeater<br>• Fixed backplane unit |
| **Standard Monitoring Kit** | 101-200QBS | • Head Station type 1B<br>• Scope repeater<br>• Fixed backplane unit |
| **Advanced Monitoring Kit** | 101-200Q4CS | • Head Station type 1C<br>• 4pcs Scope repeater<br>• Fixed backplane unit |
| **Fiber Optic Kit** | 101-200QQAFR | • Head Station type 1A<br>• 1CH repeater<br>• 2CH FO coupler<br>• Fixed backplane unit |
| **RS 485-IS Monitoring Kit** | 101-200QBX | • Head Station type 1B<br>• RS 485-IS module<br>• Fixed backplane unit |
| **RS 485-IS Repeater Monitoring Kit** | 101-200QBXR | • Head Station type 1B<br>• 1CH repeater<br>• RS 485-IS module<br>• Fixed backplane unit |
| **PA Monitoring Kit** | 101-200QBP | • Head Station type 1B<br>• PA coupler module<br>• Fixed backplane unit |
| **PA Coupler Monitoring Kit** | 101-200QBPR | • Head Station type 1B<br>• 1CH repeater<br>• PA coupler module<br>• Fixed backplane unit |
| | | |


© PROCENTEC 2014 - Copyright - all rights reserved

| Component | Order code | Remarks |
|---|---|---|
| **Head Station Type 1C** | 101-20011C | **- ProfiTrace OE on 4 networks**<br>- 2 GB SD card<br>- Ethernet port<br>- Redundant power supply<br>- Drives 32 modules<br>- CommDTM<br>- Backplane unit<br>**- Streaming in ProfiTrace 2**<br>**- OPC in ProfiTrace 2** |
| **Head Station Type 1B** | 101-20011B | **- ProfiTrace OE on 1 network**<br>- 2 GB SD card<br>- Ethernet port<br>- Redundant power supply<br>- Drives 32 modules<br>- Backplane unit included<br>**- Streaming in ProfiTrace 2**<br>**- OPC in ProfiTrace 2** |
| **Head Station Type 1A** | 101-20011A | **- Basic web server**<br>- 2 GB SD card<br>- Ethernet port<br>- Redundant power supply<br>- Drives 32 modules<br>- Backplane unit included<br>- **NO ProfiTrace OE** |
| | | |
| **SCOPE Repeater** | 101-201210 | - 1 RS 485 channel repeater with oscilloscope<br>- Same specs as regular 1 channel repeater<br>- 192 MS/s sample rate<br>- 50 mV resolution<br>- -6.436..6.436 V<br>- Backplane unit included |
| **2 Channel Repeater** | 101-201102 | - 2 RS 485 channels<br>- 12 Mbps<br>- 31 devices per channel<br>- Screw terminals<br>- DB9 connector<br>- Redundancy<br>- Termination<br>- Backplane unit included |


© PROCENTEC 2014 - Copyright - all rights reserved

| Component | Order code | Remarks |
|---|---|---|
| **1 Channel Repeater** | 101-201101 | - 1 RS 485 channel<br>- 12 Mbps<br>- 31 devices per channel<br>- Screw terminals<br>- DB9 connector<br>- Redundancy<br>- Termination<br>- Backplane unit included |
| **2 Channel Fiber Optic Module** | 101-201510 | - 2 fiberoptic channels<br>- 3 km cable length<br>- 2 x 2 ST connectors<br>- Redundancy<br>- Backplane unit included |
| **PA Coupler Module** | 101-201610 | - transparent up to 1.5<br>- trunk voltage up to 27 V<br>- trunk current 500 mA<br>- auto termination (in coupler mode)<br>- Backplane unit included |
| **SALT Repeater Module** | 101-201710 | - Adjustable termination: 94..940 Ohm<br>- Adjustable idle voltage: 0..5 V<br>- Same specs as regular Scope Repeater<br>- Backplane unit included |
| **RS 485-IS Barrier Module** | 101-201410 | - 1 RS 485-IS channel repeater with oscilloscope<br>- Suitable for Zone II (2) G [Ex ia Gb] IIC<br>- 192 MS/s sample rate<br>- Backplane unit included |
| **PROFINET Device Module PND-001** | 101-220110 | - Couples up to 10 networks (PB/PN)<br>- Conformance class B<br>- RT_CLASS_1<br>- Backplane unit included |
| **PROFIBUS Slave Module PBS-001** | 101-220210 | - Couples up to 10 networks (PB/PN)<br>- Remote I/O, digital and relay contacts<br>- Auto baudrate detect<br>- Backplane unit included |
| **4 Channel Relay Module** | 101-210210 | - 5 A - 230 VAC<br>- Backplane unit included |


© PROCENTEC 2014 - Copyright - all rights reserved

| Component | Order code | Remarks |
|---|---|---|
| **8 Channel Digital Out** | 101-210110 | - 0.5 A - 24 VDC<br>- Backplane unit included |
| **8 Channel Digital In** | 101-210010 | - 3 .. 32 VDC<br>- Backplane unit included |
| **Power Module** | 101-230010 | - Provides 6 A to the backplane<br>- Backplane unit included |
| | | |
| **Fixed Backplane**<br>**7 Modules** | 101-200027 | - Fits: 1 Head Station and 6 regular modules<br>- Extendible with standard backplane units<br>- Improved durability |
| **Fixed Backplane**<br>**4 Modules** | 101-200024 | - Fits: 1 Head Station and 3 regular modules<br>- Extendible with standard backplane units<br>- Improved durability |
| **Fixed Backplane**<br>**3 Modules** | 101-200023 | - Fits: 1 Head Station and 2 regular modules<br>- Extendible with standard backplane units<br>- Improved durability |
| **Fixed Backplane**<br>**2 Modules** | 101-200012 | - Fits: 1 Head Station and 1 regular module<br>- Extendible with standard backplane units<br>- Improved durability |
| **Backplane Units**<br>**5-pack** | 101-200011 | - Pack of 5 pieces<br>- Suitable for all regular modules<br>- **NOT for Head Stations** |


© PROCENTEC 2014 - Copyright - all rights reserved

# 34 Glossary

| | |
|---|---|
| Address | Unique number of a device connected to the network. With PROFIBUS this can be 0 to 126. 127 is a broadcast address. |
| Analyzer | Software tool to observe the protocol traffic. Combi-Analyzers can also inspect the signal quality.<br>Other term: Bus Monitor.<br>Example: ProfiTrace. |
| Bit Time (TBit) | To help simplify timing calculations, it is convenient to normalize the time units. One Bit Time is the time it takes to transmit one bit and is the reciprocal of the baudrate and is calculated as follows; TBit = 1 (bit) / baudrate (bps).<br>Examples:<br>12 Mbps --> TBit = 83 ns<br>1,5 Mbps --> TBit = 667 ns |
| C | Capacitance. |
| Class 1 master | A class 1 master is normally a PLC or DCS system. The class 1 master handles the cyclical Data Exchange with the slaves assigned to it. |
| Class 2 master | A class 2 master is usually a laptop or programming console that is provided for commissioning, maintenance or diagnostic purposes. |
| Data Exchange | The state of a slave after parameterization and configuration has been completed, in which it cyclically exchanges I/O data with the master. Normally the slave stays forever in Data Exchange until the bus communication or device are stopped. |
| DGND | Digital Ground. |
| DIN | German Institute for Standardization (www.din.de). |
| DNS | Domain Name Service<br>When COMbricks is sending an e-mail, it uses a DNS server to look up the domain name it is trying to access and convert it to an IP address. COMbricks uses a default DNS server, but if your email server does not support this one, you can enter an alternative DNS server. |
| DP-V0 | DP-V0 is the basic stage of the PROFIBUS DP communication protocol. DP-V0 devices (master and slaves) perform the following basic functionalities:<br>- Cyclic exchange of I/O data between controlling and slave devices<br>- Device, Identifier (module) and Channel related Diagnosis<br>- Parameterization of DP-slaves<br>- Configuration of DP-slaves |


© PROCENTEC 2014 - Copyright - all rights reserved

| | |
|---|---|
| DP-V1 | DP-V1 is the first extension of PROFIBUS DP-V0. DP-V1 devices comply with the following features:<br>- Device related diagnosis is replaced by status and alarms.<br>- The first three octets of the user parameterization data are standardized.<br>Optionally these devices may support:<br>- Acyclic communication (MS1, MS2).<br>- If alarms are used, MS1 is supported. |
| DP-V2 | DP-V2 is the second stage of extension of PROFIBUS DP after DP-V1. DP-V2 devices shall comply with the following features:<br>- Data Exchange Broadcast (DxB) for slave to slave communication (publisher/subscriber principle).<br>- Isochronous Mode (time tick synchronized operating slaves, e.g. drives)<br>- Up- and/or download of Load Region Data (domains)<br>- Clock Control (synchronization within slaves) and Time Stamping<br>- Redundancy. |
| Drop cable | See *Spur line*. |
| Electromagnetic Compatibility | See *EMC*. |
| EMC | The extent to which an electric or electronic device will tolerate electrical interference from other equipment (immunity), and will interfere with other equipment. Within the European Community as well as in other countries it is regulated by law that electric and electronic components and equipment comply with basic standards such as IEC 61000-6-2 or IEC 61326 or corresponding individual product standards. |
| FDL | Fieldbus Datalink Layer. Layer 2 of PROFIBUS. |
| Flashing | Function in the Discovery Tool that will blink the LEDs of a selected COMbricks. Flashing is a support feature that gives the user a visual confirmation about the installed location of the COMbricks. |
| FTP | File Transfer Protocol<br>Allows a user to transfer files between two computers. The FTP client program runs on one computer and a server program on the other. FTP is primarily for transferring files but can be used to perform other functions: creating directories, removing directories, listing files, etc. It is TCP based. |
| GSD file | Generic Station Description.<br>It is provided by the device manufacturer and contains a description of the PROFIBUS DP/PA device. GSD files provide a way for an open configuration tool to automatically get the device characteristics. |
| Head Station | The Head Station is the primary element of COMbricks and has to be inserted in the most left slot of the fixed backplane socket. It schedules the interaction between all modules and provides data storage and an Ethernet interface for the user. |


© PROCENTEC 2014 - Copyright - all rights reserved

| | |
|---|---|
| HSA | Highest Station Address<br>The highest address to which the master will look for new masters. This is done with the FDL Status message. It has nothing to do with the configured slaves! Default value is 126, but the end user can decrease it to a lower value. We recommend leaving it on 126 in order to display not configured slaves in the Live List. This value does not influence the I/O cycle time of the network. |
| Hub | A Hub refreshes a signal and passes the information on to all nodes which are connected to the Hub. Data frames which were received on one port are transferred to all the other ports (chicken foot topology). |
| Ident Number | The primary slave device identification is an Ident Number. This is a unique 16 bits number assigned by the PNO. It is stored within the device and defined in the corresponding GSD file. In addition it is part of the GSD file name. At runtime the Ident Number is used within the;<br>- Set slave address procedure<br>- Parameterization telegram (byte 5 + 6)<br>- Standard part of a diagnosis message (byte 5 + 6)<br>The Ident Number can be retrieved from a device. Its main purpose is to make sure that a GSD file and configuration/parameterization data between master class 1 and its slave are matching. |
| LED | Light Emitting Diode<br>Indicators on devices to inform he user of its status. |
| Live List | The Live List is a matrix that lists all the available devices. It is directly visible which devices are 'troublemakers'. With different background colours the status of the devices is displayed. The Live List can also generate the product name of the devices when a diagnostic message is captured (synchronized with the GSD library). |
| Module | A card that can be inserted in the backplane of COMbricks.<br>Examples of modules: repeaters, DP slaves or I/O cards. |
| MPI | Multiple Protocol Interface.<br>Protocol defined by Siemens which uses the layer 1 and 2 of PROFIBUS (FDL). |
| OE | *See ProfiTrace OE.* |
| PA | *See PROFIBUS PA.* |
| PB | PROFIBUS. |


© PROCENTEC 2014 - Copyright - all rights reserved

| | |
|---|---|
| PROFIBUS DP | Acronym for "PROFIBUS for Decentralized Peripherals". Specification of an open fieldbus system with the following characteristics:<br>- Polling master-slave-system (cyclic communications, MS0)<br>- Flying masters with robin round token passing coordination (MM)<br>- Connection based (MS1) and connectionless (MS2, MS3) acyclic communication between masters and slaves<br>Options (e.g.):<br>- Data exchange broadcast (DXB), i.e. slave to slaves communication<br>- Isochronous mode of slaves<br>- Clock synchronization<br>- Redundancy<br>PROFIBUS DP is standardized within IEC 61158 and IEC 61784, communication profile families 3/1 and 3/2<br>The term "PROFIBUS DP" also is a synonym for the RS485 based deployments within factory automation. |
| PROFIBUS PA | Acronym for "PROFIBUS for Process Automation". This is an application profile based on PROFIBUS DP independent from the physical profiles (RS485, Fiber Optics, MBP). The requirements of continuous manufacturing are covered within the application profile "PA-Devices" and the extension MBP to the physical profiles. |
| ProfiTrace OE | ProfiTrace Over Ethernet.<br>A ProfiTrace core which has been implemented in COMbricks that permanently monitors the installation through the repeaters and visualizes the information in a web server. |
| Reflection | Part of the original signal that is transmitted back along the cable. It corrupts the original signal. |
| Repeater | Active physical layer device that receives and retransmits all signals over a different port to increase the distance and number of devices for which signals can be correctly transferred for a given medium. |
| SD card | Secure Digital (SD) is a non-volatile memory card format developed by the SD Card Association for use in portable devices, like: cameras, phones and game players. The SDHC (High-Capacity) card family has a capacity of 4 GB to 32 GB. |
| Spur line | A cable attached to a bus segment with a T-connection . Spurs are not recommended with PROFIBUS DP. They are prohibited with 12 Mbps and PROFIsafe operations. German term is "Stichleitung". |
| Stub line | See *Spur line*. |
| TBit | *See Bit Time.* |


© PROCENTEC 2014 - Copyright - all rights reserved

| | |
|---|---|
| TELNET | TELetype NETwork<br>Is a network protocol used to make raw-TCP sessions (terminal-like access). Basically keyboard commands typed by a remote user can cross the network and become input for the server. On many operating systems the TELNET client program is available to communicate without specialized client software. It was developed in 1969. |
| Termination | A (powered) resistor network at both ends of a segment to prevent reflections (with PROFIBUS DP the termination has to be powered). |
| Topology | In a communications network, the pattern of interconnection between network nodes; e.g. bus, ring, star configuration. |


© PROCENTEC 2014 - Copyright - all rights reserved

# 35 About PROCENTEC

**PROCENTEC is an independent company, concentrating all its products and services on PROFIBUS and PROFINET technology. Our main business is the export of in-house developed automation products through our worldwide distributor network. PROCENTEC is also providing vendor independent training and support to end-users.**

We are an international PROFIBUS and PROFINET Competence/Training Center with all the required expertise available to realize our projects and services. We have the availability of some real experts whose knowledge makes us unique in the world. Because of our international recognition we are often contracted and offer a wide range of commercial services (consultancy, training, commissioning, maintenance and troubleshooting). PROCENTEC has 2 offices; the headquarters is based in The Netherlands and a sales office is located in Germany.

**Testlab**
PROCENTEC runs 1 of the 8 accredited test laboratories for the certification of PROFIBUS devices. In our laboratory vendors can have their products tested on PROFIBUS compatibility.

**Product development and export**
We develop in house PROFIBUS and PROFINET products that are being exported through our worldwide distributor network. Especially in the area of maintenance tools we have gained a unique market position.

**Democenter**
We have a demonstration facility, which is used for support, training, demonstrations, engineering and trade fairs. It consists of more than 250 devices from more than 40 vendors.

**Training and Education**
PROCENTEC is very successful with its training program. Up to now, more than 4000 participants have received a certificate. The costs incurred for engineering, assembly, commissioning and maintenance always play a key role when choosing a fieldbus. We train our participants that the implementation of PROFIBUS and PROFINET can help to cut costs in all areas. Our practical experience is the key factor! PROCENTEC offers different types of PROFIBUS and PROFINET training modules which are organised on a regular basis.

PROCENTEC is a professional organisation, which is involved in PROFIBUS and PROFINET technology 24-hours a day. It has the availability of experts who are constantly deployed worldwide. Not only is the tried and tested automation technology ideal for the use in both Factory and Process automation, but support is also ensured through the products and services of PROCENTEC.

**www.procentec.com**


© PROCENTEC 2014 - Copyright - all rights reserved

# 36 Certificates

Certificate of Compliance

This certificate is issued under the conditions as described in the test report as mentioned below

| | |
|---|---|
| Certificate number: | 10C01036CRT02 |
| Product name: | COMbricks |
| Model number: | -- |
| Serial number: (Product identification) | COMbricks head station: SN203, COMbricks 2Ch Repeater: SN101 |
| Manufacturer: | Procentec<br>Turfschipper 41<br>2292 JC WATERINGEN<br>The Netherlands |
| Measurements carried out on behalf of: | Procentec<br>Turfschipper 41<br>2292 JC WATERINGEN<br>The Netherlands |
| Applicant's representative: | Mr. M. de Brabander |
| In the capacity of: | Manufacturer |
| Date of measurement: | 2010 November, 4,5 |
| The measurement results are laid down in report: | 10C01036RPT02 |
| The product has been examined according to [1]: | Emission: EN 55022 (2006) + A1 (2007), class A<br>Immunity: EN 55024 (1998) + A1 (2001) + A2 (2003) |

[illegible] advies, research & EMC Consultancy B.V.
Vijzelmolenlaan 7 - NL-3447 GX Woerden
The Netherlands
Tel: +31 (0)348 430 979
Fax: +31 (0)348 430 645
Internet: www.dare.nl
E-mail: info@dare.nl

The Standard for EMC- & Radio, Automotive and Electrical Safety

DARE!!
Consultancy

D. van der Vlugt
Director

Woerden, 2011 March, 15

[1] Has been found in compliance with the harmonised standards under the EMC directive 2004/108/EC



© PROCENTEC 2014 - Copyright - all rights reserved

# Certificate of Compliance

**This certificate is issued under the conditions as described in the test report as mentioned below**

| | |
|---|---|
| **Certificate number:** | **10C01037CRT02** |
| **Product name:** | **COMbricks** |
| **Model number:** | **--** |
| **Serial number:** (Product identification) | **COMbricks head station: SN203, COMbricks 2Ch Repeater: SN101** |
| **Manufacturer:** | **Procentec<br>Turfschipper 41<br>2292 JC WATERINGEN<br>The Netherlands** |
| **Measurements carried out on behalf of:** | **Procentec<br>Turfschipper 41<br>2292 JC WATERINGEN<br>The Netherlands** |
| **Applicant's representative:** | **Mr. M. de Brabander** |
| **In the capacity of:** | **Manufacturer** |
| **Date of measurement:** | **2010 November, 4,5** |
| **The measurement results are laid down in report:** | **10C01037RPT02** |
| **The product has been examined according to [1]:** | **Emission: 47 CFR 15, class A** |

ajestra advies, research & EMC Consultancy B.V.
Vijzelmolenlaan 7 - NL-3447 GX Woerden
The Netherlands
Tel: +31 (0)348 430 979
Fax: +31 (0)348 430 645
Internet: www.dare.nl
E-mail: info@dare.nl

The Standard for EMC- & Radio Automotive and Electrical Safety

Consultancy

D. van der Vlugt
Director

Woerden, 2011 March, 15

[1] *Has been found in compliance with the harmonised standards under the EMC directive 2004/108/EC*



© PROCENTEC 2014 - Copyright - all rights reserved

QualityMasters
ISO Certificering

certificate

QualityMasters hereby declares that

**Procentec B.V.**
Wateringen

has a management system that meets the requirements of the standard

**NEN-EN-ISO 9001:2008**

for the scope

Providing training courses, technical support, product development and the exploitation of the test laboratory.

| | |
|---|---|
| Date of original approval | 10-02-2003 |
| Date of issue | 10-04-2013 |
| Valid until | 10-02-2016 |
| Certificate number | NL 6313uk |

On behalf of Stichting QualityMasters,

N.B. The failure to meet the conditions as set forth in the certification agreement, or non-compliance with the given standard and/or guidelines, may lead to the suspension or cancellation of the certificate.
This certificate remains the property of Stichting QualityMasters, Nieuwland Parc 157, 3351 LJ Papendrecht.



© PROCENTEC 2014 - Copyright - all rights reserved

PI
PROFIBUS • PROFINET

## Certificate
## for a PI Competence Center

PI confirms that

**PROCENTEC**
**Dennis van Booma**
**Turfschipper 41**
**2292 JC Wateringen**
**THE NETHERLANDS**

is a fully accredited PI Competence Center for
PROFIBUS basic
PROFIBUS PA.

This certificate is granted according to the Quality of Services Agreement for PI Competence Centers and is valid until December 31, 2013.

Peter Wenzel
(Official in Charge)

Chairmen of PI

(Jörg Freitag, Chairman)

(Michael J. Bryant, Deputy Chairman)

PROFIBUS®



© PROCENTEC 2014 - Copyright - all rights reserved

PI PROFIBUS • PROFINET

# Certificate

**Authorization as PI Test Laboratory for PROFIBUS**

PROFIBUS Nutzerorganisation e.V. accepts
**PROCENTEC**
**Turfschipper 41**
**2292 JC Wateringen**
**The Netherlands**

as authorized PI Test Laboratory for:

**PROFIBUS Slave Devices**

**PA Profile Devices**

The authorization is based on the assessment dated March 4, 2011, and the related assessment report.

The execution of the tests aimed in the PROFIBUS certification shall be conform to the PROFIBUS Standard and the valid guidelines.

This authorization is valid until December 31, 2012.

(Official in Charge)

Board of PROFIBUS Nutzerorganisation e. V.

(J. Freitag) (K.-P. Lindner)

PROFIBUS®



© PROCENTEC 2014 - Copyright - all rights reserved

PROFIBUS • PROFINET

# Certificate

PROFIBUS Nutzerorganisation e.V. grants to

**PROCENTEC**
**Turfschipper 41, 2292JC Wateringen, The Netherlands**

the Certificate No: **Z01776** for the PROFIBUS Device:

| | |
|---|---|
| **Model Name:** | **PBS_001** |
| **Revision:** | **V2.1; SW/FW: Version 2.1; HW: Version 1.3** |
| **GSD:** | **PROC696F.GSD, File Version: 18-07-2013** |

This certificate confirms that the product has successfully passed the certification tests with the following scope:

| | | |
|---|---|---|
| ☑ | DP-V0 | MS0, Sync, Freeze, Fail_Safe, Set_Slave_Add |
| ☑ | Physical Layer | RS485 |

| | |
|---|---|
| Test Report Number: | **PCN174-DPS-02** |
| Authorized Test Laboratory: | **PROCENTEC, Wateringen, The Netherlands** |

The tests were executed in accordance with the following documents:
"Test Specifications for PROFIBUS DP Slaves, Version 3.09, September 2008".
This certificate is granted according to the document:
"Framework for testing and certification of PROFIBUS and PROFINET products".
For all products that are placed in circulation by August 20, 2016 the certificate is valid for life.

(Official in Charge)

Board of PROFIBUS Nutzerorganisation e. V.

(Karsten Schneider)

(K.-P. Lindner)

PROFIBUS®



© PROCENTEC 2014 - Copyright - all rights reserved

PROFIBUS • PROFINET

# Certificate

PROFIBUS Nutzerorganisation e.V. grants to

**PROCENTEC**
**Turfschipper 41, 2292JC Wateringen, The Netherlands**

the Certificate No: **Z10500** for the PROFINET IO Device:

| | |
|---|---|
| Model Name: | **PND-001** |
| Revision: | **V1.0.0; SW/FW: V1.1.0; HW: 1** |
| Identnumber: | **0x4000; 0x0001** |
| GSD: | **GSDML-V2.25-PROCENTEC-COMbricks PND_001-20120831.xml** |
| DAP: | **DIM 1- DIM 10, Module ID 0x0001F900 - 909 together with PND-001, Module ID 0x00010500** |

This certificate confirms that the product has successfully passed the certification tests with the following PROFINET scope:

| | |
|---|---|
| ☑ Hardware | Auto_Negotiation, Auto_Polarity, Auto_Crossover |
| ☑ Conformance Class B | RT_CLASS_1, RTA, LLDP, SNMP, MIB-II, LLDP-MIB |

Test Report Number: **PN194-1**
Authorized Test Laboratory: **SIEMENS AG, Fürth, Germany**

The tests were executed in accordance with the following documents:
"Test Specifications for PROFINET IO devices, Version 2.2.4 from December 2010" and
"Test Cases for PN-Tester for PROFINET IO devices, Version 2.2.4.16.21".
This certificate is granted according to the document:
"Framework for testing and certification of PROFIBUS and PROFINET products".
For all products that are placed in circulation by September 06, 2015 the certificate is valid for life.

(Official in Charge)

Board of PROFIBUS Nutzerorganisation e. V.

(Karsten Schneider)

(K.-P. Lindner)

PROFI NET



© PROCENTEC 2014 - Copyright - all rights reserved

# 37 Revision history

| |
|---|
| **Version 5.3.1**<br>- New paragraph 9.4<br>- Updated chapter: ‘PA module’<br>- Updated chapter: ‘Tips and Tricks’<br>- Updated chapter: ‘Sales offices and distributors’ |
| **Version 5.3.2**<br>- Added warning to paragraph 3.4 and 3.5<br>- Updated chapter: Technical Data PA Module<br>- Minor textual changes |
| **Version 5.4.0**<br>- Added paragraph ‘Device Management’<br>- Changed PROCENTEC address<br>- Updated chapter: ‘Sales offices and distributors’ |


© PROCENTEC 2014 - Copyright - all rights reserved

# 38 Next versions

**Fiber Optic chapter:**
- Delay time example tables

**New chapter:**
- RS 485 SALT repeater module
- Backplane structure
- Commissioning Checklist; Channel list, LEDs, Backplane current

**Installation:**
- Commissioning (channel list, module status, LEDs)
- Technical drawings of the COMbricks

**Others:**
- New images on the cover


© PROCENTEC 2014 - Copyright - all rights reserved

# 39 Notes


© PROCENTEC 2014 - Copyright - all rights reserved

# Other PROCENTEC products

**PROFINET Cable Tester**

- ✓ Suitable for 4- and 8-wire PROFINET and regular Ethernet cables
- ✓ Suitable for straight and 90°, metal or plastic PROFINET plugs
- ✓ Tests cable shielding
- ✓ Detects short circuits, wire breaks, swaps, miswiring and split pairs
- ✓ Large LCD clearly indicates the test results
- ✓ 150 hours on one 9 V battery
- ✓ Operating temperature: 0 to 50 °C
- ✓ Just 1-key-press to start continuous testing
- ✓ It can also test telephone and coax cable

**www.profinetcabletester.com**

**Compact PROFIBUS Repeater**

- ✓ Single channel PROFIBUS repeater
- ✓ Transparent
- ✓ Increased signal strength
- ✓ 12 Mbps
- ✓ Auto baudrate detection
- ✓ Redundant power supply
- ✓ Digital glitch filtering
- ✓ No limit in cascading
- ✓ Integrated switchable termination
- ✓ Diagnostic LEDs
- ✓ DB9 connector for measurements
- ✓ **IP 20 with DIN-rail mounting**

**www.procentec.com/profihub/b1/en**

# Other PROCENTEC products

## ProfiHub B5

- ✓ 5 Isolated channels
- ✓ Transparent
- ✓ Increased signal strength
- ✓ 31 devices per channel
- ✓ 12 Mbps
- ✓ 1200 m spur line length
- ✓ No address required
- ✓ Integrated switchable termination
- ✓ LEDs to indicate termination is ON
- ✓ Screw terminals and DB9 connectors
- ✓ IP 20 with DIN-rail mounting

## ProfiHub A5

- ✓ 5 Isolated channels
- ✓ Transparent
- ✓ Increased signal strength
- ✓ 31 devices per channel
- ✓ 12 Mbps
- ✓ 1200 m spur line length
- ✓ No address required
- ✓ Integrated switchable termination
- ✓ IP 65 classification

**www.procentec.com/profihub**

**PROCENTEC**
**Klopperman 16**
**2292 JD WATERINGEN**
**The Netherlands**

**Tel.: +31-174-671800**
**Fax: +31-174-671801**
**info@procentec.com**
**www.procentec.com**